
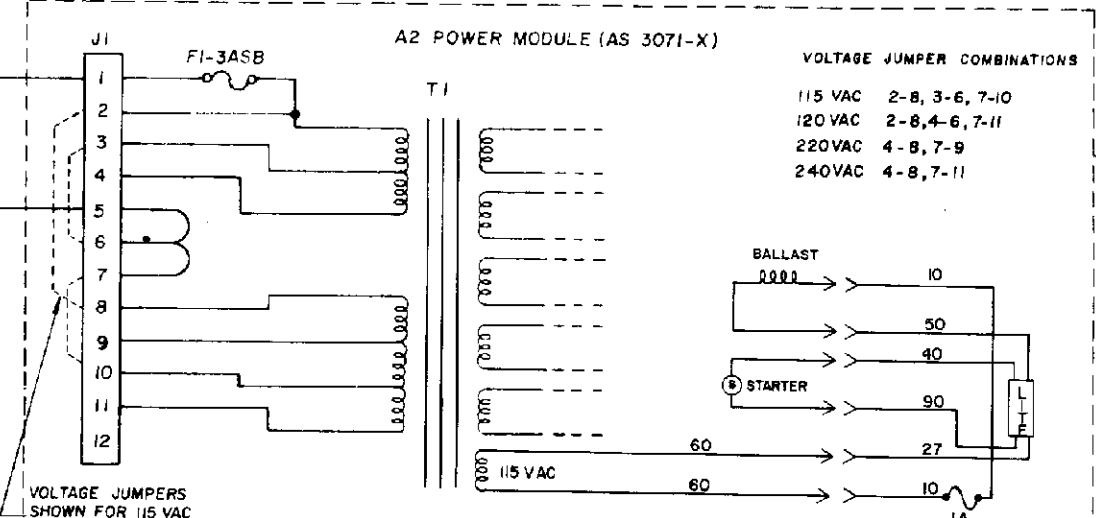



- NOTES: (CAUTION)
1. USE BALLY PART NO. E-713 FOR 115-120 VAC.
 2. USE BALLY PART NO. E-713-1 FOR 220-240 VAC.
 3. * INDICATES AID TEST POINT.

TO	J1 PIN	TO	J1 PIN
A4J3-9	1	A4J3-3	11
A4J3-10	2	A2J2-4	15
A4J3-11	3	A3J2-8	16
A4J3-12	4	A2J2-6	17
A4J3-13	5	A2J2-3	18
A4J3-14	6	A4J3-1	19
A4J3-15	7	A3J2-7	20
A4J3-16	8	SPEAKER	9
A4J3-2	10	A14J2-1	12
DOOR PLUG		A14J2-2	13

A7 CABINET ASS'Y. WIRING
NOTE: DIODES ARE IN4004.

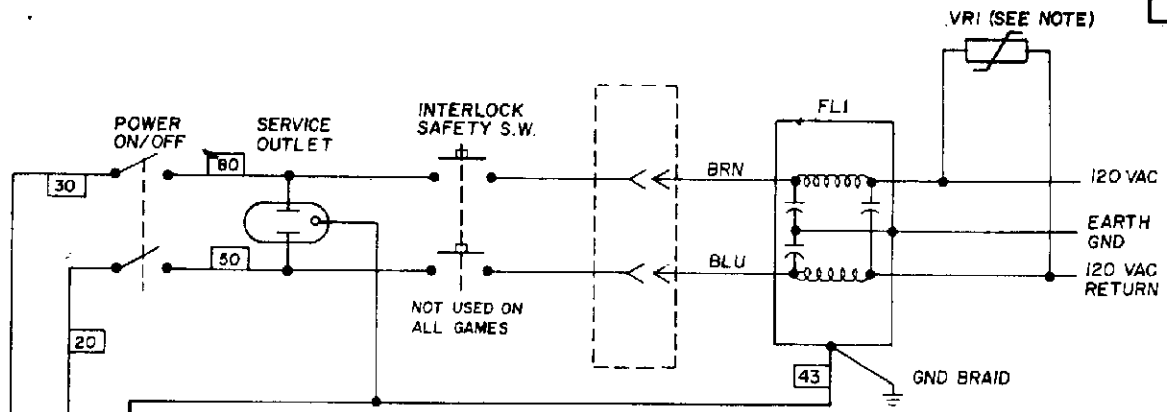


- A14J2-1
- REMOTE VOLUME CONTROL WIPER
- A2J2-4
- A3J2-5
- A4J3-3
- A4J3-15
- A4J3-16
- A3J2-2
- A3J2-1
- A2J2-2

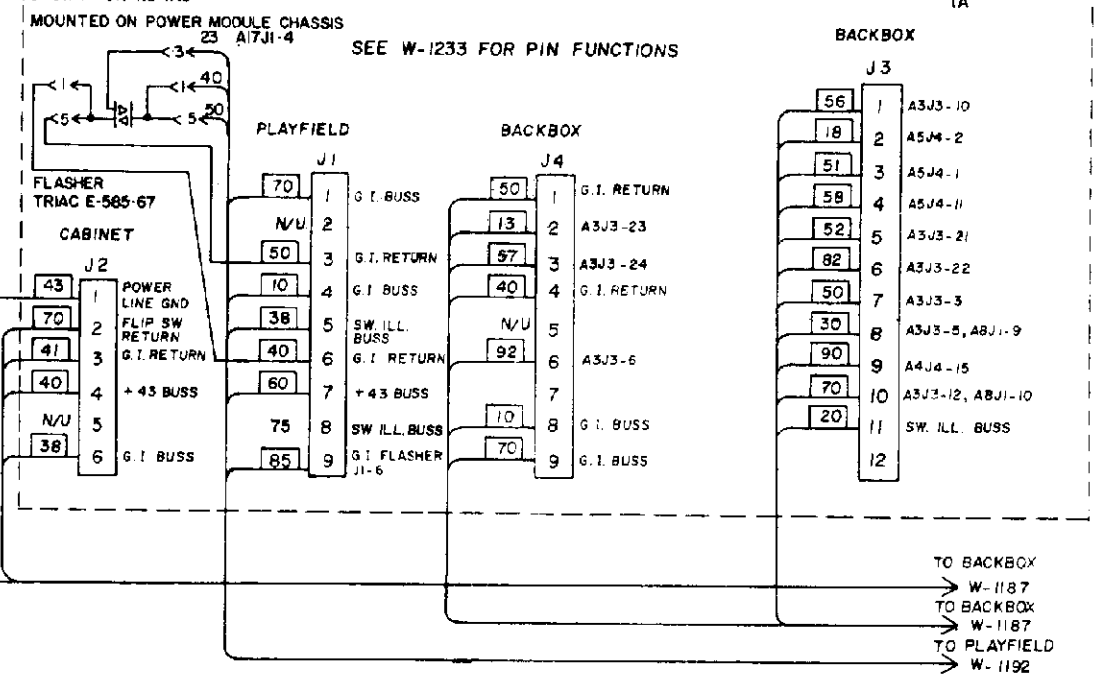

04, (E-587-6)


<p>ALL DESIGN OPERATIONAL AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MANUFACTURING CORP. CHICAGO, ILL. THIS INFORMATION IS INCLUDED IN CONFIDENCE AND IS NOT TO BE COPIED REPRODUCED RELEASED TO OR DISSEMINATED BY OTHER PARTS OF AN UNCLE WITHOUT THE EXPRESS CONSENT OF THE OWNERS. THE PRINT IS LOANED AND MUST NOT BE USED IN ANY MANNER DISSEMINATED TO THE INTEREST OF THE OWNERS AND MUST BE RETURNED ON DEMAND.</p>			
<p>REMOVE ALL BURRS</p> <p>TOLERANCES UNLESS OTHERWISE SPECIFIED</p> <p>FRACTIONS - 1/16</p> <p>DECIMALS - .001</p> <p>EXCEPT HOLE DIA'S</p> <p>ANGLES</p> <p>DO NOT SCALE DRAWING</p>	<p>DR BY: FC</p> <p>DATE: 3-82</p> <p>CHK BY: SD</p> <p>DATE: 4-25-82</p> <p>APP'D BY: SD</p> <p>DATE: 4-1-82</p> <p>FINISH: 100</p> <p>HARDENING: 100</p>	<p>Bally MANUFACTURING CORP.</p> <p>2640 BELMONT AVENUE</p> <p>CHICAGO, ILLINOIS</p> <p>#1283</p> <p>DIE SIZE: " C.C. FT PERM .LBS PERM</p>	<p>ASSEM NO USED</p> <p>SCA</p>
<p>NO. LET CHANGE DATE BY</p>	<p>WIRING DIAGRAM - CABINET</p> <p>MATERIAL: PAC MAN</p>	<p>PART NO: W-1186-20c</p>	

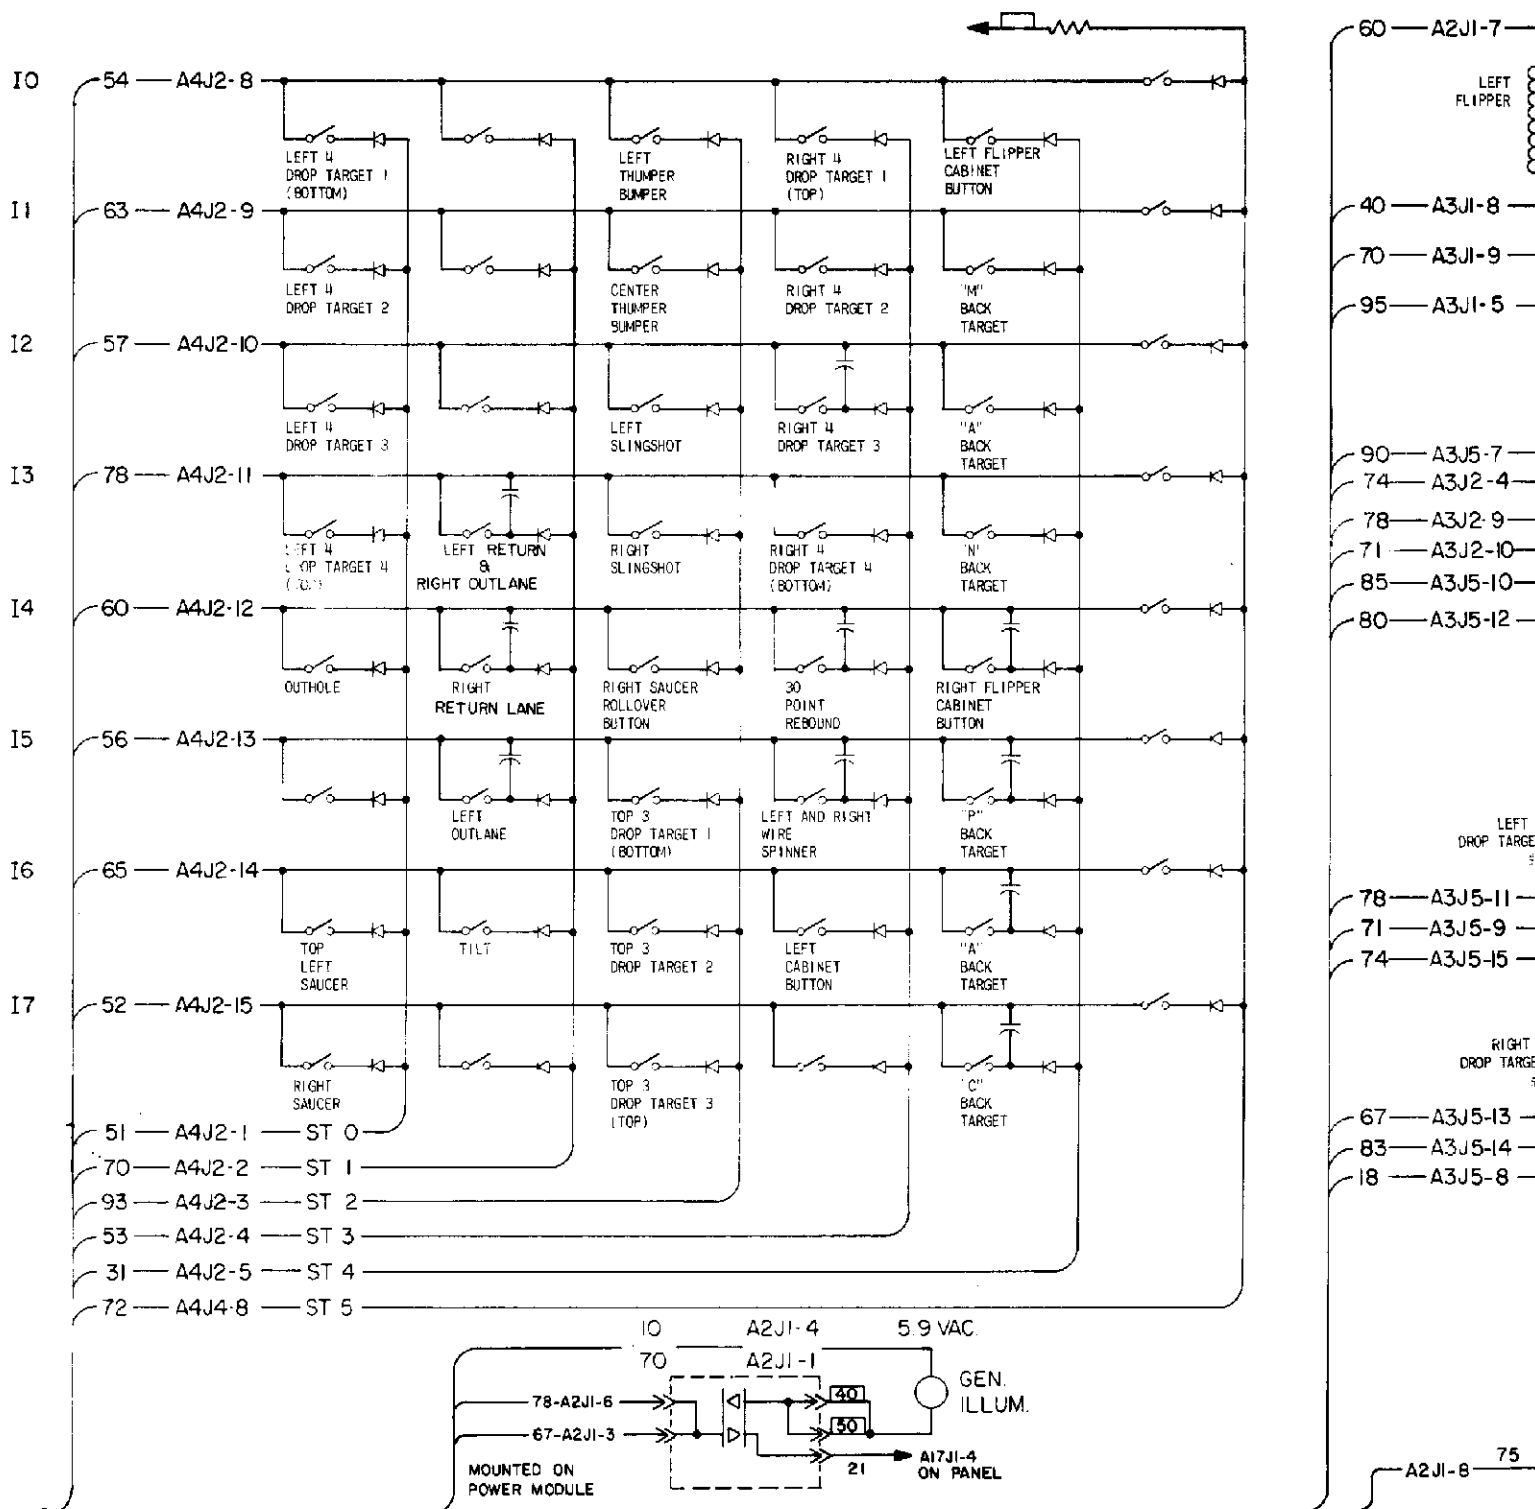

PLAYFIELD A6

NOTES


1. INDICATES NOT USED
2. N/U = NOT USED ON PLAYFIELD
3. * INDICATES AID TEST POINT
4. COIL DIODES ARE IN4004 (E-587-6) SWITCH DIODES ARE IN4148 (E-587-14)
ALL CAPACITORS ARE .05 MFD. (E-586-80)
5. GERMANY ONLY - CAPACITOR .01 MFD. @ 500 V. (E-586-65)

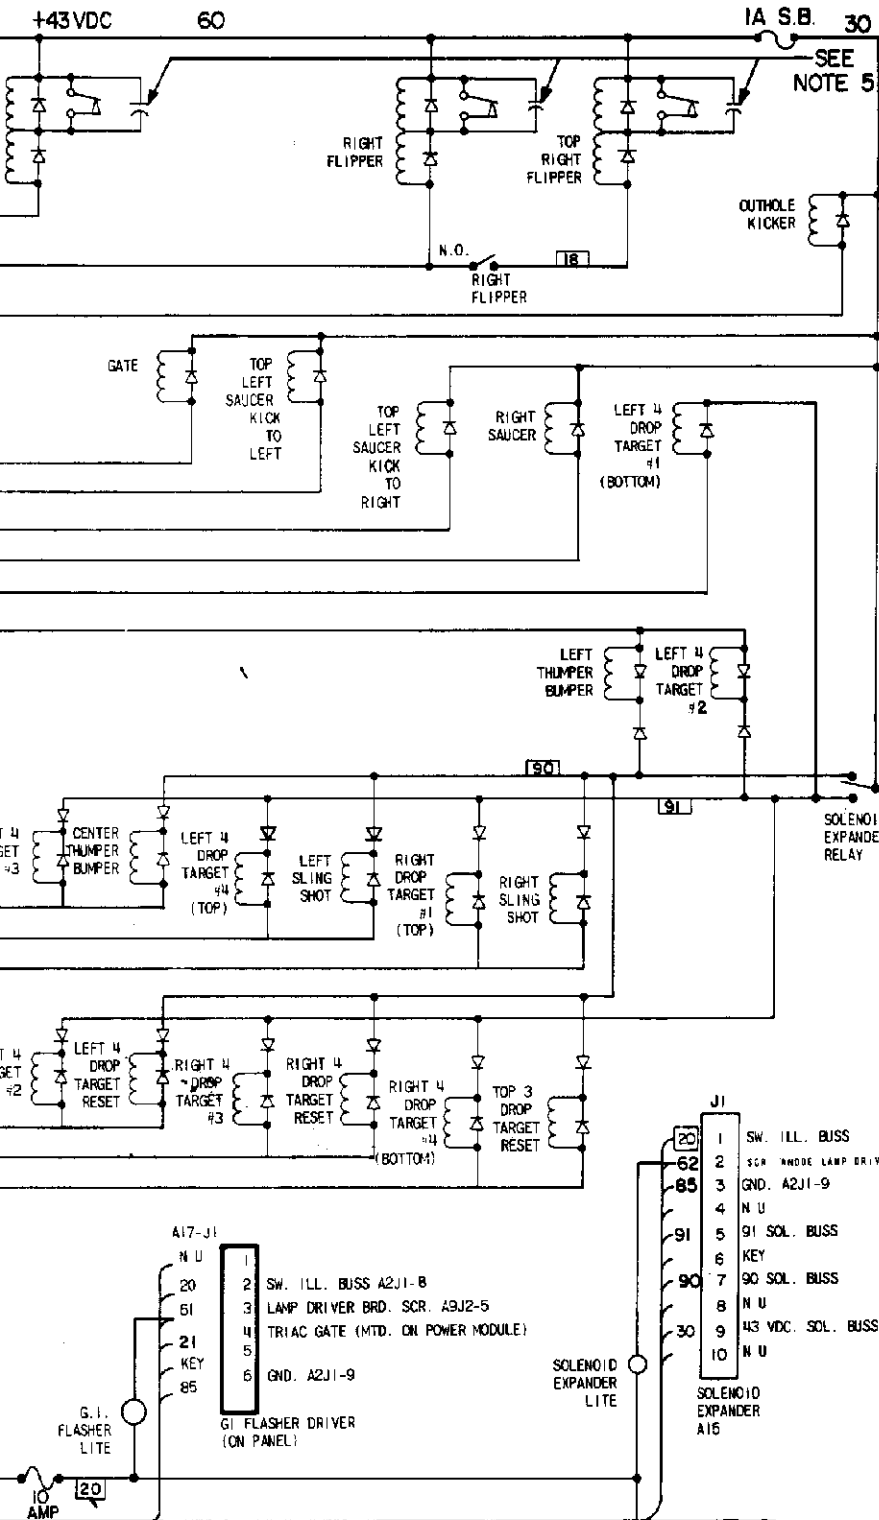

- SEE NOTE 5
- 58 — A5J1-18 #4 YELLOW PAC MAZE
 - 60 — A5J1-19 #8 YELLOW PAC MAZE
 - 57 — A5J1-17 #12 YELLOW PAC MAZE
 - 12 — A5J1-23 #16 YELLOW PAC MAZE
 - 67 — A5J1-14 #20 YELLOW PAC MAZE
 - 13 — A5J1-15 #24 YELLOW PAC MAZE
 - 15 — A5J1-16 3 DROP TARGET 20K
 - 78 — A5J1-28 PAC-MAN MAZE AGGRESSIVE
 - 50 — A5J1-24 LEFT & RIGHT LANE 10K ARROW
 - 75 — A5J1-25 LEFT & RIGHT LANE X BALL
 - 91 — A5J1-26 N U
 - 53 — A5J1-27 "UP" DIRECTION ARROW
 - 41 — A5J1-1 #3 YELLOW PAC MAZE
 - 43 — A5J1-9 #7 YELLOW PAC MAZE
 - 51 — A5J1-8 #11 YELLOW PAC MAZE
 - 45 — A5J1-3 #15 YELLOW PAC MAZE
 - 52 — A5J1-2 #19 YELLOW PAC MAZE
 - 23 — A5J1-10 #23 YELLOW PAC MAZE
 - 34 — A5J1-7 3 DROP TARGET 30K
 - 25 — A5J1-6 "P" LEFT DROP TARGET
 - 48 — A5J1-5 LEFT & RIGHT LANE 20K ARROW
 - 65 — A5J1-11 RIGHT SAUCER 10 MOVES ARROW
 - 35 — A5J1-4 N U
 - 61 — A5J1-12 "RIGHT" DIRECTION ARROW
 - 30 — A5J1-13 "A" LEFT DROP TARGET

- 38 — A5J3-26 #2 YELLOW PAC MAZE
- 36 — A5J3-25 #6 YELLOW PAC MAZE
- 67 — A5J3-19 #10 YELLOW PAC MAZE
- 13 — A5J3-17 #14 YELLOW PAC MAZE
- 25 — A5J3-16 #18 YELLOW PAC MAZE
- 98 — A5J3-23 #22 YELLOW PAC MAZE
- 40 — A5J3-27 3 DROP TARGET PAC-MAN
- 64 — A5J3-21 LEFT & RIGHT LANE 30K ARROW
- 78 — A5J3-20 LEFT & RIGHT SAUCER MAZE ARROW
- 23 — A5J3-22 SAME PLAYER SHOOT AGAIN
- 72 — A5J3-24 "DOWN" DIRECTION ARROW
- 10 — A5J3-1 #1 YELLOW PAC MAZE
- 31 — A5J3-12 #5 YELLOW PAC MAZE
- 53 — A5J3-15 #9 YELLOW PAC MAZE
- 20 — A5J3-11 #13 YELLOW PAC MAZE
- 15 — A5J3-9 #17 YELLOW PAC MAZE
- 35 — A5J3-13 CREDIT INDICATOR
- 14 — A5J3-4 #25 YELLOW PAC MAZE
- 95 — A5J3-2 "C" LEFT DROP TARGET
- 91 — A5J3-10 LEFT & RIGHT LANE 40K ARROW
- 56 — A5J3-18 LEFT GATE ARROW
- 81 — A5J3-3 #21 YELLOW PAC MAZE
- 84 — A5J3-14 "LEFT" DIRECTION ARROW
- 38 — A2J1-5 FEATURE LAMP BUS

- 20 — A5J2-2 "A" RIGHT DROP TARGET
- 12 — A5J2-14 #5 PAC-MAN
- 23 — A5J2-15 "M" RIGHT DROP TARGET
- 98 — A5J2-20 #2 PAC-MAN
- 85 — A5J2-6 #3 PAC-MAN
- 91 — A5J2-7 #4 PAC-MAN
- 60 — A5J2-1 "N" RIGHT DROP TARGET
- 34 — A5J2-16 #1 PAC-MAN

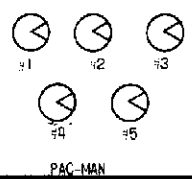

1	2	3	4	5
6	7	8	9	10
11	12	13	14	15
16	17	18	19	20
21	22	23	24	25

RED MONSTER MAZE (left), YELLOW PAC MAZE (right)

ALL DESIGN, OPERATIVE AND PRICE DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MANUFACTURING CORP. CHICAGO, ILL. THIS INFORMATION IS DISCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, OR USED IN ANY MANNER WITHOUT THE WRITTEN CONSENT OF THE COMPANY. THE PRINT IS MADE AND MUST BE RETURNED TO THE COMPANY ON DEMAND.

Bally MANUFACTURING CORP.
2640 BELMONT AVENUE
CHICAGO, ILLINOIS #1283


DR BY FFC	DATE 3-82	PRINTED BY	DIE SIZE -	CC -	FT PER M -	LBS PER M
APD BY JL	DATE 3-25-82	NAME	WIRING DIAGRAM PLAYFIELD			
APD BY JL	DATE 3-25-82	MATERIAL	PAC-MAN			
FINISH	HARDENING	CODE	PART NO W-1192-37			

TABLE A AIJ2


24 PIN PLUG		
FROM	PIN	WIRE
A3J3-8	1	10
A4J1-24	2	18
A4J1-2	3	20
A4J1-26	4	25
A4J1-3	5	30
A4J1-21	6	31
A4J1-27	7	38
A4J1-4	8	40
A3J3-17	9	45
A5J2-21	10	47
A4J1-5	11	50
A4J1-25	12	51
A4J1-28	13	54
A4J1-6	14	58
A3J3-20	15	60
A5J2-22	16	62
A4J1-23	17	67
A14J1-7	18	70
A4J1-22	19	72
A4J1-1	20	80
A4J1-7	21	84
A4J1-20	22	85
A2J4-4	23	40
A2J4-9	24	70

INSERT TO BACK CAB PLUG


AI INSERT

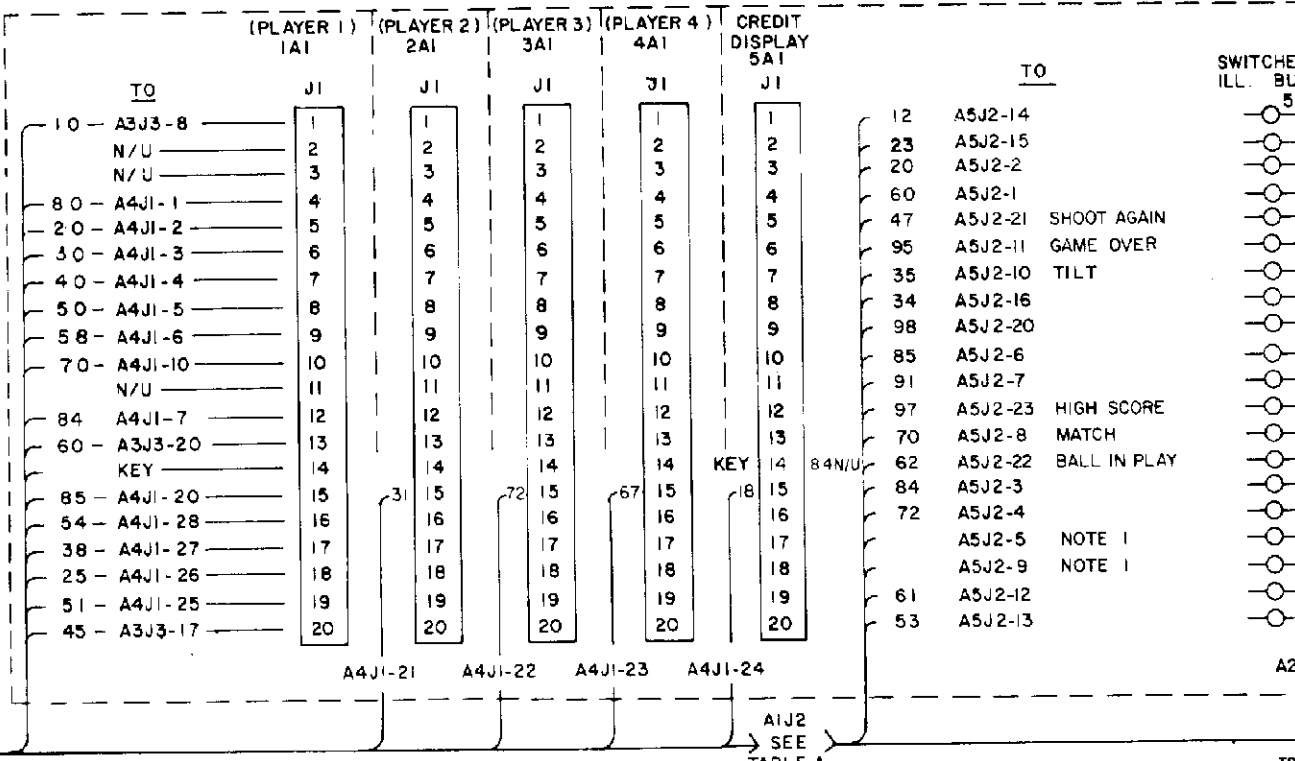

LAMP DRIVER A5

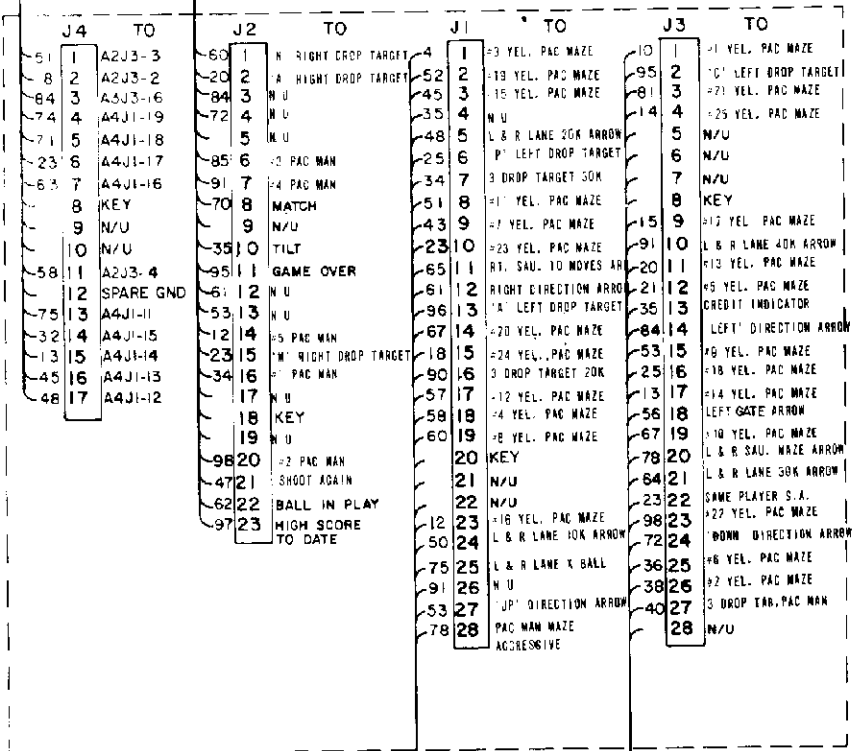


MPU A4

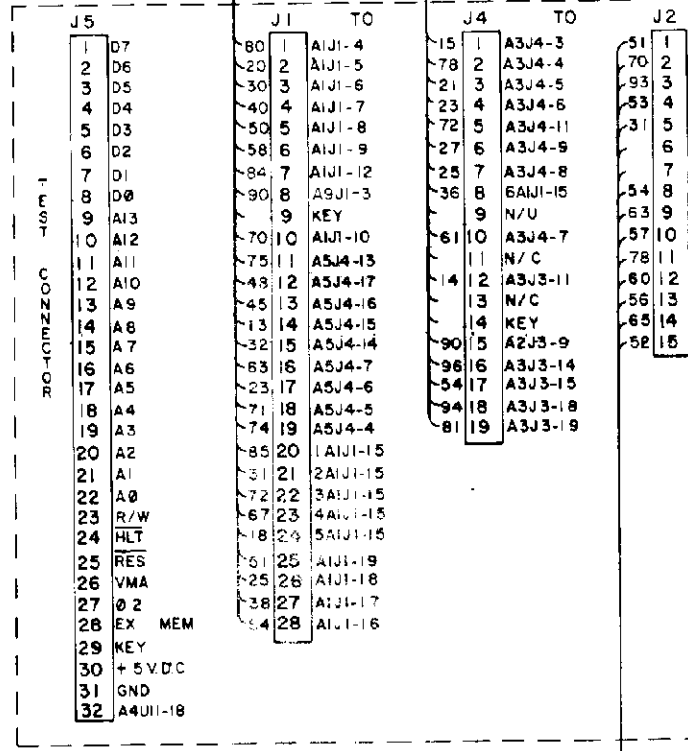

TO LOWER CABINET
TO PLAYFIELD

- NOTES:
1. THESE PINS ARE RESERVED FOR FUTURE USE.
 2. WIRE COLOR ARE SHOWN FOR ALL CONNECTOR PINS, SOME WIRE MAY NOT BE USED IN ALL GAMES.
 3. * INDICATES AID TEST POINT.

W
1-
2-
3-
4-
5-

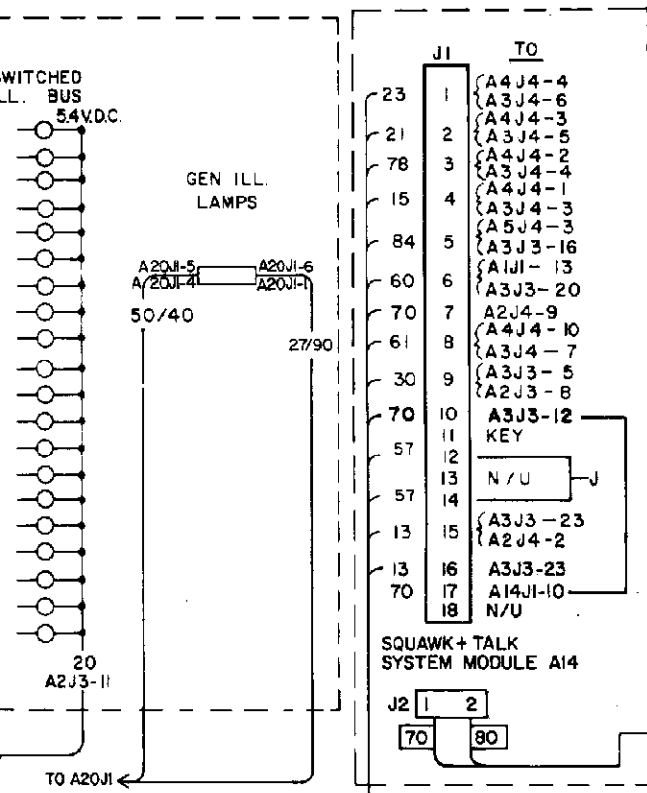

9 PIN PLUG		
FROM	PIN	WIRE
A2J4-18	1	10
A5J2-10	2	35
A2J3-11	3	20
A5J2-8	4	70
A2J4-1	5	50
A5J2-11	6	95
A5J2-23	7	97
A4J4-8	8	36
	9	

J1	TO
23	1 A4J4-4
	2 A3J4-6
21	3 A4J4-3
	4 A3J4-5
78	5 A4J4-2
	6 A3J4-4
15	7 A4J4-1
	8 A3J4-3
84	9 A5J4-3
	10 A3J3-16
60	11 A1J1-13
	12 A3J3-20
70	13 A2J4-9
	14 A4J4-10
61	15 A3J4-7
	16 A3J3-5
30	17 A2J3-8
	18 A3J3-12
70	19 KEY
57	20 N/U
	21 N/U
57	22 N/U
	23 A3J3-23
13	24 A2J4-2
	25 A3J3-23
13	26 A3J3-23
70	27 A14J1-10
	28 N/U

SQUAWK + TALK SYSTEM MODULE A14

J2	TO
1	2
70	80

VOLTAGE REGULATOR / SOLENOID DRIVER A3

J2	TO	J3	TO
51	1 ST0 PLAY-	10	1 SELF TEST SW.
70	2 ST1 FIELD	13	2 ST0 SW. CAB
93	3 ST2 SW	14	3 ST1 STROBE
53	4 ST3 STROBE	4	4 KEY
31	5 ST4	5	5 N/U
	6 KEY	6	6 N/U
	7 N/U	7	7 N/U
54	8 I0	8	8 N/U
63	9 I1 PLAY-	15	9 I0
57	10 I2 FIELD	85	10 I1
78	11 I3 SW	20	11 I2
60	12 I4 RETURN	21	12 I3
56	13 I5	23	13 I4
65	14 I6	25	14 I5
52	15 I7	27	15 I6
		30	16 I7

CAB. SW. RET.

J4	TO
1	N/U
2	KEY
15	3 A4J4-1
78	4 A4J4-2
21	5 A4J4-3
23	6 A4J4-4
61	7 A4J4-10
25	8 A4J4-7
27	9 A4J4-6
10	N/U
72	11 A4J4-5
72	12 N/U

J3	TO
1	N/U
2	KEY
50	3 A2J3-7
4	N/U
30	5 A2J3-8
92	6 A2J4-6
7	NOTE 1
10	8 A1J1-1
9	NOTE 1
56	10 A2J3-1
14	11 A4J4-12
70	12 A2J3-10
64	13 A3J3-25
96	14 A4J4-16
54	15 A4J4-17
84	16 A5J4-3
45	17 A1J1-20
94	18 A4J4-18
81	19 A4J4-19
60	20 A1J1-13
52	21 A2J3-5
82	22 A2J3-6
13	23 A2J4-2
57	24 A2J4-3
64	25 A3J3-13

J2	TO
10	1 R FLIP SW
20	2 L FLIP SW
74	3 KEY
4	(A)
85	5 KNOCKER
6	NOTE 1
31	7 TEST SW RET
36	8 COIN LOCKOUT
78	9 (B)
71	10 RIGHT SAUCER
11	N/U
12	N/U
13	
14	
15	

(A) TOP LEFT SAUCER (KICK TO LEFT)
(B) TOP LEFT SAUCER (KICK TO RIGHT)

J1	TO
1	N/U
2	
3	
4	N/U
5	OUTHOLE
6	N/U
7	KEY
8	L FLIP COIL
9	R FLIP COIL

J5	TO
1	N/U
2	N/U
3	N/U
4	N/U
5	N/U
6	KEY
7	GATE
8	(A)
9	(B)
90	LEFT 4 DROP TAR#1
18	(C)
80	(D)
67	(E)
83	(F)
74	(G)

(A) TOP 3 DROP TARGET RESET OR RIGHT 4 DROP TARGET #4 (BOTTOM)
(B) LEFT SLINGSHOT OR LEFT 4 DROP TARGET #4 (TOP)
(C) CENTER THUMPER BUMPER OR LEFT 4 DROP TARGET #3
(D) LEFT THUMPER BUMPER OR LEFT 4 DROP TARGET #2
(E) LEFT 4 DROP TARGET RESET OR RIGHT 4 DROP TARGET #2
(F) RIGHT 4 DROP TARGET RESET OR RIGHT 4 DROP TARGET #3
(G) RIGHT SLINGSHOT OR RIGHT DROP TARGET #1 (TOP)

WIRE COLOR CODE	
1-RED	6-BROWN
2-BLUE	7-ORANGE
3-YELLOW	8-BLACK
4-GREEN	9-GRAY
5-WHITE	0-NO TRACE

REMOVE ALL BURRS

TOLERANCES UNLESS OTHERWISE SPECIFIED
FRACTIONS - 1/64
DECIMALS - .005
ANGLES - °
DO NOT SCALE DRAWING

DR BY E.V. DATE 3-27-82
CHK BY DATE 3-29-82

APD BY DATE 4-25-82
APD BY DATE 4/1/82

FINISH

HARDENING

MATERIAL PAC MAN


NAME WIRING DIAGRAM BACKBOX

ASSEM NO. USED ON W


PART NO. W-1187-37c

2640 BELMONT AVENUE CHICAGO ILLINOIS #283


TOTAL SCALE

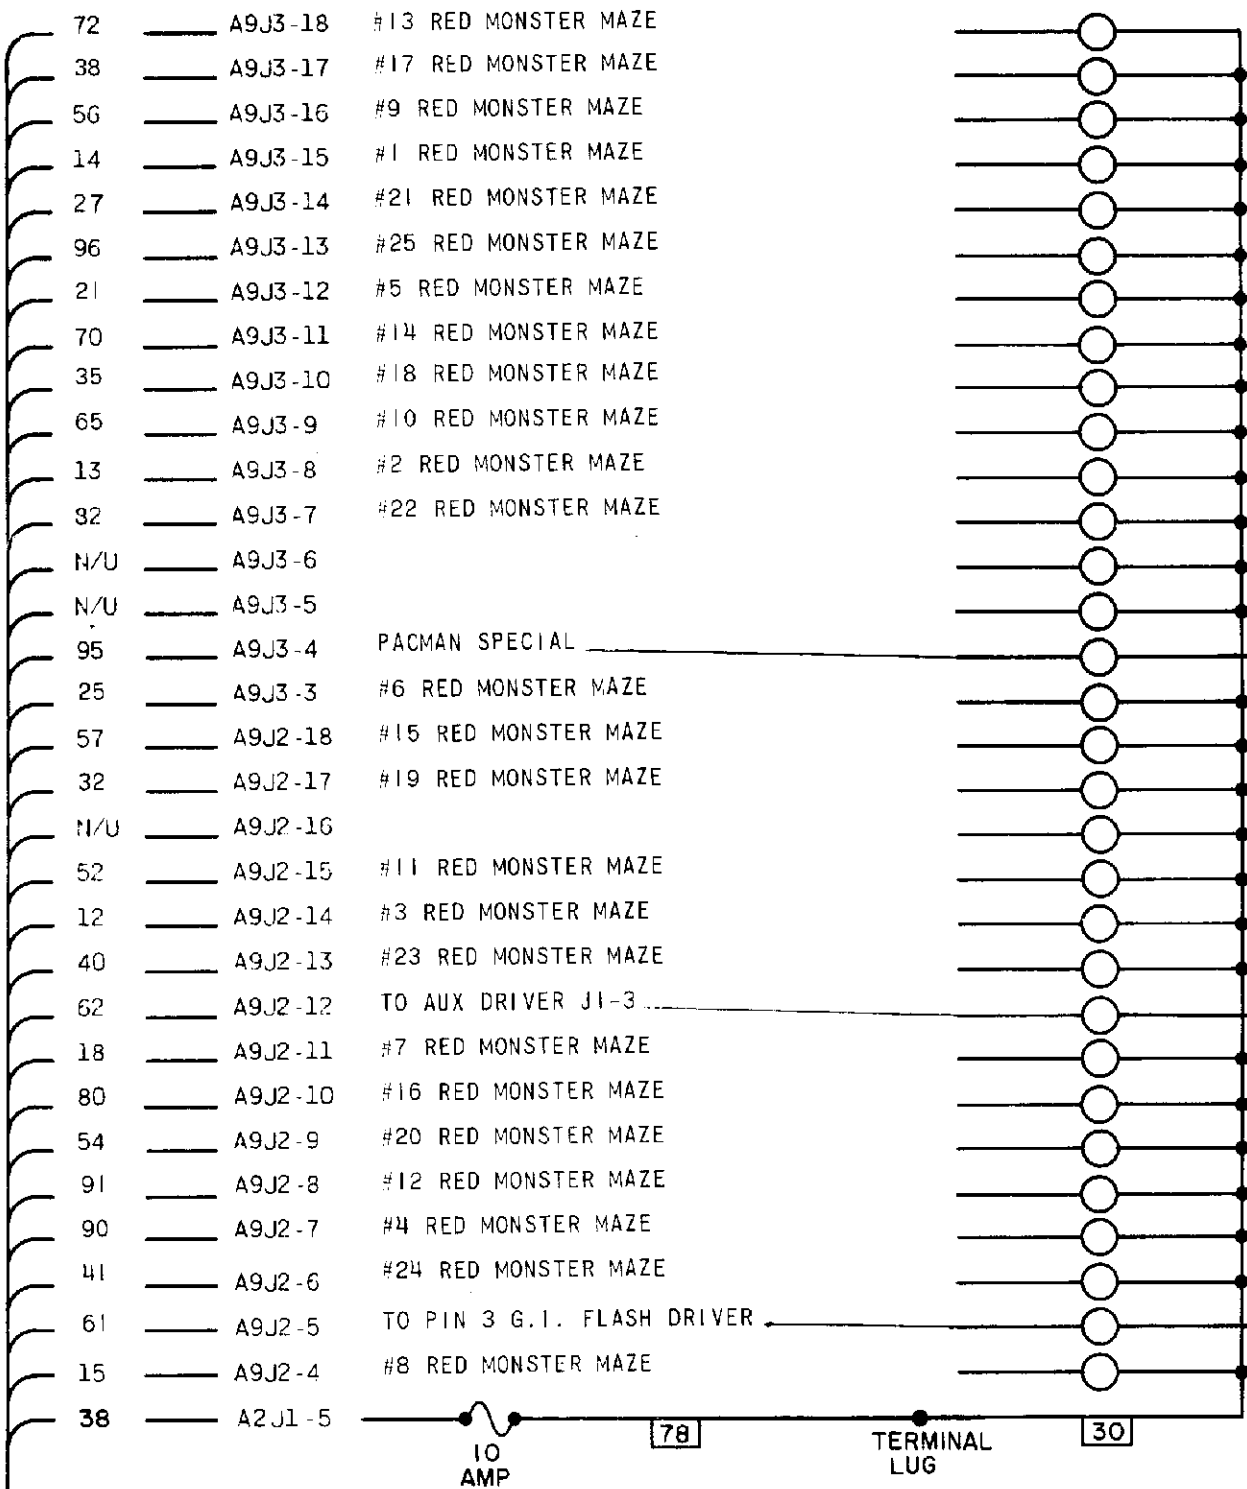

TO
W-1207-14

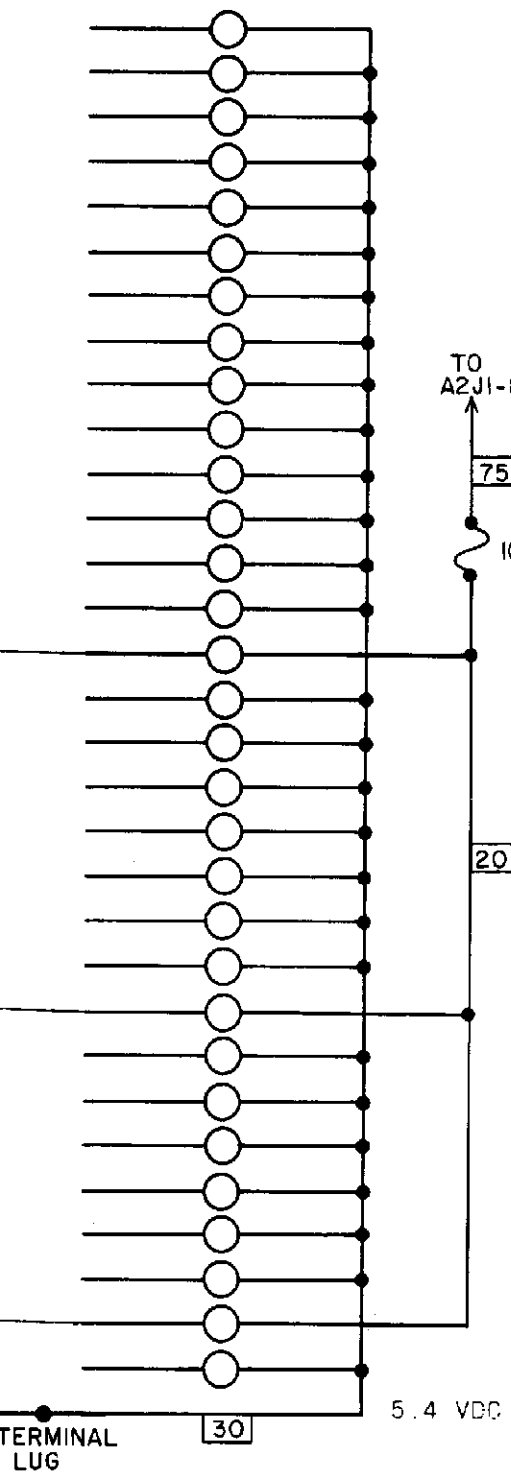

PANEL FEATURE DISPLAY
6A1

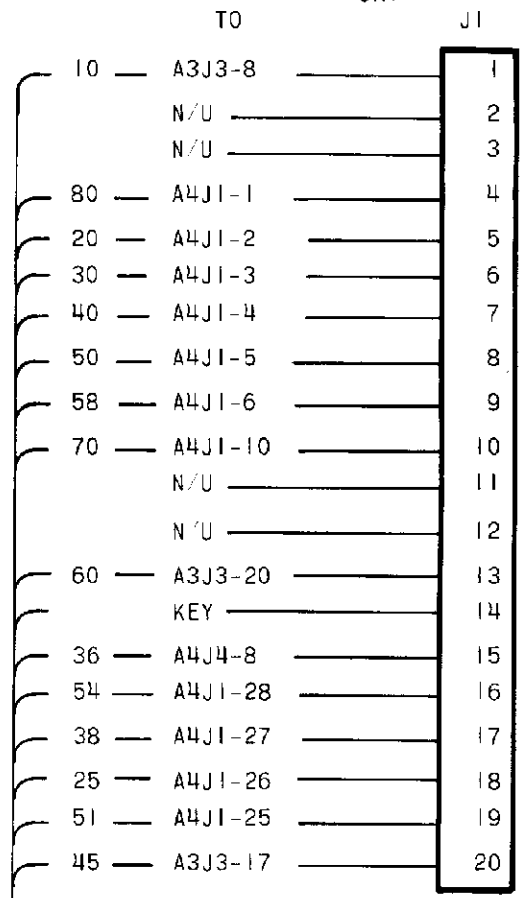

TO
W-1187-37

5.4 VDC


TERMINAL LUG

ALL DESIGN OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MFG. CORP. CHICAGO. ILL. THIS INFORMATION IS DISCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, REVEALED TO OR APPROPRIATED BY OTHERS IN PART OR IN WHOLE WITHOUT THE EXPRESS CONSENT OF THE OWNERS. THE PRINT IS LOANED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTEREST OF THE OWNERS, AND MUST BE RETURNED ON DEMAND.

REMOVE ALL BURRS	DR. BY <i>FFC</i>	DATE 3-82	 2640 BELMONT AVENUE CHICAGO, ILLINOIS #1283					
	CK. BY <i>FFC</i>	DATE 3-23-82						
	TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED	AP'D BY <i>JL</i>	DATE 4-15-82	PRINT CONTROL	DIE SIZE:	C.C.:	FT. PER M.	LBS. PER M.
	FRACTIONS ± 1/32 DECIMALS ± 0.001 EXCEPT HOLE DIA'S ANGLES ± 1/2°	AP'D BY <i>FFC</i>	DATE 4-15-82	NAME WIRING DIAGRAM PLAYFIELD			ASSEM. NO. USED	SCALE
DO NOT SCALE DRAWING	HARDENING:	MATERIAL PAC-MAN	PART NO. W-1255-7 <i>b</i>					

CHANGE	DATE	BY
--------	------	----


(E-620-108)
MC140288 (X4)

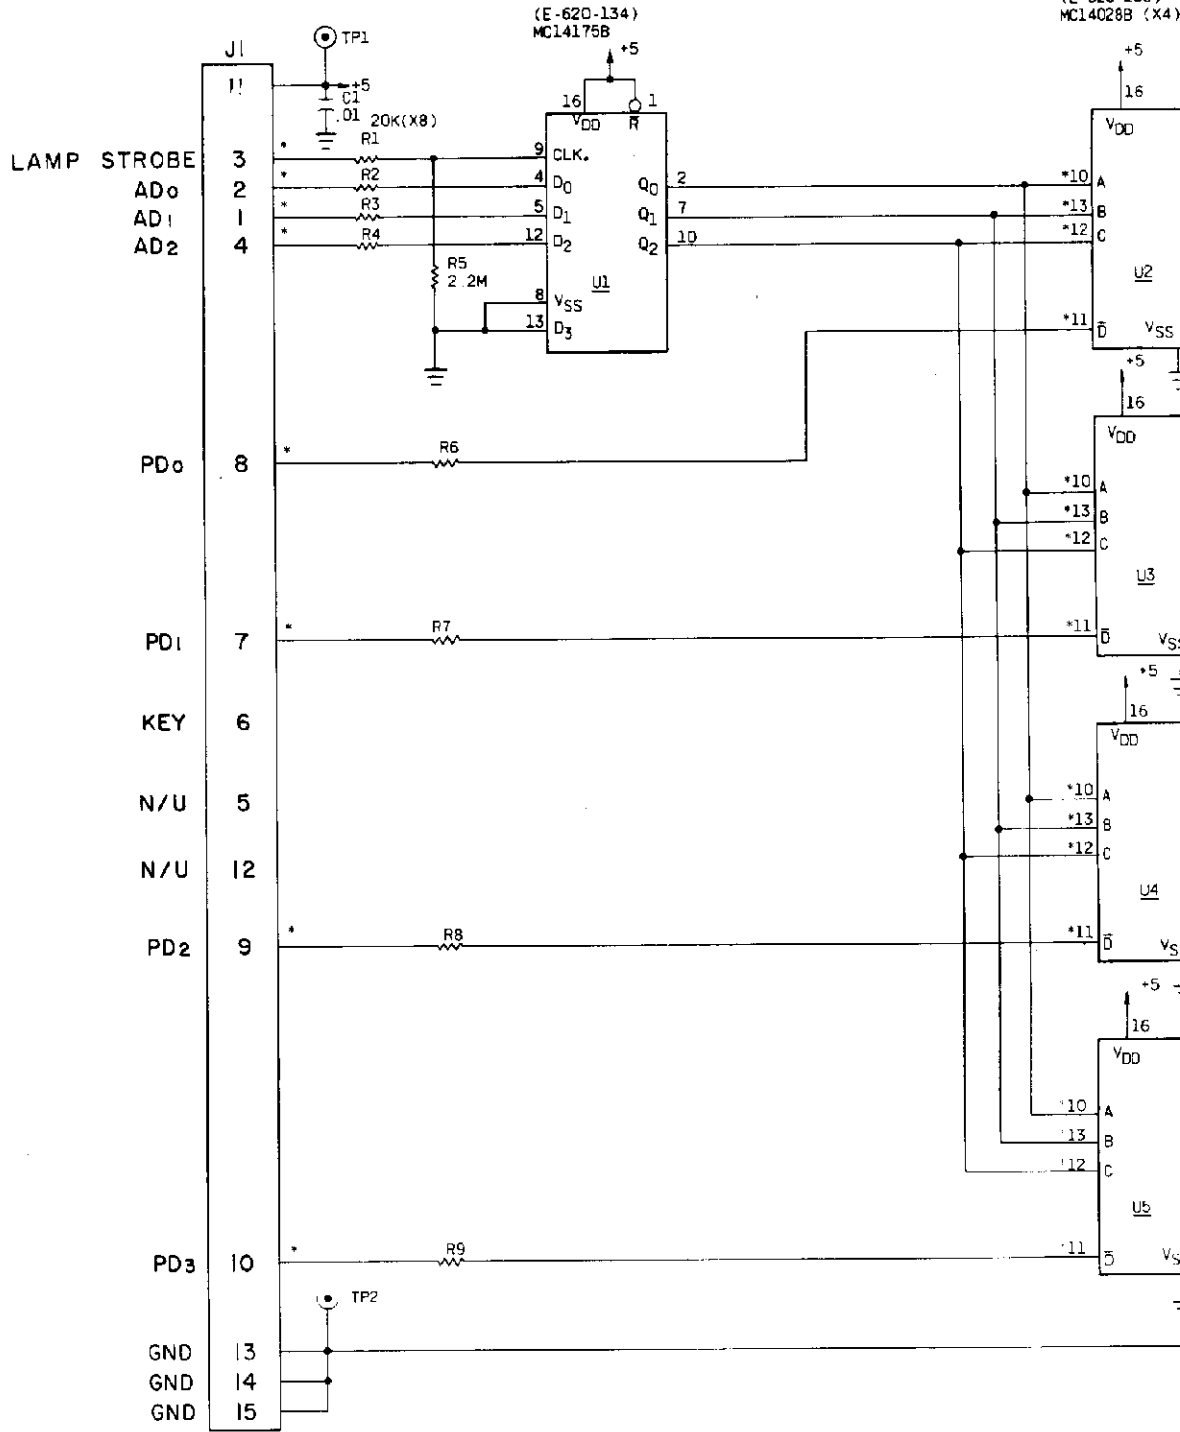

A9	J1	TO
13	1	A5J4-15
32	2	A5J4-14
90	3	A4J1-8
45	4	A5J4-16
	5	
	6	KEY
23	7	A5J4-6
63	8	A5J4-7
71	9	A5J4-5
74	10	A5J4-4
84	11	A5J4-3
	12	
	13	
	14	
58	15	A5J4-11


TO 4-1187-37

TOP
(LOOKING AT BACKSIDE OF INSERT)

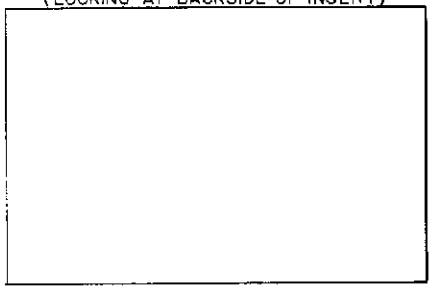

- NOTES:
1. ALL RESISTORS ARE 1/4 W. ±5%.
 2. VOLTAGES SHOWN ARE FOR GAME UP CONDITIONS.
 3. *INDICATES "AID" TEST POINT
 4. SCR'S ARE MCR-106-1, (E-F85 29).
 5. PREFIX ALL REFERENCE DESIGNATIONS WITH "A9".


E-620-108)
U14C28B (X4)

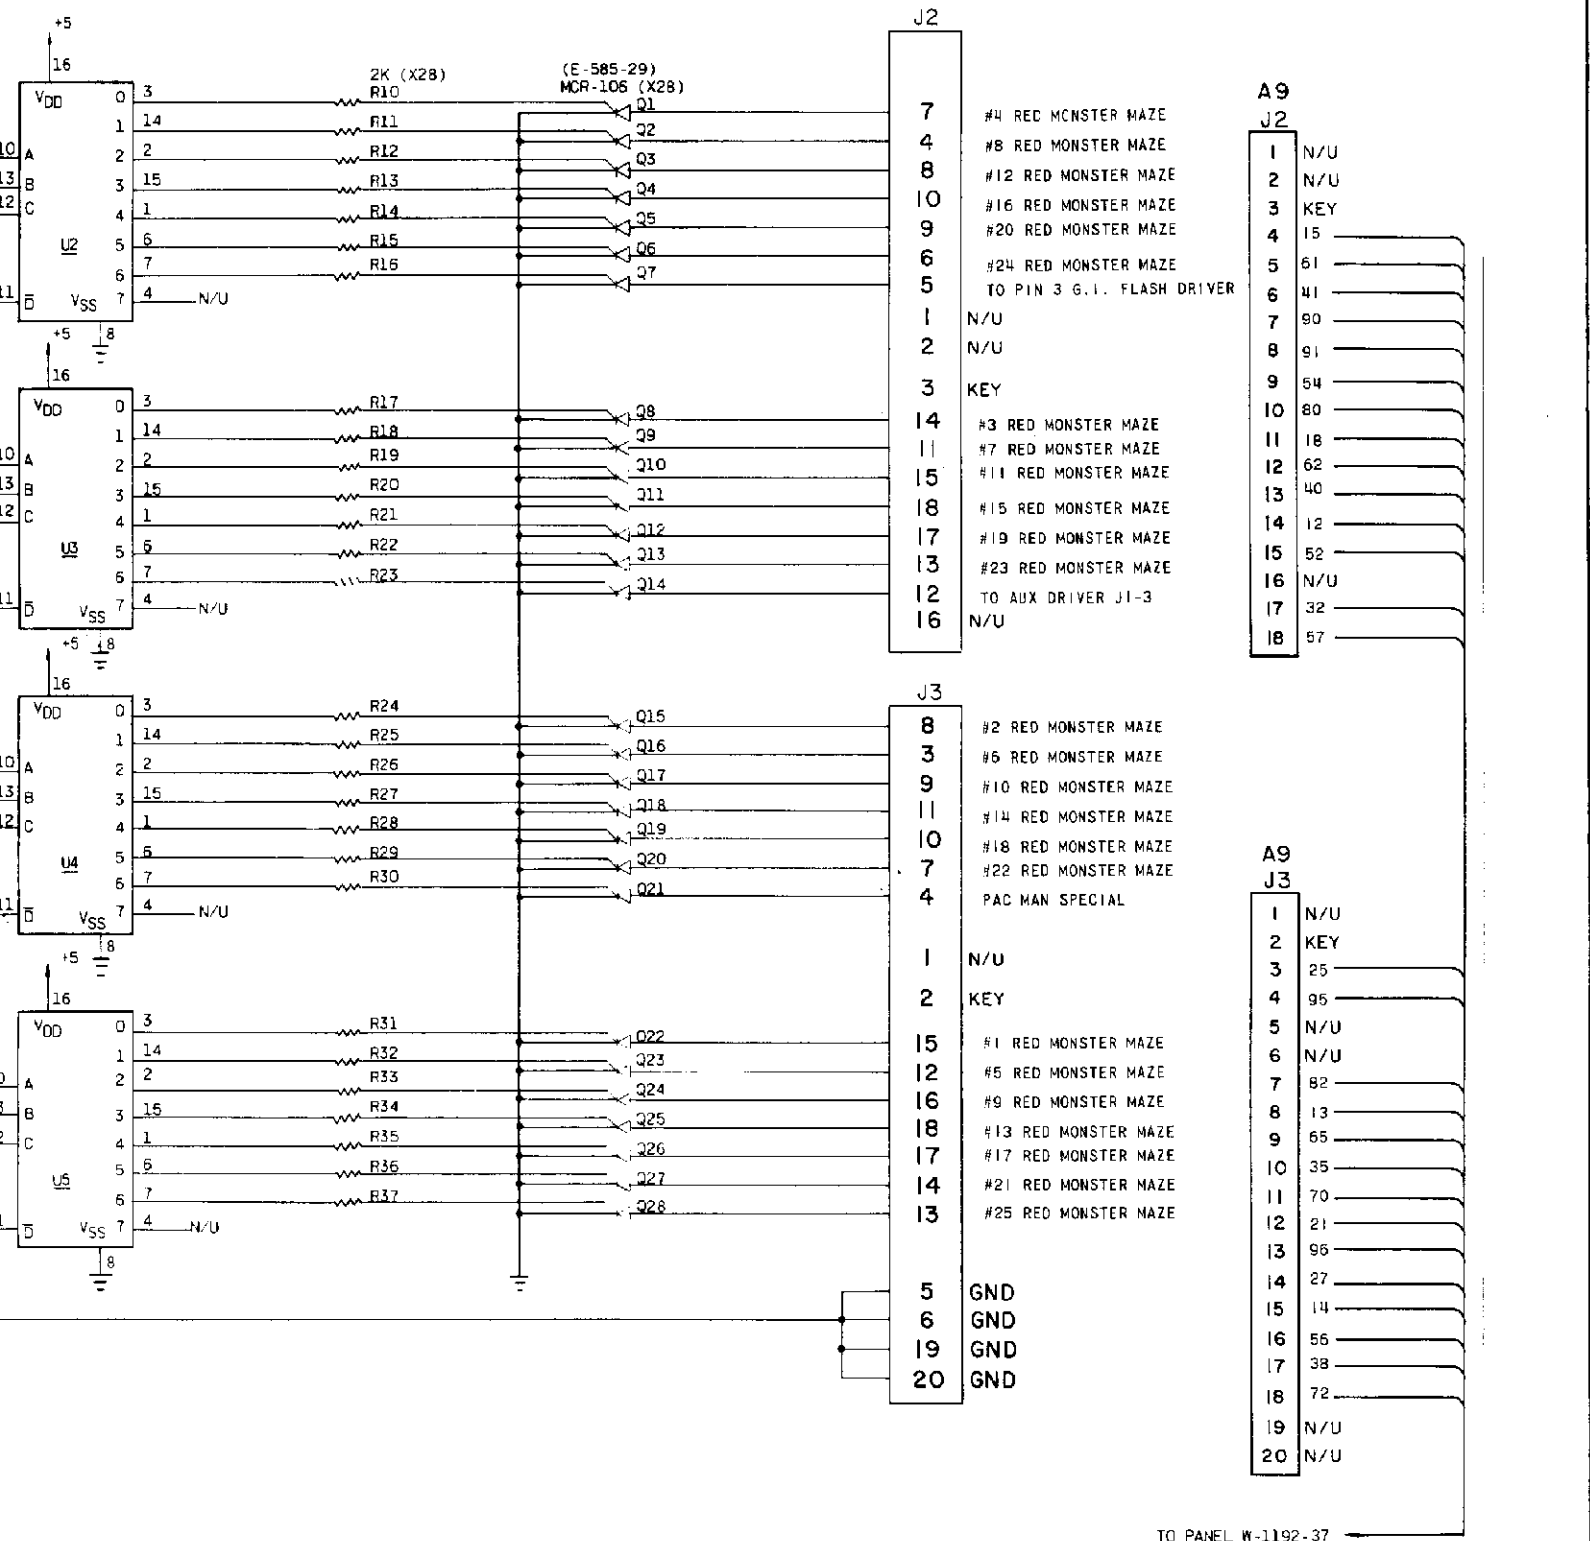

TO PANEL W-1192-37

TO INSERT

REMOVE ALL BURRS TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED DECIMALS - FRACTIONS - HOLE DIA'S - ANGLES -					DR. BY A.V. DATE 2-22-82	DATE 3-22-82	Bally MANUFACTURING CORP. 2640 BELMONT AVENUE CHICAGO, ILLINOIS #1283		
FINISH					PRINT CONTROL	DIE SIZE - CC - FT PER M - LBS PER M -	ASSEM. NO. USED		
DO NOT SCALE DRAWING					NAME AUXILIARY LAMP DRIVER A9	PART NO. W-1207-14			
MATERIAL PAC-MAN					CODE				

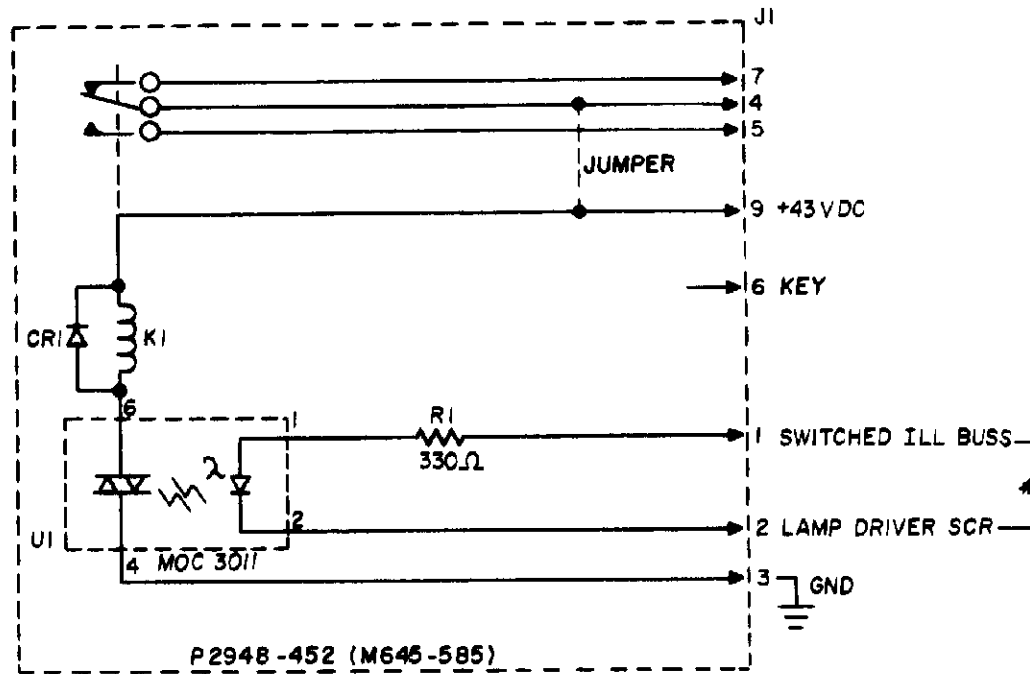


OPER.	DEPT.	DESCRIPTION	TOOL NO.
-------	-------	-------------	----------

NO.	LET.	CHANGE	DATE	BY


REMOVE
 TOLERANCE
 DIMENSIONS
 OTHERWISE
 FRACTIONS
 DECIMALS
 EXCEPT MO
 ANGLES ±
 DO NOT S

PART NO.
W-1251 b

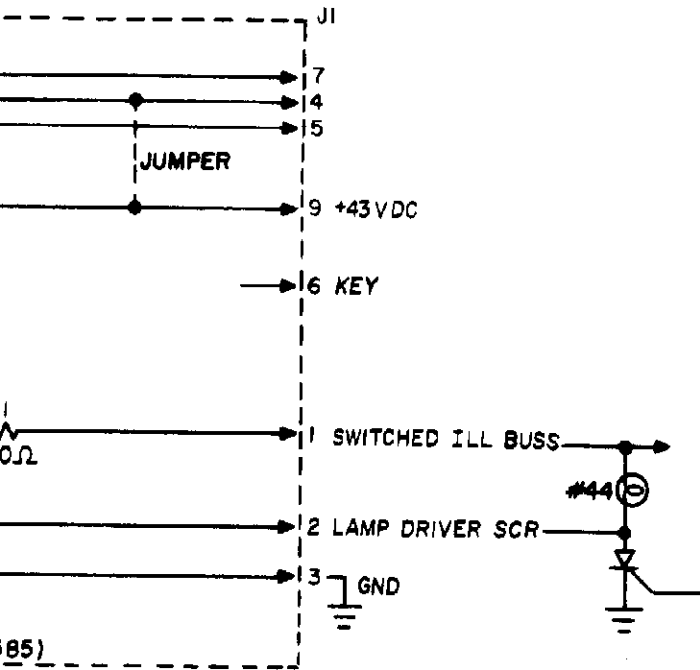


ALL DESIGN, OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MFG. CORP. CHICAGO, ILL. THIS INFORMATION IS DISCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, REVEALED TO OR APPROPRIATED BY OTHERS, IN PART OR IN WHOLE, WITHOUT THE EXPRESS CONSENT OF THE OWNERS. THE PRINT IS LOANED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF THE OWNERS, AND MUST BE RETURNED ON DEMAND.

REMOVE ALL BURRS		DR. BY <i>FFC</i>	DATE 1-21-81	Bally MANUFACTURING CORP. 2640 BELMONT AVENUE CHICAGO, ILLINOIS # 1220				
TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED		CK. BY	DATE				PRINT CONTROL	DIE SIZE
FRACTIONS ± .008		AP'D BY <i>Wm</i>	DATE 1-23-81	NAME		ASSEM. NO. USED		SCALE
DECIMALS ± .003		AP'D BY <i>Wm</i>	DATE 1-23-81	SOLENOID EXPANDER (SCHEMATIC)		AS-2518 -66		<input checked="" type="checkbox"/>
EXCEPT HOLE DIA.'S		FINISH:		MATERIAL		PART NO.		
ANGLES ± 1/2°		<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>		W-1251 b		
DO NOT SCALE DRAWING		HARDENING:		CODE				
		<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>				
D.	LET.	CHANGE	DATE	BY				

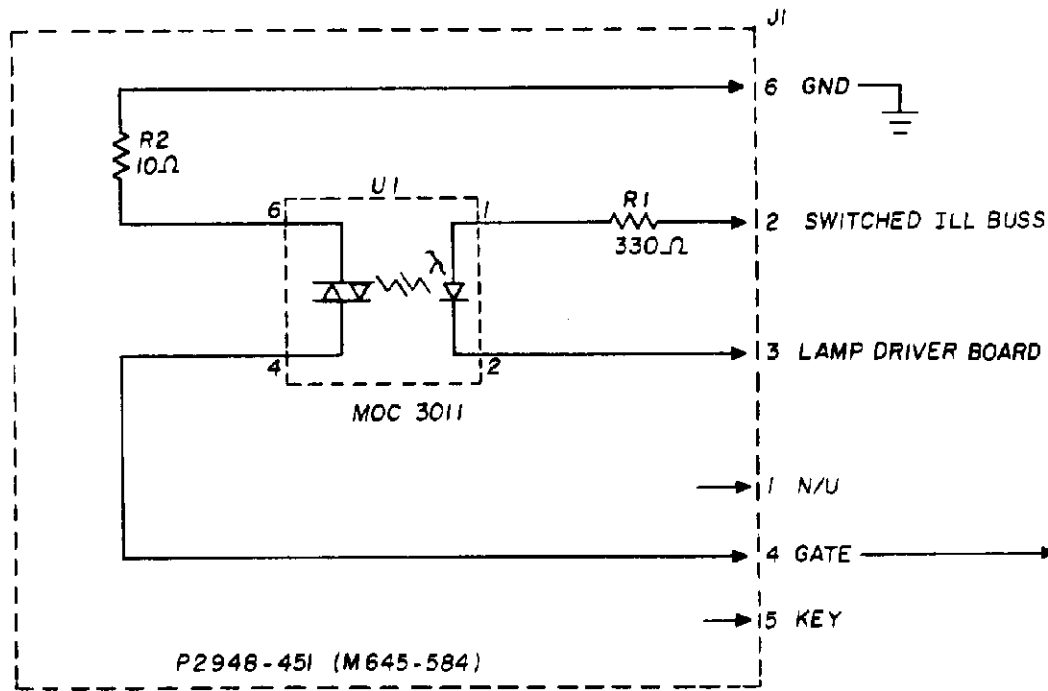

OPER.	DEPT.	DESCRIPTION	TOOL NO.	NO.	LET.	CHANGE	DATE	BY


A
 C
 IN
 D
 REMOVE
 TOLERANCE
 DIMENSION
 OTHERWISE
 FRACTIONS
 DECIMALS
 EXCEPT HO
 ANGLES ±
 DO NOT S

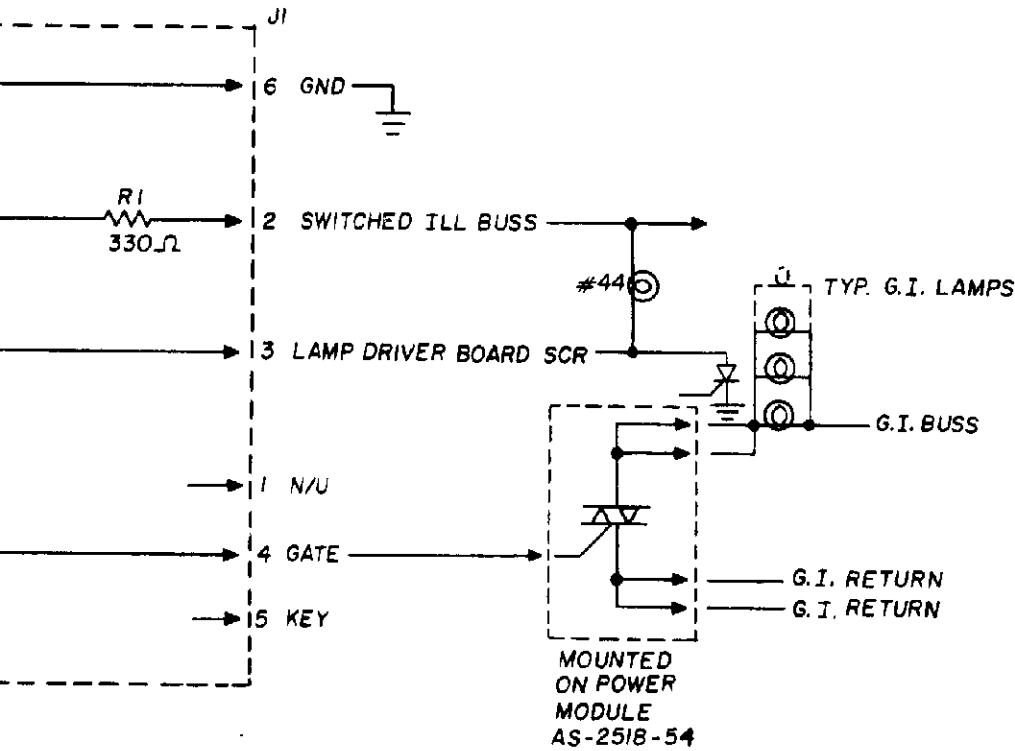

ALL DESIGN, OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MFG. CORP. CHICAGO, ILL. THIS INFORMATION IS DISCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, REVEALED TO OR APPROPRIATED BY OTHERS, IN PART OR IN WHOLE, WITHOUT THE EXPRESS CONSENT OF THE OWNERS. THE PRINT IS LOANED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTEREST OF THE OWNERS, AND MUST BE RETURNED ON DEMAND.

REV.	CHANGE	DATE	BY

REMOVE ALL BURRS		DR. BY FFC	DATE 1-22-81	Bally MANUFACTURING CORP. 2640 BELMONT AVENUE CHICAGO, ILLINOIS #1219				
TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED FRACTIONS ± .008 DECIMALS ± .003 EXCEPT HOLE DIA'S ANGLES ± 1/2°		CK. BY	DATE					
DO NOT SCALE DRAWING		AP'D BY FFC	DATE 1-23-81	PRINT CONTROL	DIE SIZE	C.C.	FT. PER M.	LBS. PER M.
		FINISH: 		NAME GI FLASHER (SCHEMATIC)			ASSEM. NO. USED AS-2518-68	SCALE
		HARDENING: 		MATERIAL 			PART NO. W-1253 b	
				CODE 				

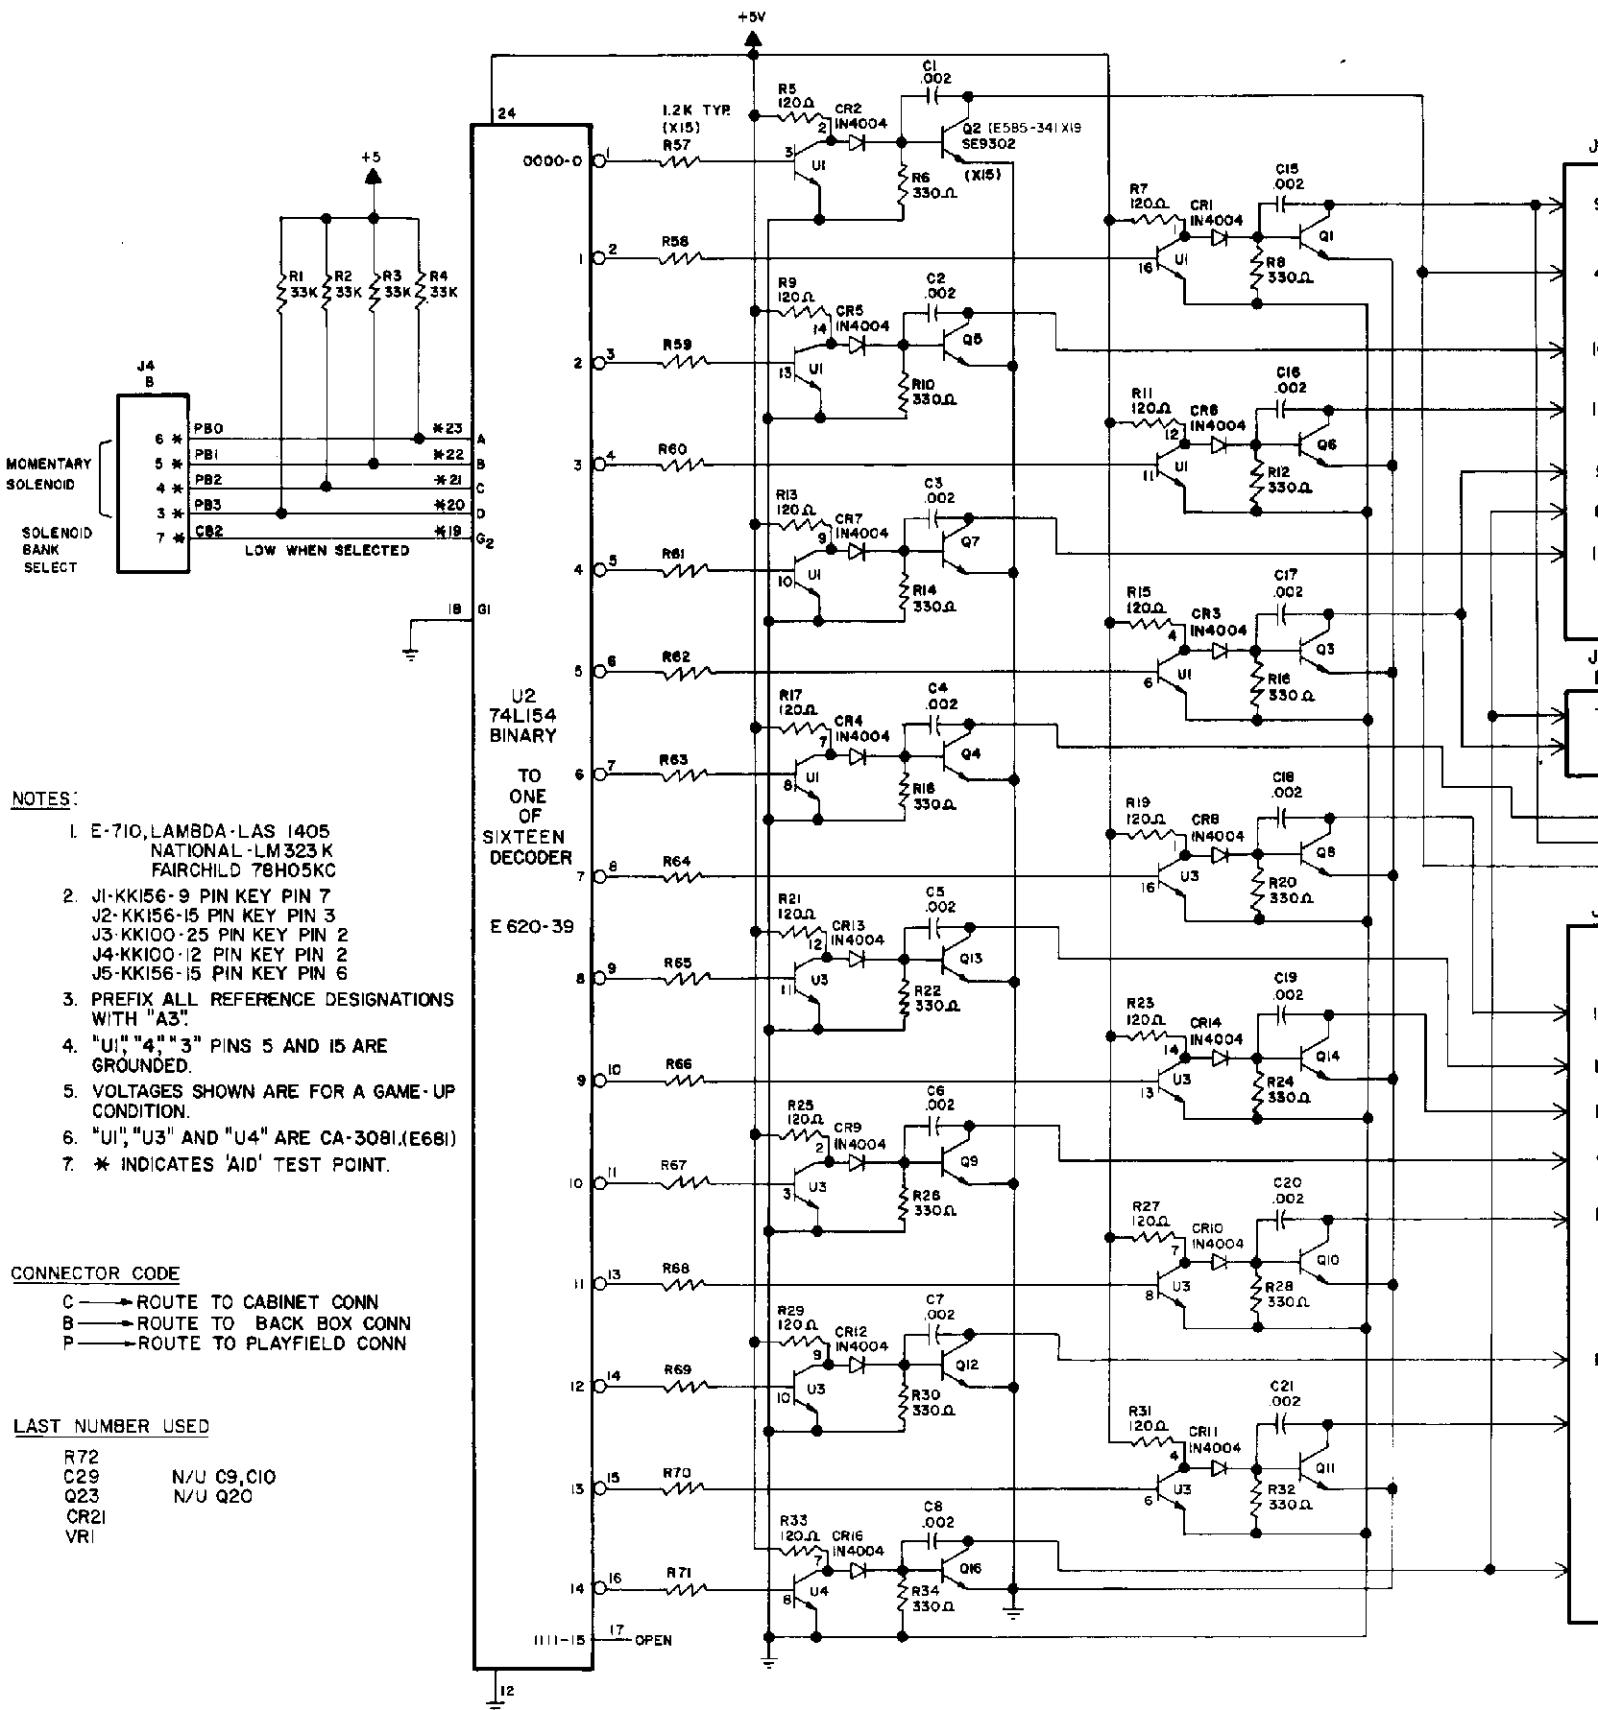


- NOTES:**
- E-710, LAMBDA-LAS 1405 NATIONAL -LM323K FAIRCHILD 78H05KC
 - J1-KK156-9 PIN KEY PIN 7
J2-KK156-15 PIN KEY PIN 3
J3-KK100-25 PIN KEY PIN 2
J4-KK100-12 PIN KEY PIN 2
J5-KK156-15 PIN KEY PIN 6
 - PREFIX ALL REFERENCE DESIGNATIONS WITH "A3".
 - "U1", "U4", "U3" PINS 5 AND 15 ARE GROUNDED.
 - VOLTAGES SHOWN ARE FOR A GAME-UP CONDITION.
 - "U1", "U3" AND "U4" ARE CA-3081.(E681)
 - * INDICATES 'AID' TEST POINT.

CONNECTOR CODE

C → ROUTE TO CABINET CONN
 B → ROUTE TO BACK BOX CONN
 P → ROUTE TO PLAYFIELD CONN

LAST NUMBER USED

R72
 C29 N/U C9,C10
 Q23 N/U Q20
 CR21
 VR1

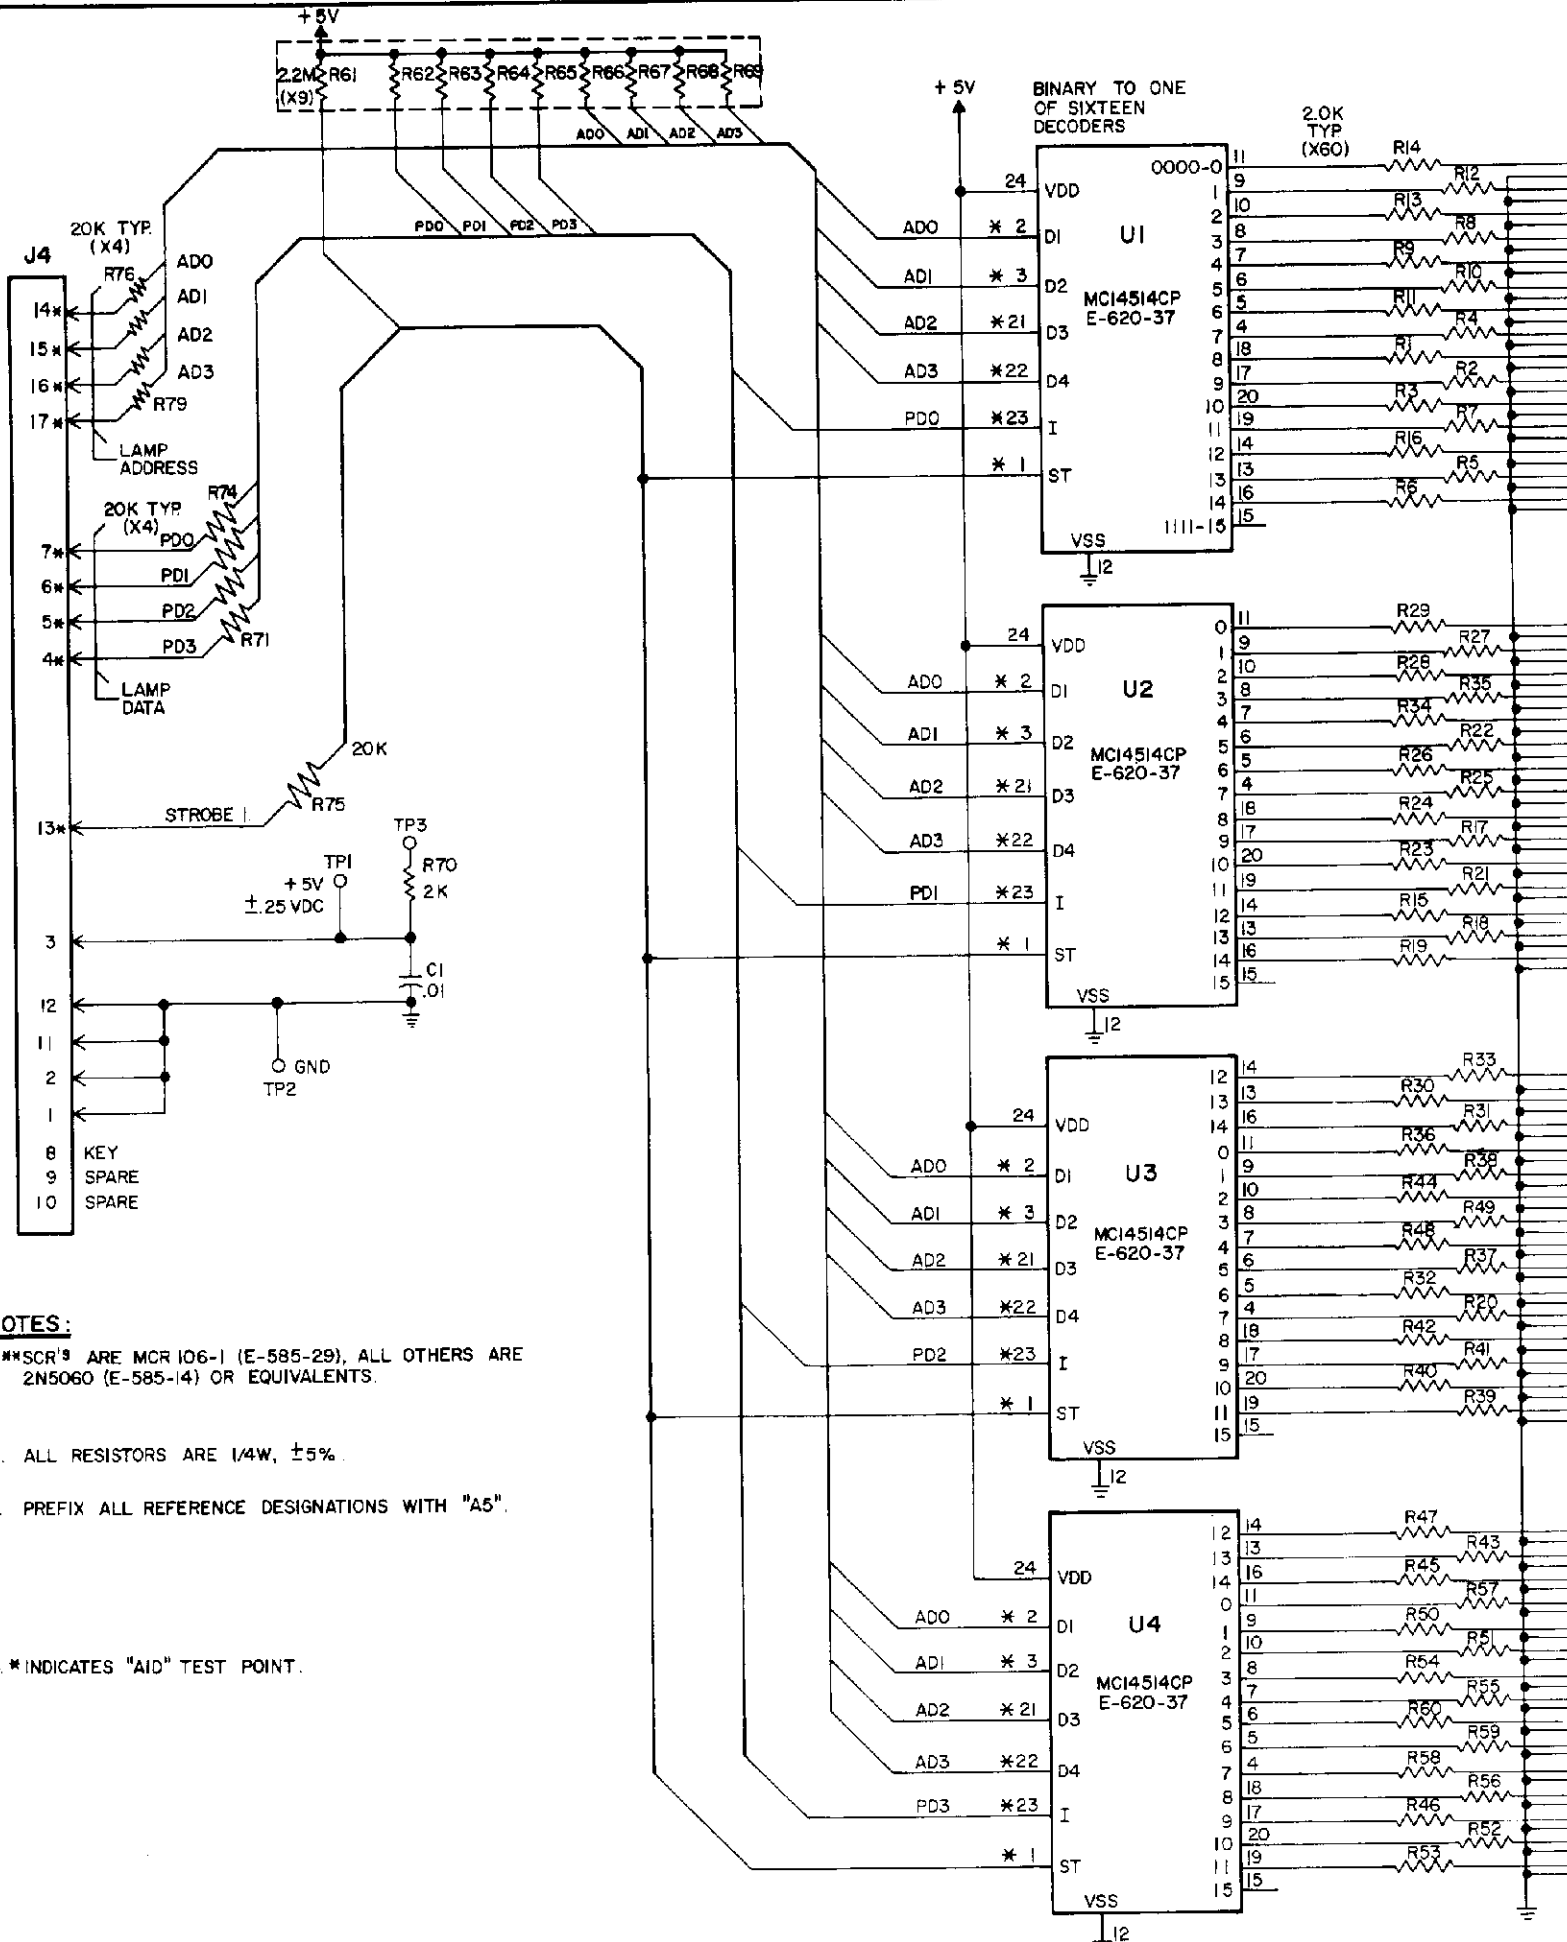


NOTES:
 1. **SCR'S ARE MCR 106-1 (E-585-29), ALL OTHERS ARE 2N5060 (E-585-14) OR EQUIVALENTS.

- 2. ALL RESISTORS ARE 1/4W, ±5%.
- 3. PREFIX ALL REFERENCE DESIGNATIONS WITH "A5".

4. *INDICATES "AID" TEST POINT.

REV	DEPT.	DESCRIPTION	TOOL NO

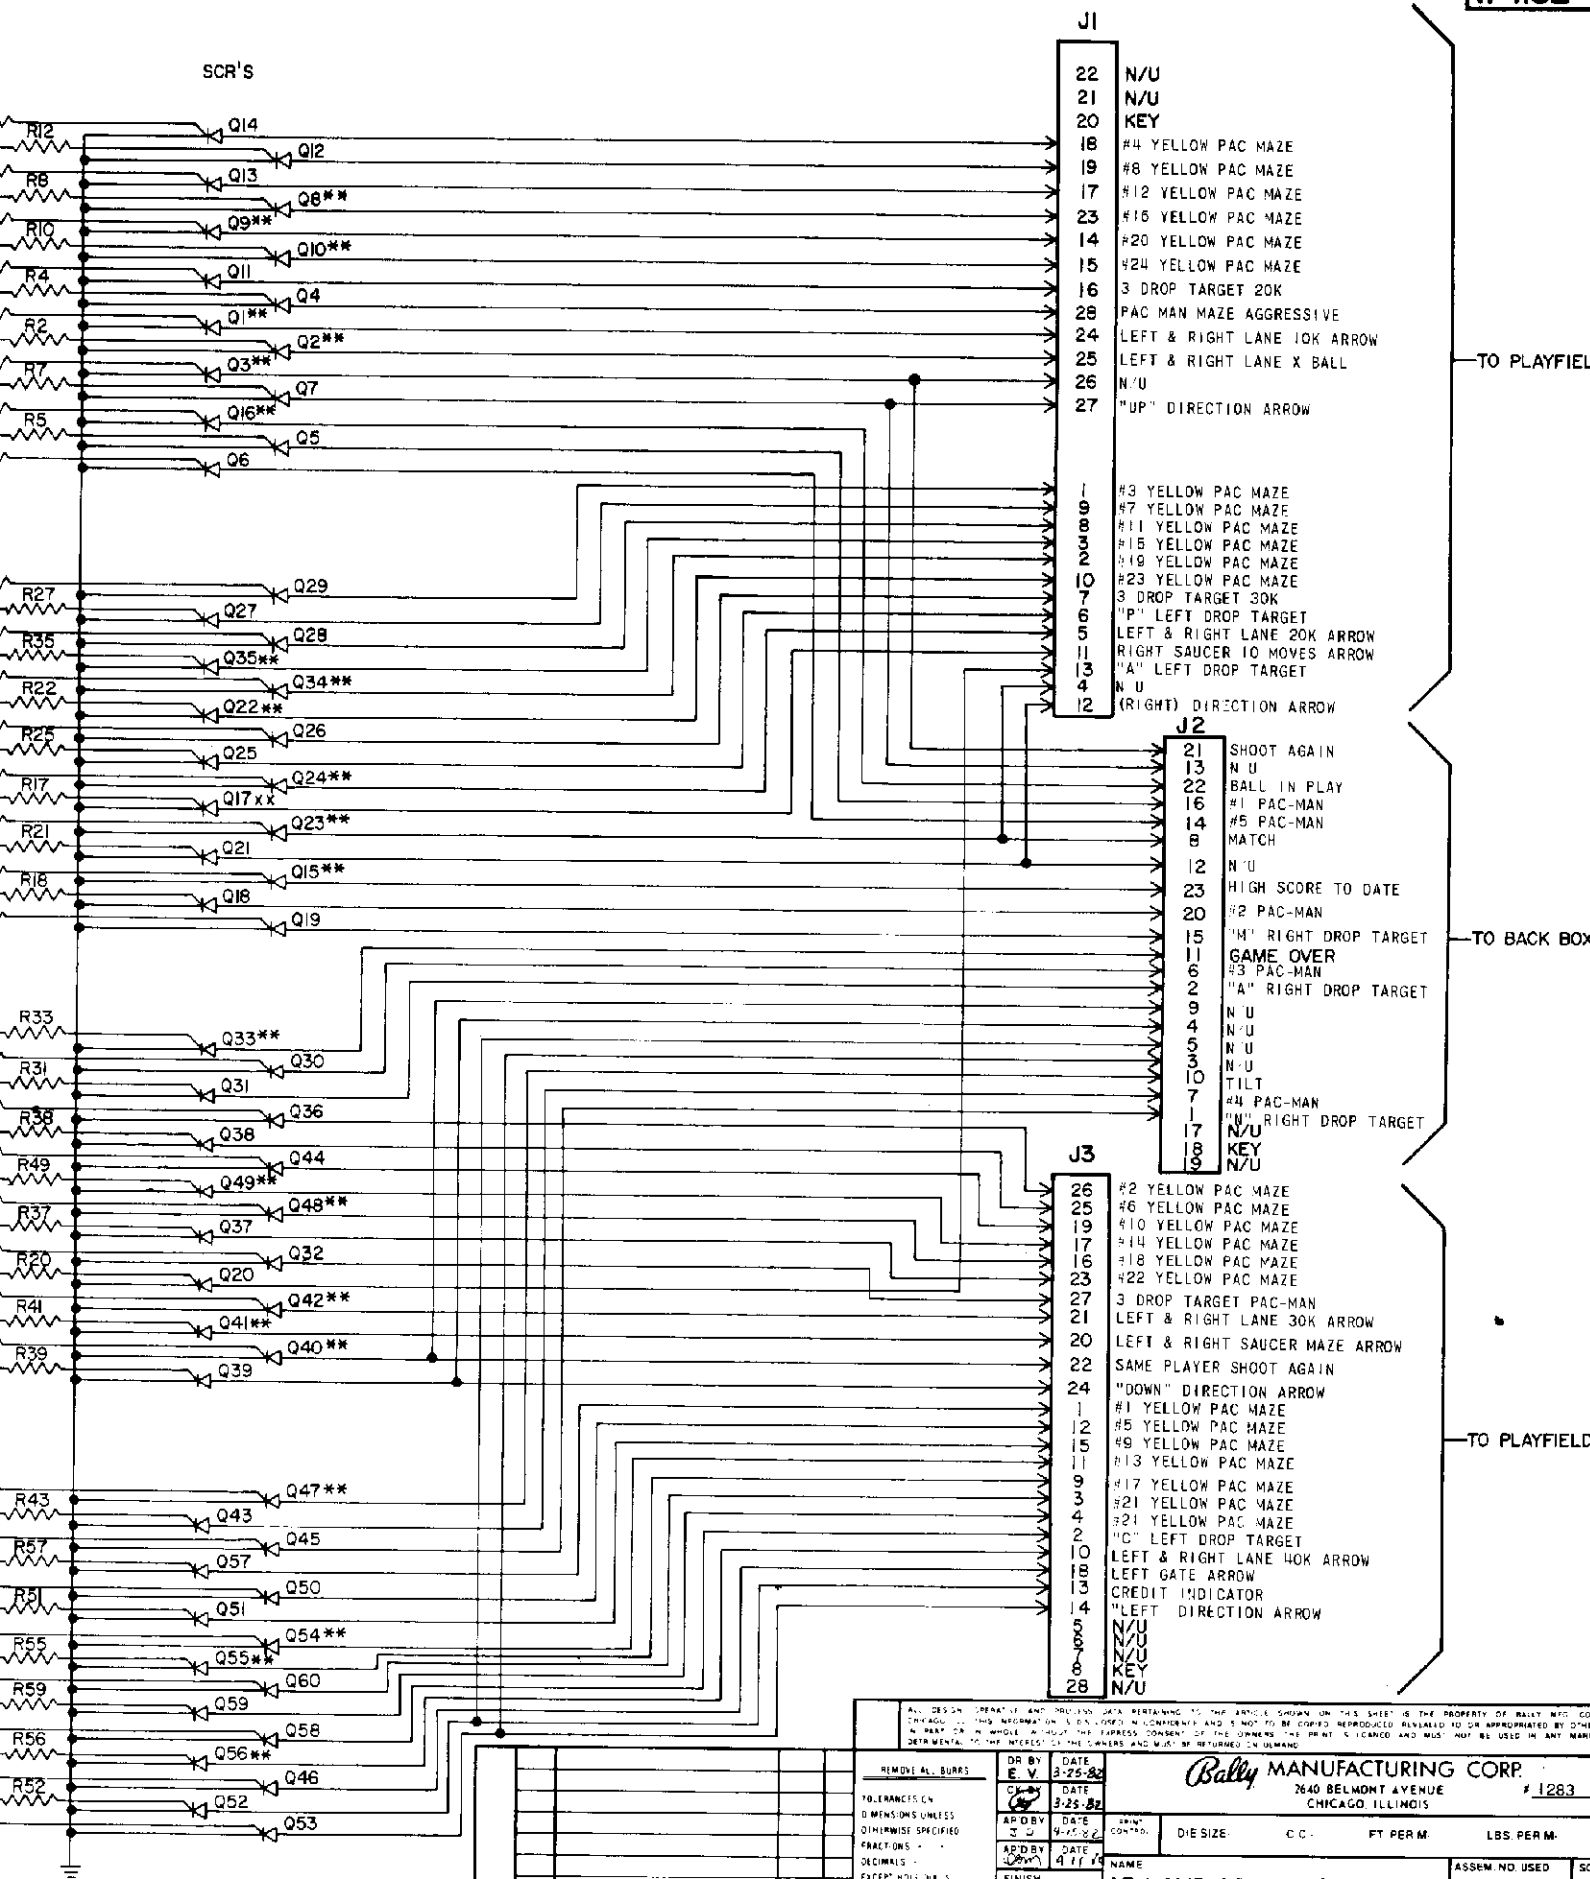

- J1**
- 22 N/U
 - 21 N/U
 - 20 KEY
 - 18 #4 YELLOW PAC MAZE
 - 19 #8 YELLOW PAC MAZE
 - 17 #12 YELLOW PAC MAZE
 - 23 #16 YELLOW PAC MAZE
 - 14 #20 YELLOW PAC MAZE
 - 15 #24 YELLOW PAC MAZE
 - 16 3 DROP TARGET 20K
 - 28 PAC MAN MAZE AGGRESSIVE
 - 24 LEFT & RIGHT LANE 10K ARROW
 - 25 LEFT & RIGHT LANE X BALL
 - 26 N/U
 - 27 "UP" DIRECTION ARROW
- J2**
- 1 #3 YELLOW PAC MAZE
 - 9 #7 YELLOW PAC MAZE
 - 8 #11 YELLOW PAC MAZE
 - 3 #15 YELLOW PAC MAZE
 - 2 #19 YELLOW PAC MAZE
 - 10 #23 YELLOW PAC MAZE
 - 7 3 DROP TARGET 30K
 - 6 "P" LEFT DROP TARGET
 - 5 LEFT & RIGHT LANE 20K ARROW
 - 11 RIGHT SAUCER TO MOVES ARROW
 - 13 "A" LEFT DROP TARGET
 - 4 N/U
 - 12 (RIGHT) DIRECTION ARROW
- J3**
- 21 SHOOT AGAIN
 - 13 N/U
 - 22 BALL IN PLAY
 - 16 #1 PAC-MAN
 - 14 #5 PAC-MAN
 - 8 MATCH
 - 12 N/U
 - 23 HIGH SCORE TO DATE
 - 20 #2 PAC-MAN
 - 15 "H" RIGHT DROP TARGET
 - 11 GAME OVER
 - 6 #3 PAC-MAN
 - 2 "A" RIGHT DROP TARGET
 - 9 N/U
 - 4 N/U
 - 5 N/U
 - 3 N/U
 - 10 TILT
 - 7 #4 PAC-MAN
 - 1 "M" RIGHT DROP TARGET
 - 17 N/U
 - 8 KEY
 - 9 N/U


ALL DESIGN, DRAWING AND PRINTING DATA PERTAINING TO THIS ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MFG. CO. IT IS TO BE KEPT IN CONFIDENCE AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WITHOUT THE EXPRESS WRITTEN CONSENT OF THE OWNER. THE PRINT IS LICENSED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF THE OWNERS AND MUST BE RETURNED ON DEMAND.		DR BY: E.V. DATE: 3-25-82 CK BY: DATE: 3-25-82 AP'D BY: J.D. DATE: 9-25-82 AP'D BY: DATE: 4-11-85 FINISH:		Bally MANUFACTURING CORP. 2640 BELMONT AVENUE CHICAGO, ILLINOIS 60648 # 1283	
TOLERANCES UNLESS OTHERWISE SPECIFIED: FRACTIONS - .005 DECIMALS - .001 ANGLES - .001		NAME: A5 LAMP DRIVER SCHEMATIC MATERIAL: PAC-MAN		ASSEM. NO. USED: _____ PART NO. W-1182-42	
REMOVE ALL BURRS DO NOT SCALE DRAWING		DIE SIZE: _____ C.C.: _____ FT PER M.: _____ LBS PER M.: _____		NO. LET. CHANGE DATE BY	

AS 2877 -X TRANSFORMER POWER ASSEMBLY

SEE NOTE 1

AS-3071-X TRANSFORMER ASSY.

CABINET WIRING

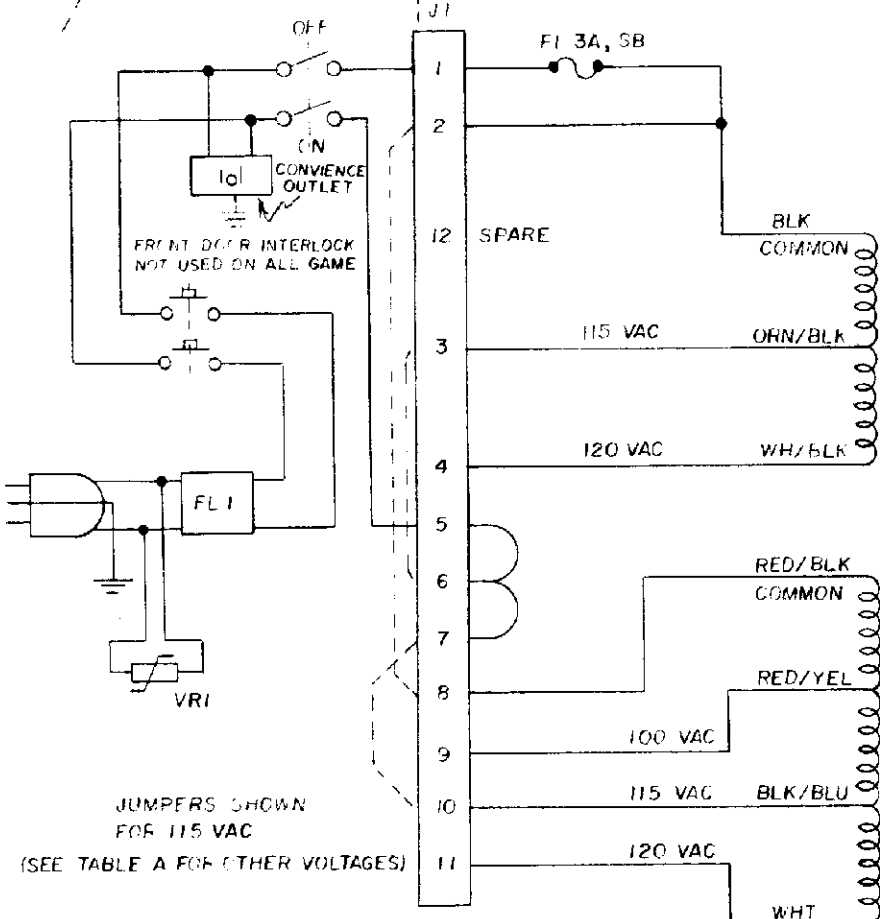


JUMPERS SHOWN FOR 115 VAC (SEE TABLE A FOR OTHER VOLTAGES)

- NOTES
1. SEE GAME MANUAL OF SPECIFIC GAME FOR CORRECT DASH / PART NUMBER.
 2. ALL GAMES WITH 4 OR MORE FLIPPERS USE 7A.

TABLE "A"

115 VAC , 2-8 , 3-6 , 7-10
120 VAC , 2-8 , 4-6 , 7-11
220 VAC , 4-8 , 7-9
240 VAC , 4-8 , 7-11

NOTE 1

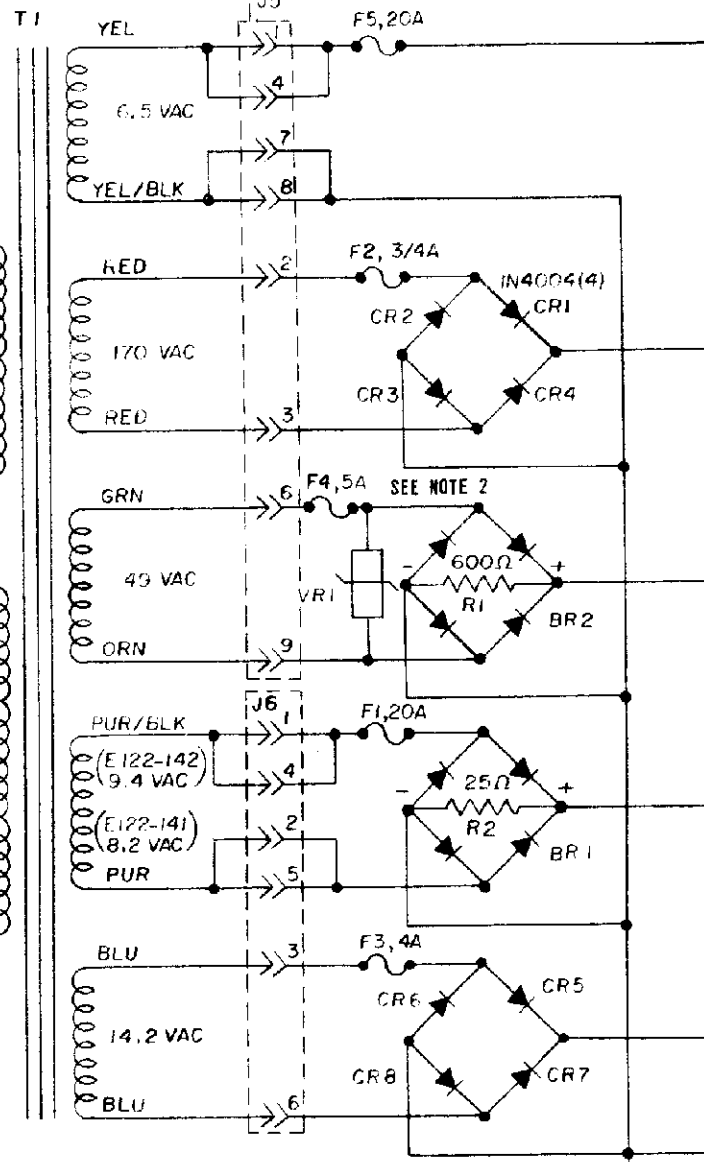


NO.	LET.	CHANGE	DATE	BY

OPER.	DEPT.	DESCRIPTION	TOOL NO.

ASSEMBLY


AS-2518-54, POWER MODULE

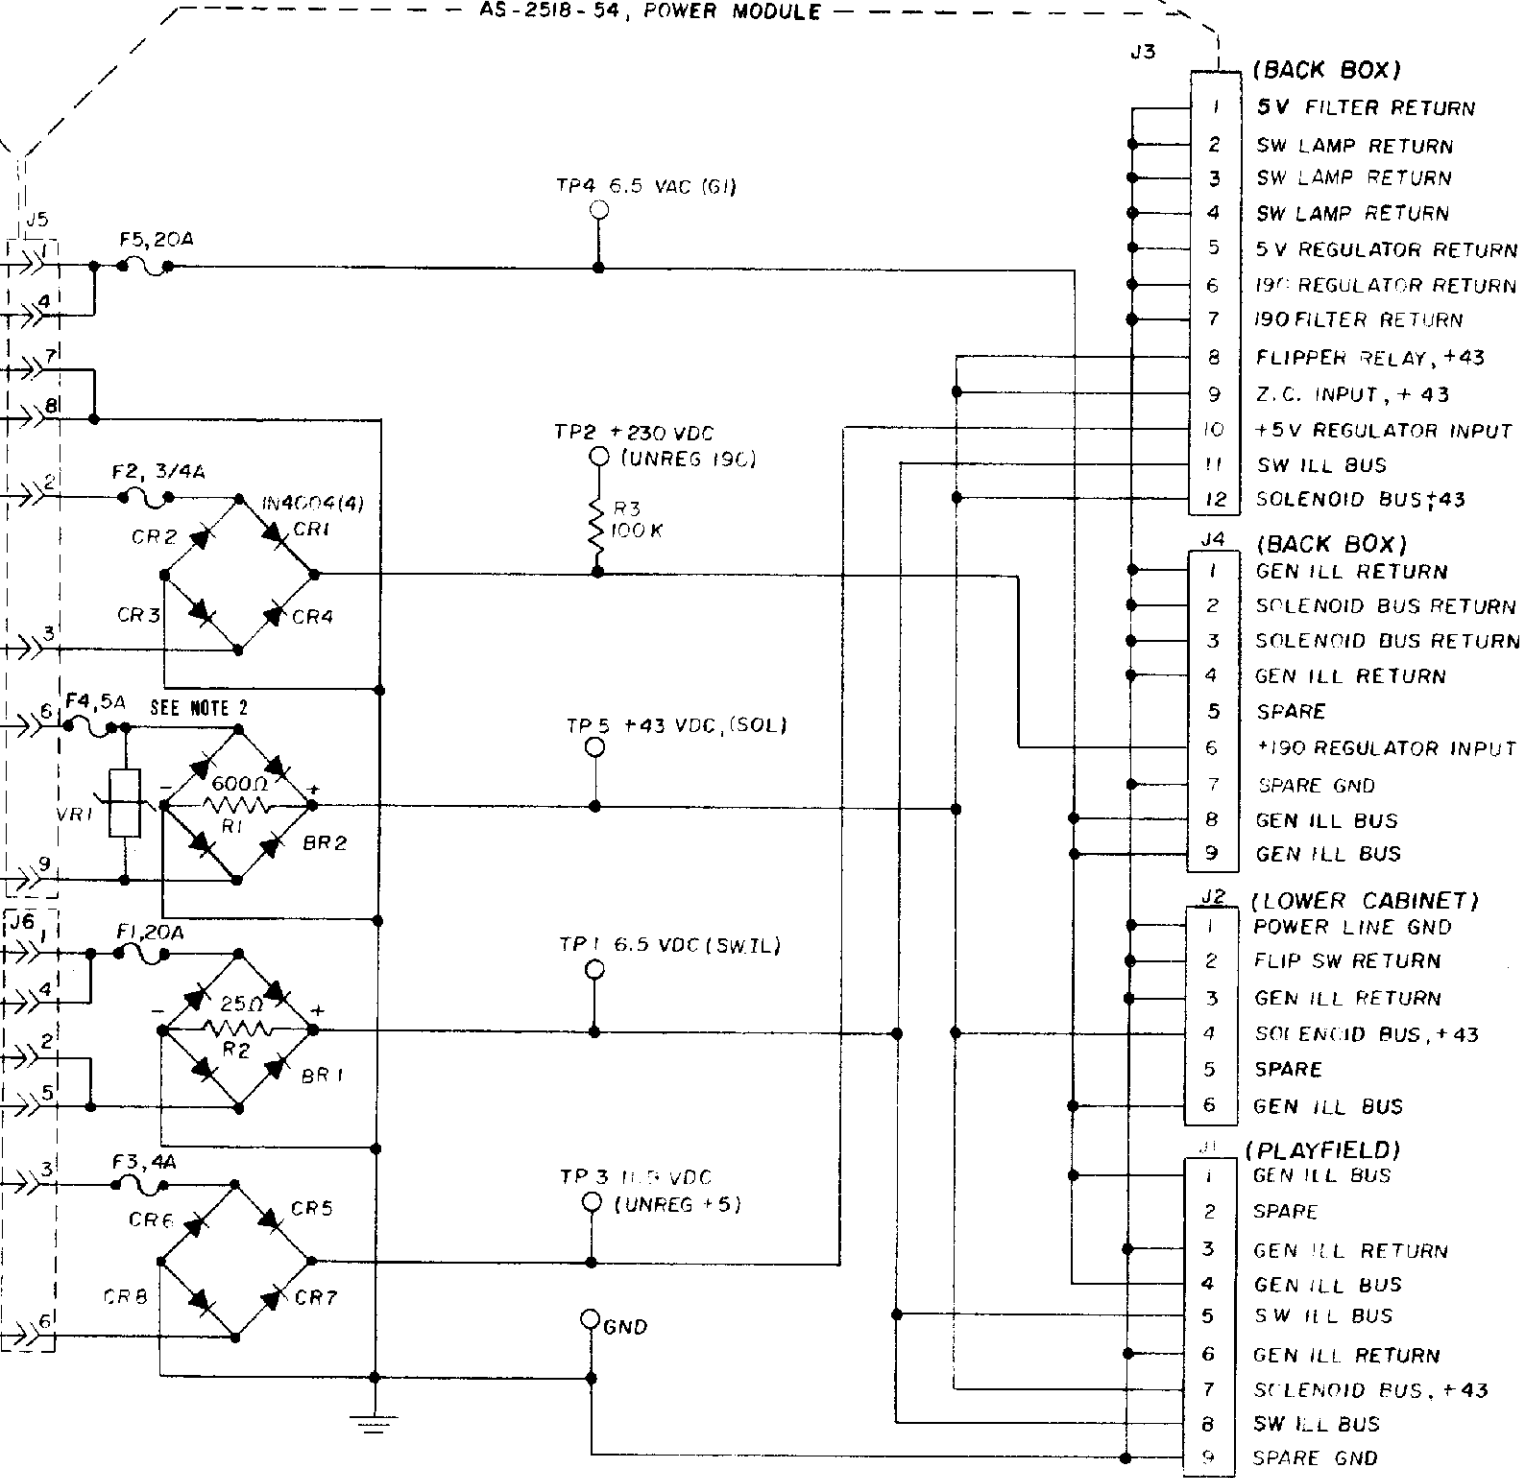

ALL DESIGN, OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MFG. CORP. CHICAGO, ILL. THIS INFORMATION IS DISCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, REVEALED TO OR APPROPRIATED BY OTHERS. IN PART OR IN WHOLE, WITHOUT THE EXPRESS CONSENT OF THE OWNERS. THE PRINT IS LOANED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTEREST OF THE OWNERS, AND MUST BE RETURNED ON DEMAND.

REMOVE ALL BURRS		DR. BY FFC	DATE 7-10-80	 2640 BELMONT AVENUE CHICAGO, ILLINOIS # 1196				
TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED		CK. BY AMCR	DATE 7-11-80					
FRACTIONS ± .008		AP'D BY	DATE	PRINT CONTROL	DIE SIZE	C.C.	FT. PER M.	LBS. PER M.
DECIMALS ± .003		AP'D BY	DATE	NAME POWER SUPPLY SCHEMATIC		ASSEM. NO. USED		SCALE
EXCEPT HOLE DIA'S		FINISH:		MATERIAL		PART NO.		W-1233
ANGLES ± 1/2°		HARDENING:		CODE		W-1233		
CHANGE	DATE	BY	DO NOT SCALE DRAWING					


DISPLAY DIGIT ENABLE

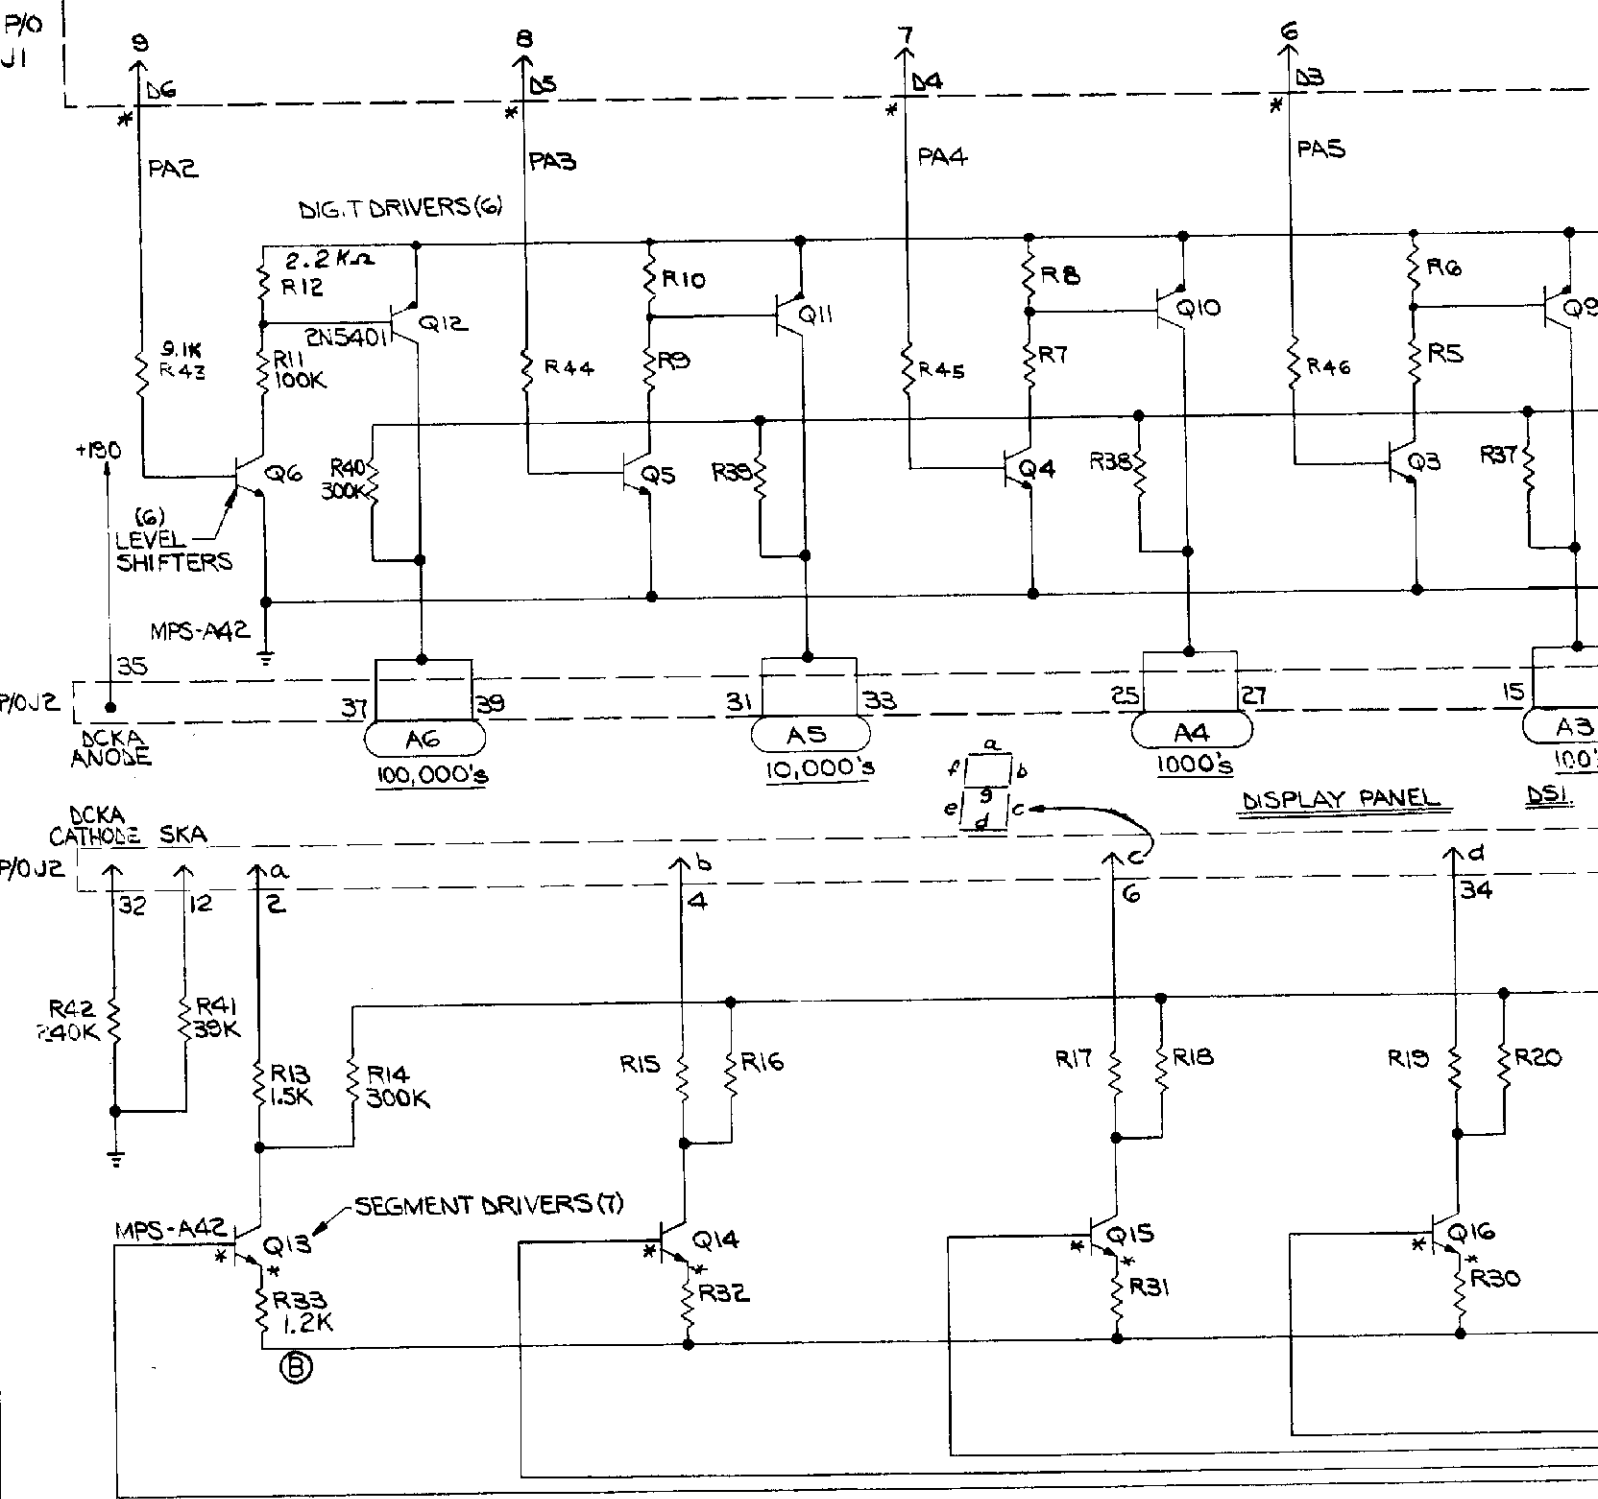

NOTES:

1. UNLESS OTHERWISE SPECIFIED ALL RESISTORS ARE ±5%, 1/4W.
2. PREFIX ALL REFERENCE DESIG. WITH ASSEMBLY REFERENCE DESIG. "A1"
3. * INDICATES 'AID' TEST POINT.


OPER.	DEPT.	DESCRIPTION	TOOL No.

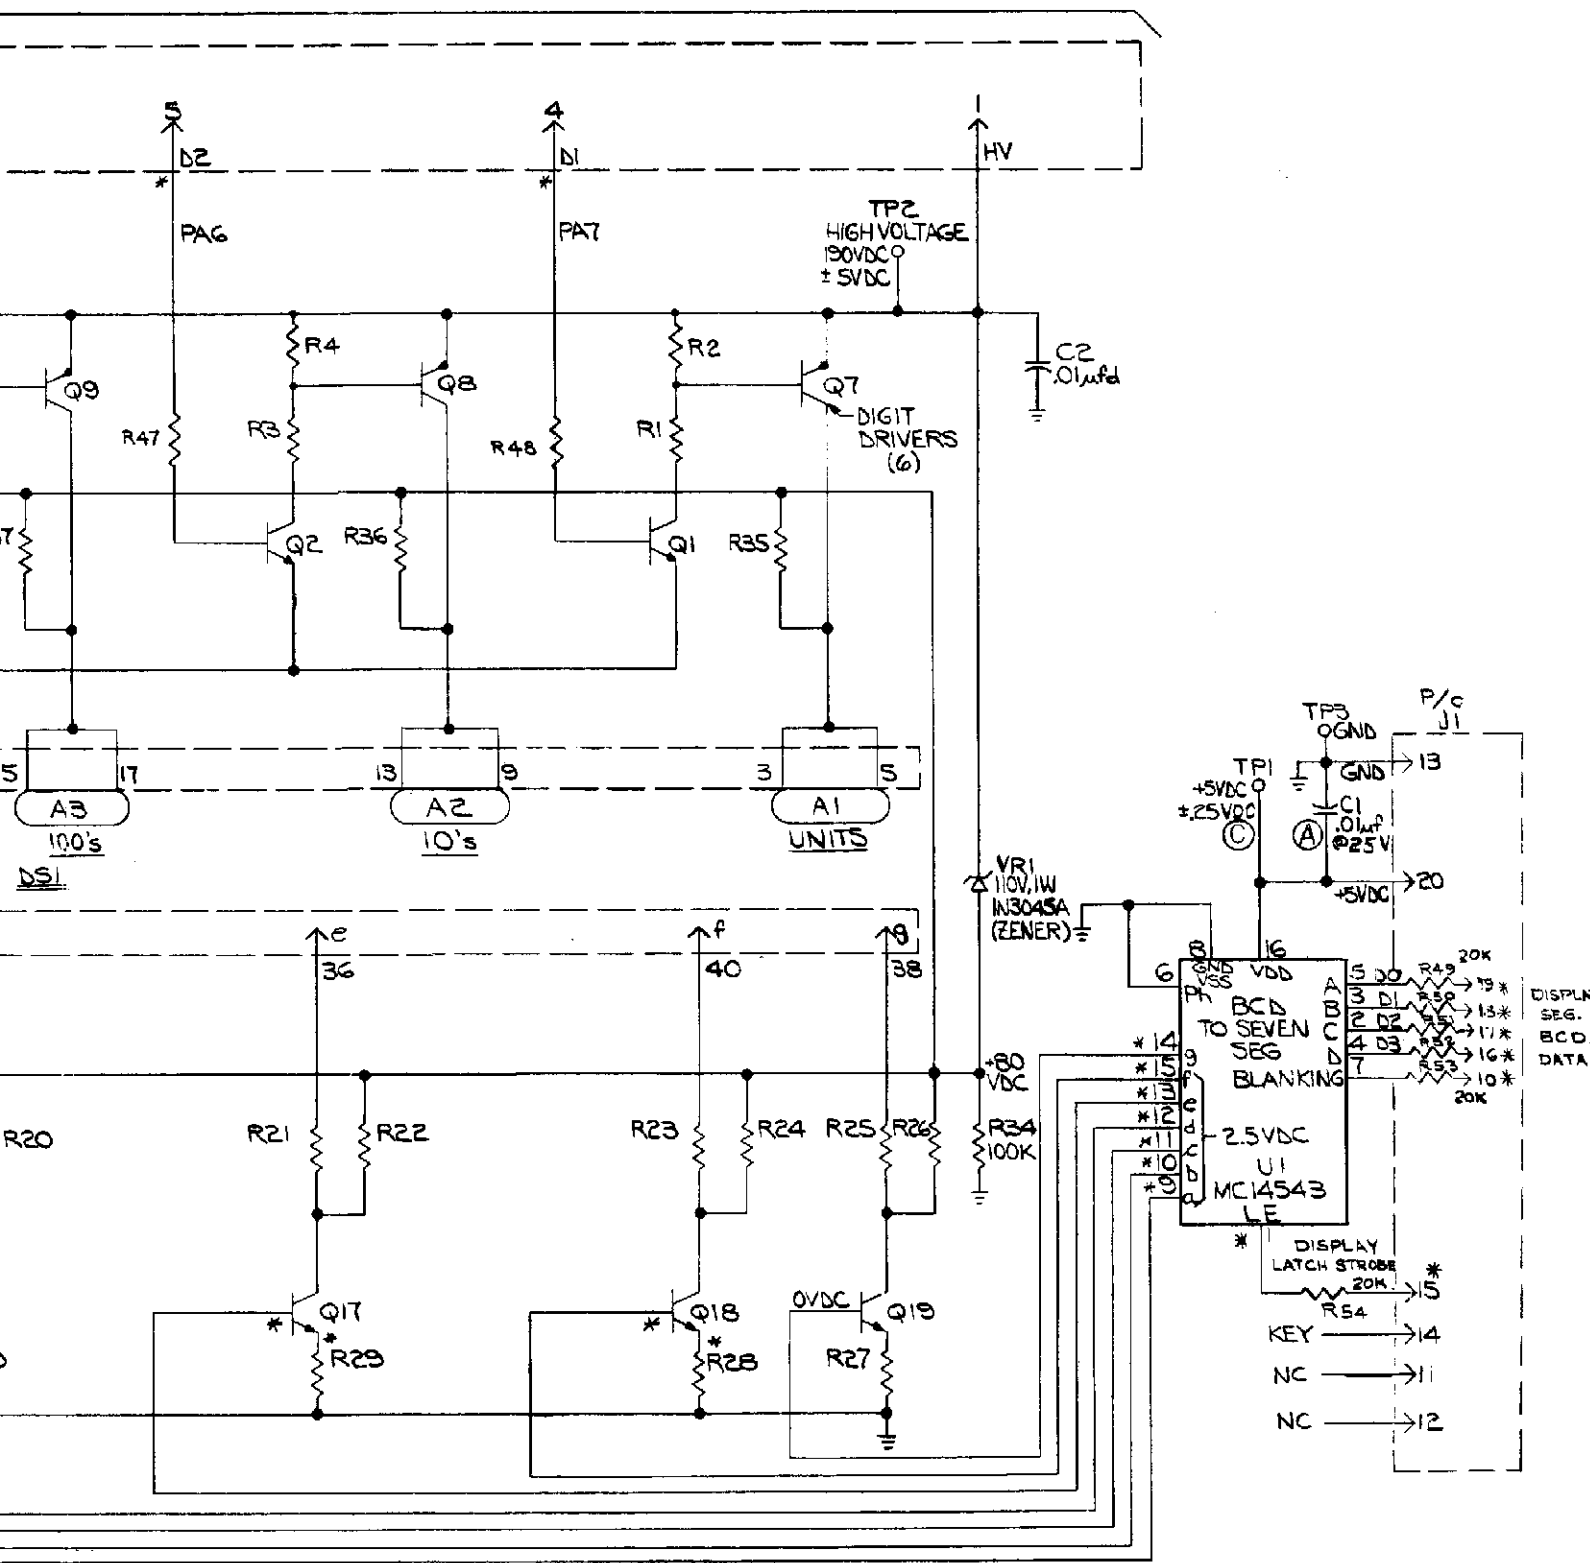

DIE SIZE — G.C. — FT. PER M — LBS. PER M —

ALL DESIGN, OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MFG. CORP., CHICAGO, ILL. THIS INFORMATION IS DISCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, REVEALED TO OR APPROPRIATED BY OTHERS, IN PART OR IN WHOLE, WITHOUT THE EXPRESS CONSENT OF THE ORIGINAL. THE PRINT IS LOANED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTEREST OF THE OWNER, AND MUST BE RETURNED ON DEMAND.

REMOVE ALL BURNS TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED FRACTIONS: DECIMALS: ANGLES: DO NOT SCALE DRAWING		DE BY DATE CE BY DATE DR BY DATE PR BY DATE FINISH:		Bally MANUFACTURING CORP. 2640 BELMONT AVENUE CHICAGO, ILLINOIS M-1827165		4/120-E ASSEMB. NO. USED ON/W AS-2518-21 PART NO. W-1184-1c											
3	C WAS VAC	620-80	J.D.	PRINT CONTROL	2000	2000	2000	2000	2000	2000	2000	2000	2000	2000	2000	2000	2000
2	B WAS 1K	32880	J.D.	NAME: 6 DIGIT DISPLAY BOARD SCHEMATIC 'A'													
1	A WAS 500V	4-179	J.D.	MATERIAL:													
NO.	LET.	CHANGE	DATE	BY	CK.												

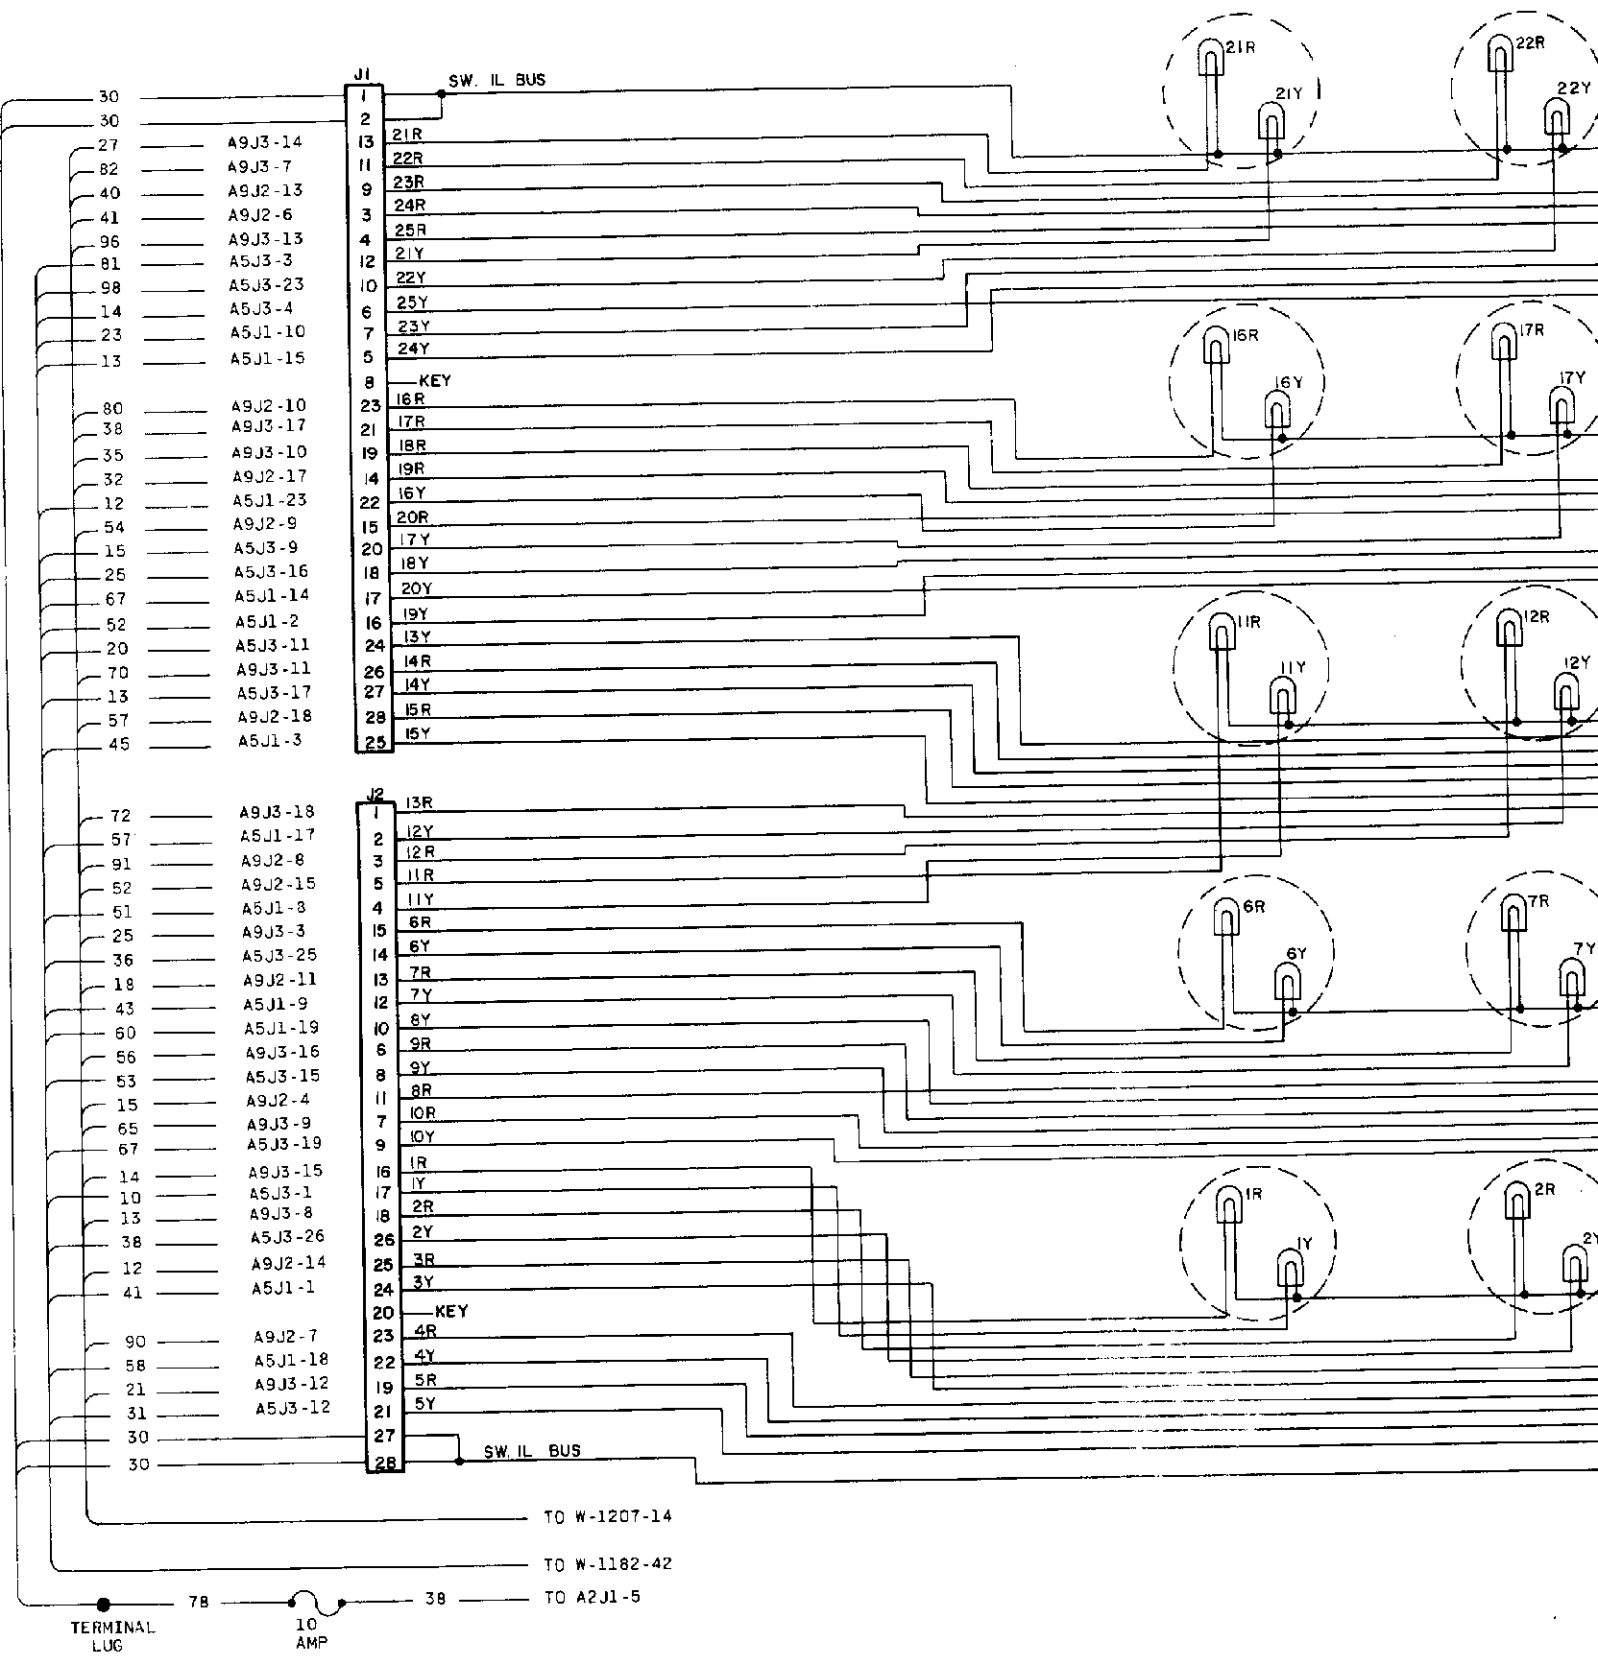

TO W-1207-14

TO W-1182-42

TO A2J1-5



TERMINAL LUG

78

10 AMP


38

P/O J4

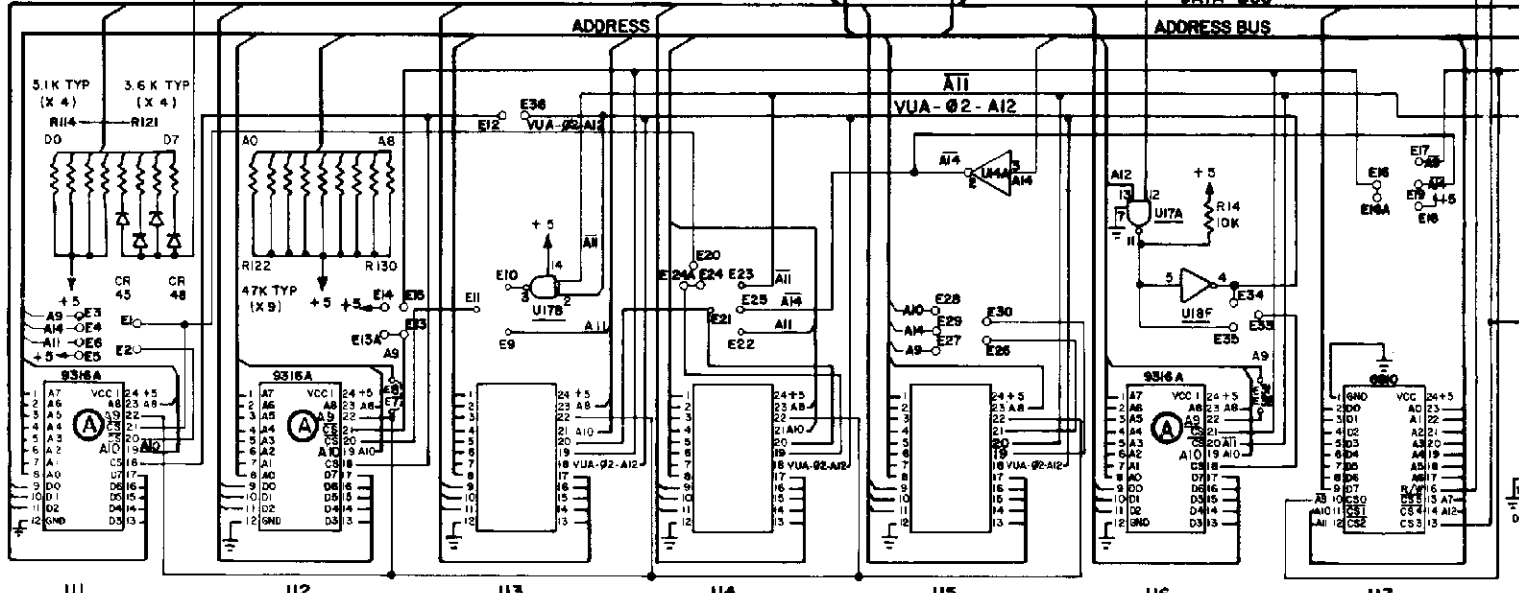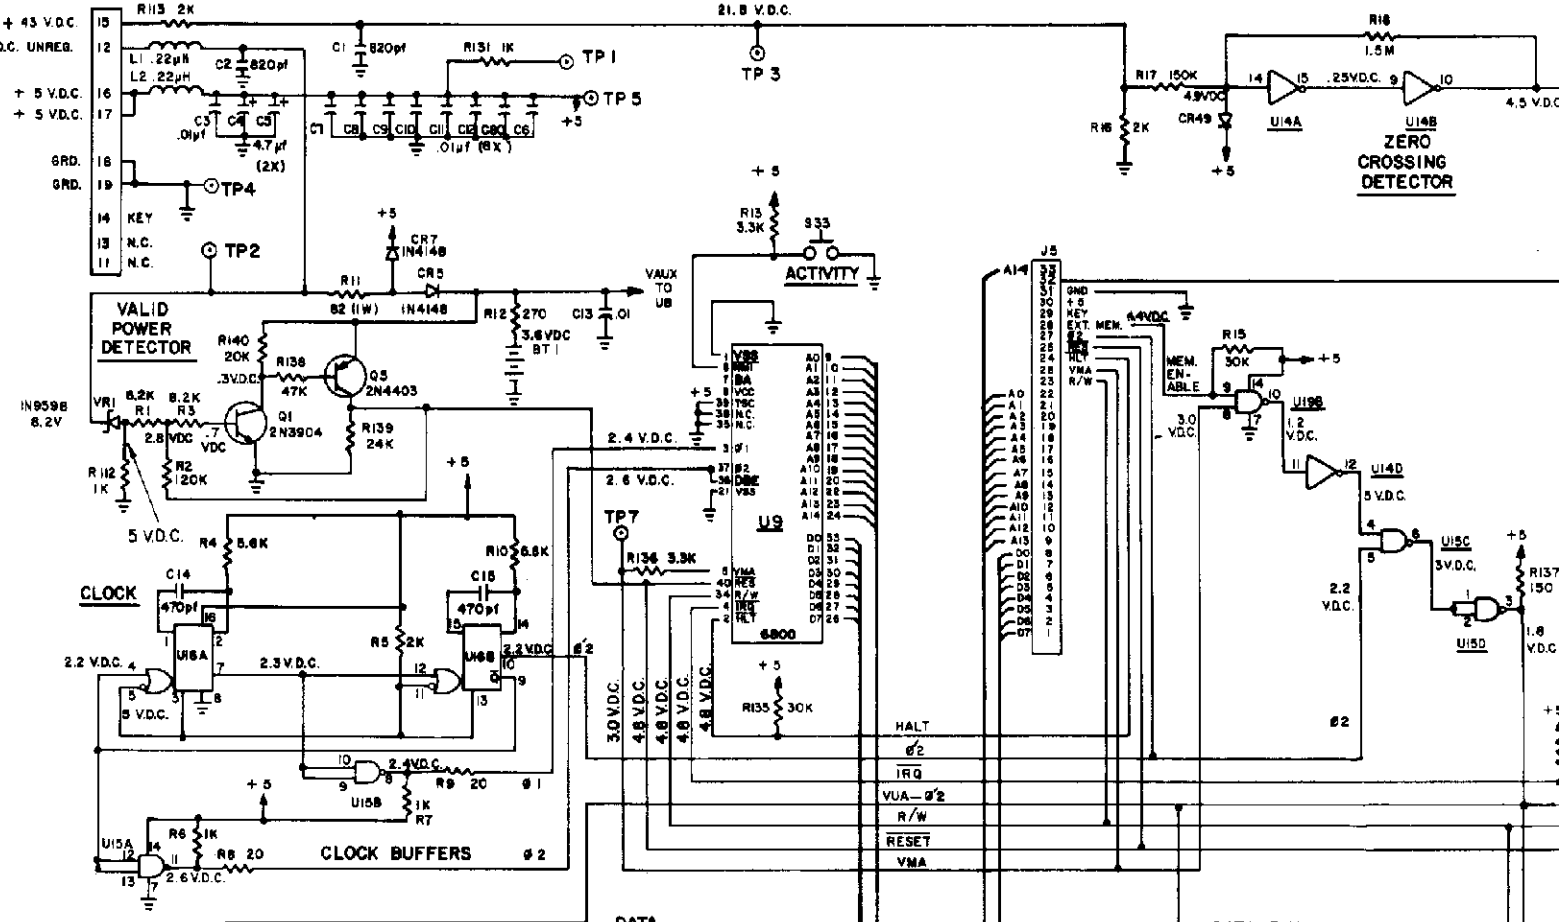


NOTES

1. * INDICATES "AID" TEST POINT.
2. REMOVE A3J4 BEFORE USING AS AID TEST POINT
3. PREFIX ALL REFERENCE DESIGNATIONS WITH "A4"
4. EXACT CHIP COMPLEMENT USED IN SOCKETS U1 THRU U6 CAN VARY FOR DIFFERENT GAMES AND PRODUCTION LOTS. TABLES OF MEMORY CHIPS AND CORRESPONDING JUMPERS FOR DIFFERENT GAMES AVAILABLE FROM BALLY FIELD SERVICE DEPARTMENT.

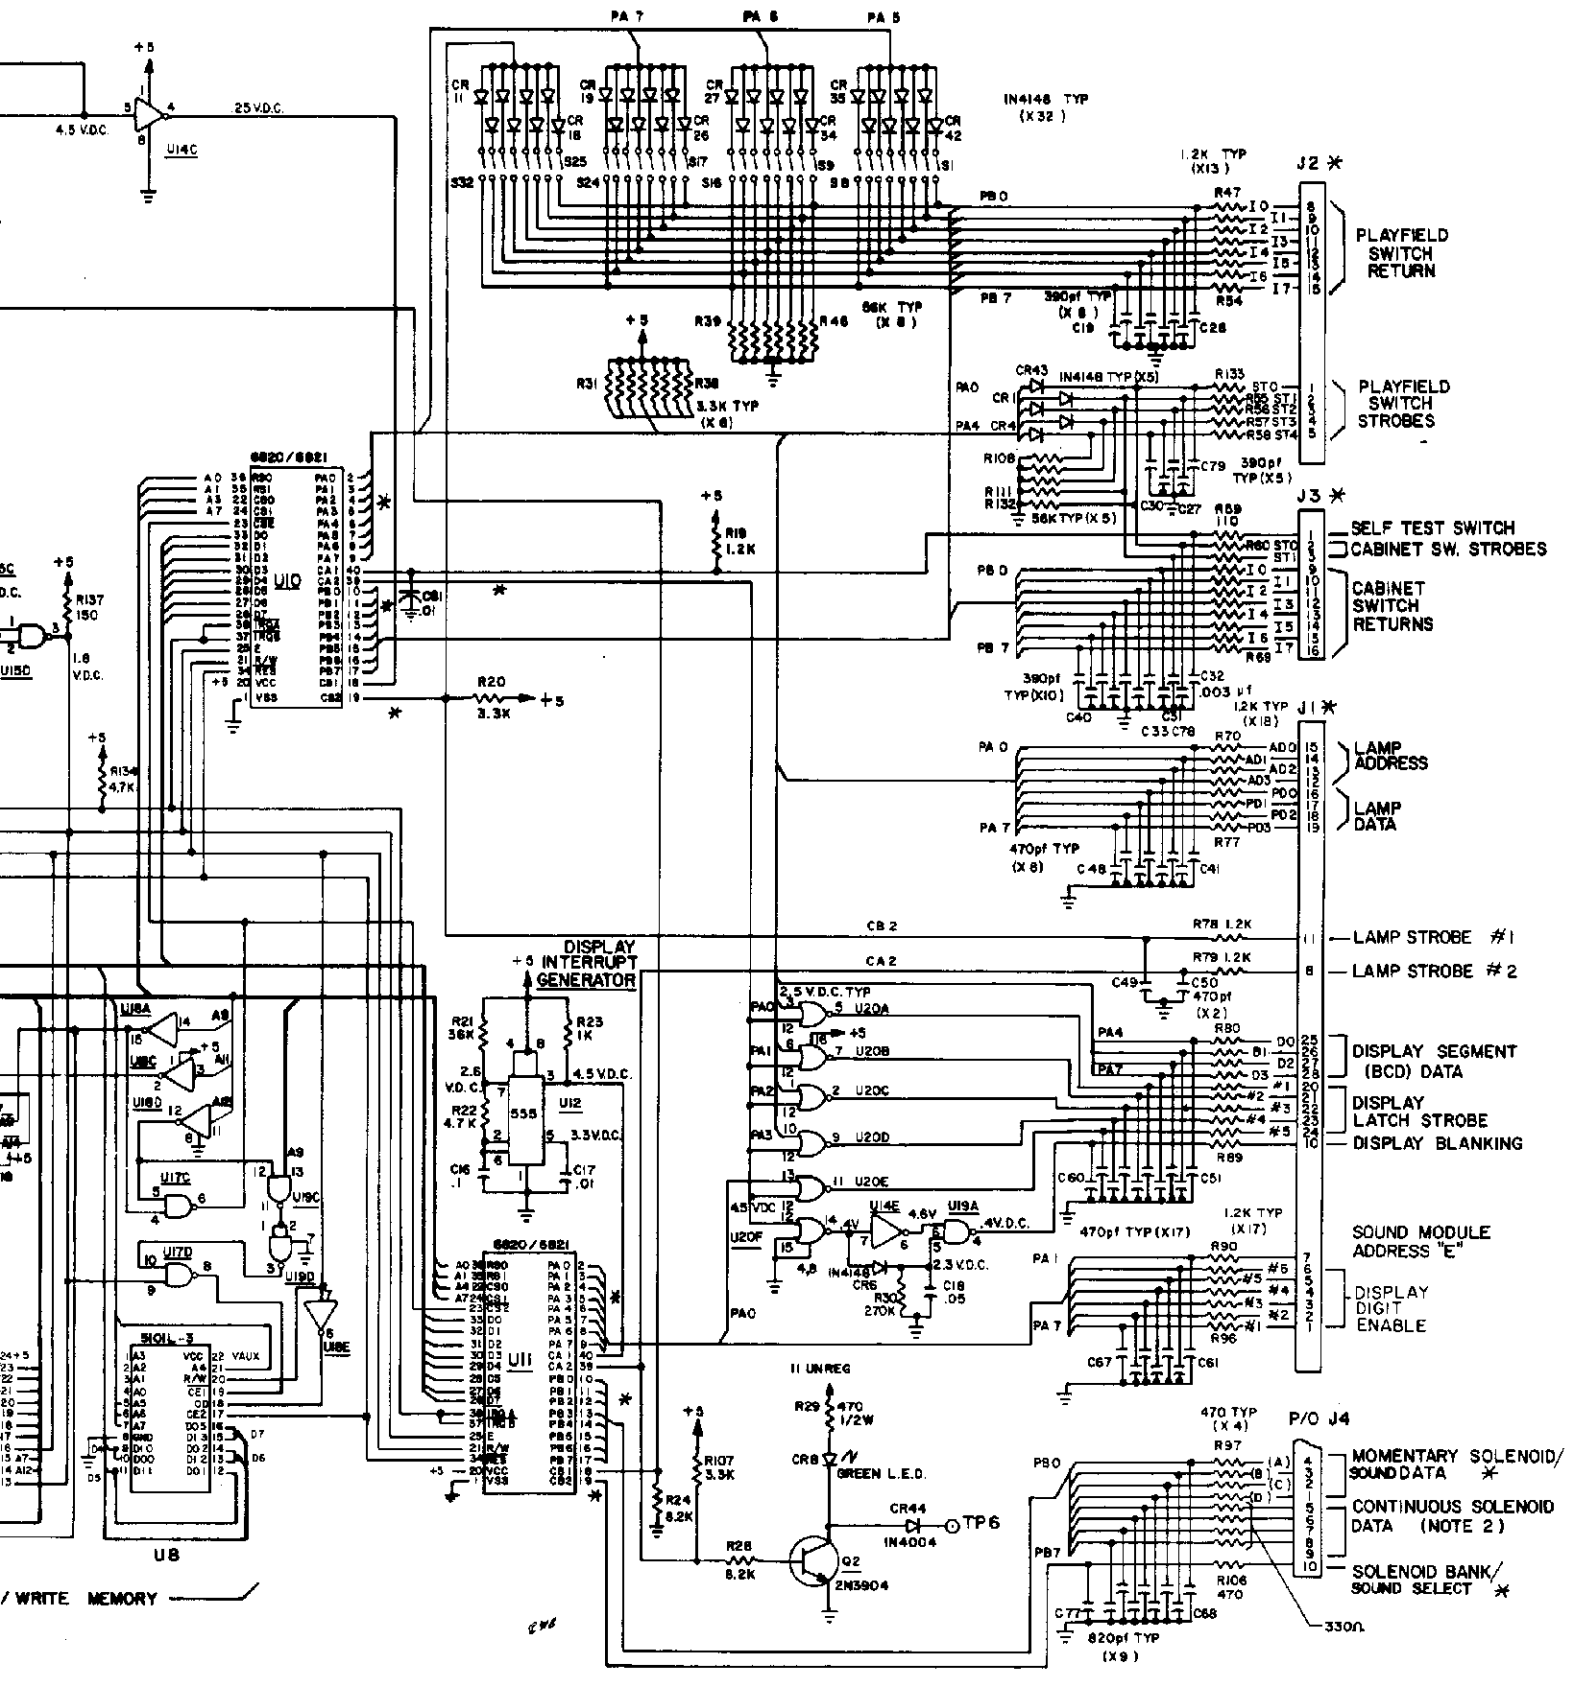

ALL DESIGN, OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MFG. CORP., CHICAGO, ILL. THIS INFORMATION IS DISCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, REVEALED TO OR APPROPRIATED BY OTHERS, IN PART OR IN WHOLE, WITHOUT THE EXPRESS CONSENT OF THE OWNER. THIS PRINT IS LOANED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTEREST OF THE OWNER, AND MUST BE RETURNED ON DEMAND.

<p>REMOVE ALL BURRS</p> <p>TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED FRACTIONS - 1/64 DECIMALS - .005 ANGLES - 1</p> <p>DO NOT SCALE DRAWING</p>				<p>DR. BY DATE 5-11-78</p> <p>EV BY DATE 5-15-78</p> <p>CHK BY DATE</p> <p>APP'D BY DATE</p> <p>ARTICLE DATE</p> <p>FINISH:</p> <p>HARDENING:</p>		<p>Bally MANUFACTURING CORP.</p> <p>2640 BELMONT AVENUE CHICAGO, ILLINOIS 60618</p> <p>PART NO. 1119-E</p> <p>NAME: M.P.U. CONTROL BOARD SCHEMATIC</p> <p>MATERIAL:</p>		<p>TOTAL SCALE</p> <p>ASSEMBLY USED ON W</p> <p>W-1181-3c</p>	
No.	LET.	CHANGE	DATE	BY	CK.				
1	A	A3 WBS VCC2 ON U1, U2, U3, A10 WBS CS	12-78	ST					

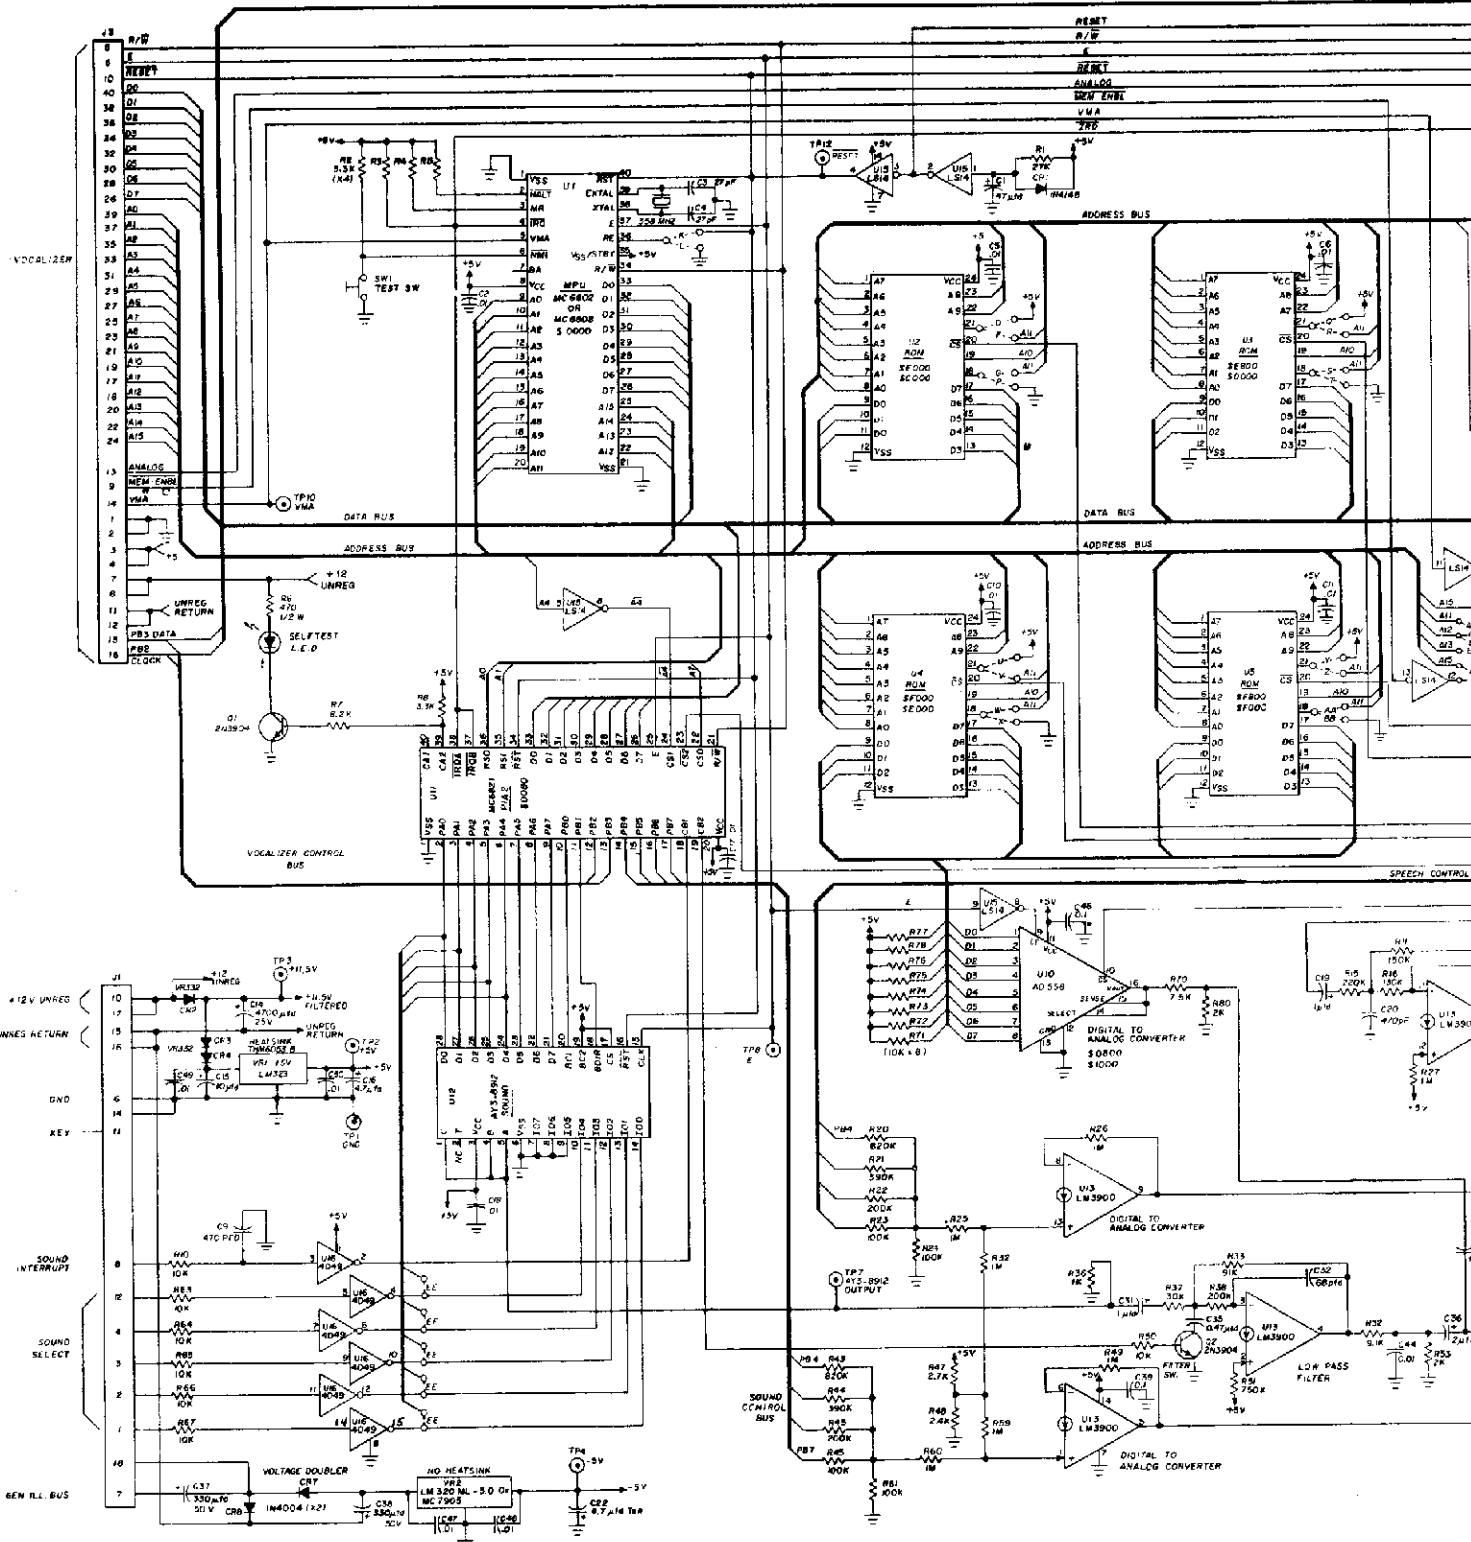


NOTES:
 1. UNLESS OTHERWISE INDICATED ALL RESISTOR VALUES ARE IN OHMS.

LAST NUMBERS USED
 RB8
 CB1
 CR10
 UB8
 YB2
 OB
 TP12
 FF

SQUAWK B TALK TEST POINTS
 TP1- GND
 TP2- +5VDC
 TP3- -11.5VDC
 TP4- +5VDC
 TP5- SPEECH VOL/UNE CONTROL VOLT/ABC
 TP6- SOUND VOLUME CONTROL VOLTAGE
 TP7- AYS-8912 OUTPUT
 TP8- E PULSE
 TP9- TMS 5200 OUTPUT
 TP10- VMA
 TP11- TMS 5200 CLOCK
 TP12- RESET

SQUAWK B TALK JUMPER
 FROM-ROW JUMPER
 27K 33K A,B,D,H,Q,T,U,Y,X,BB
 2532 9332 C,E,G,I,S,U,W,X,AA
 NO VOCALIZER H WITH VOCALIZER H
 6508 MPU L (WITH 6810 RAM)
 6502 MPU K (NO 6810 RAM)
 NO AYS-8912 EE
 NO 'SAY IT AGAIN' FF

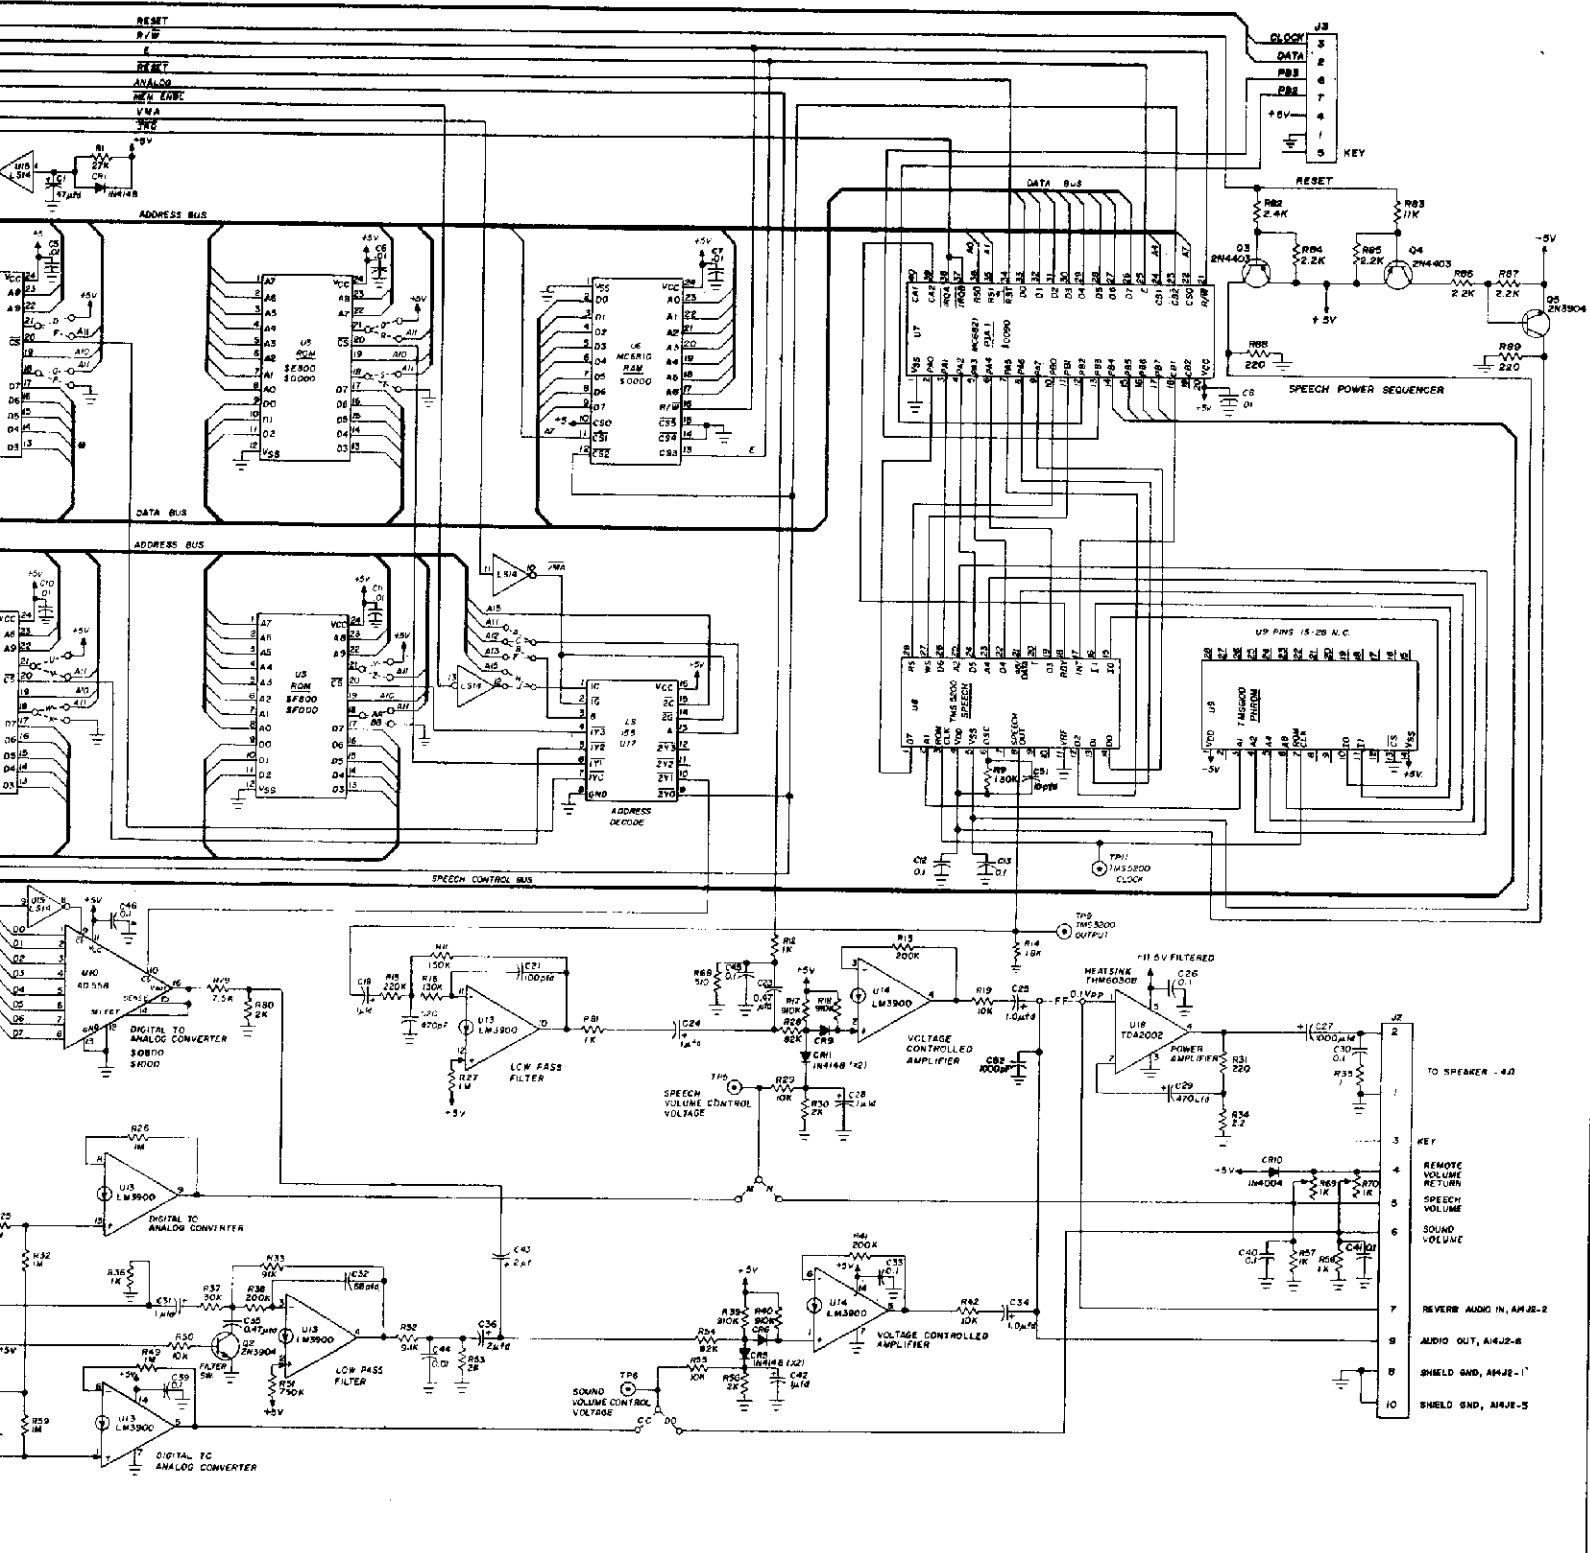

TEST POINTS
 TP1 - 4Y3-8W2 OUTPUT
 TP2 - E PULSE
 TP3 - TMS 5200 OUTPUT
 TP4 - VMA
 TP5 - TMS 5200 CLOCK
 TP6 - RESET

SQUAWK & TALK JUMPERS
 FROM - ROM JUMPERS
 2716 0346 A,B,D,G,H,T,U,V,X,BB
 2532 9332 C,F,G,O,S,U,W,Y,AA
 NO VOCALIZER M
 WITH VOCALIZER J
 6808 MPU L (WITH 6810 RAM)
 6802 MPU K (NO 6810 RAM)
 NO 4Y3-8W2 EE
 NO 'SAY IT AGAIN' FF

COMPUTER VOLUME CONTROL
 CC DD

REMOTE VOLUME CONTROL
 CC DD

SPEECH SOUND
 CC DD

THE INFORMATION CONTAINED HEREIN IS FURNISHED IN CONFIDENCE TO THE ADDRESSEE AND IS THE PROPERTY OF BILLY MANUFACTURING CORP. IT IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED AND IS NOT TO BE DISSEMINATED OR REPRODUCED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF BILLY MANUFACTURING CORP.



BILLY MANUFACTURING CORP.
 348 BELMONT AVENUE
 CHICAGO, ILLINOIS 60618

DATE: 12/83
 DRAWN BY: [Signature]
 CHECKED BY: [Signature]
 APPROVED BY: [Signature]

REVISIONS:
 1. ADDED CAP 32


ASSEMBLY NO. USED: AS-2518-8/B
 SCALE: 1/8" = 1"

W-1250-2-B

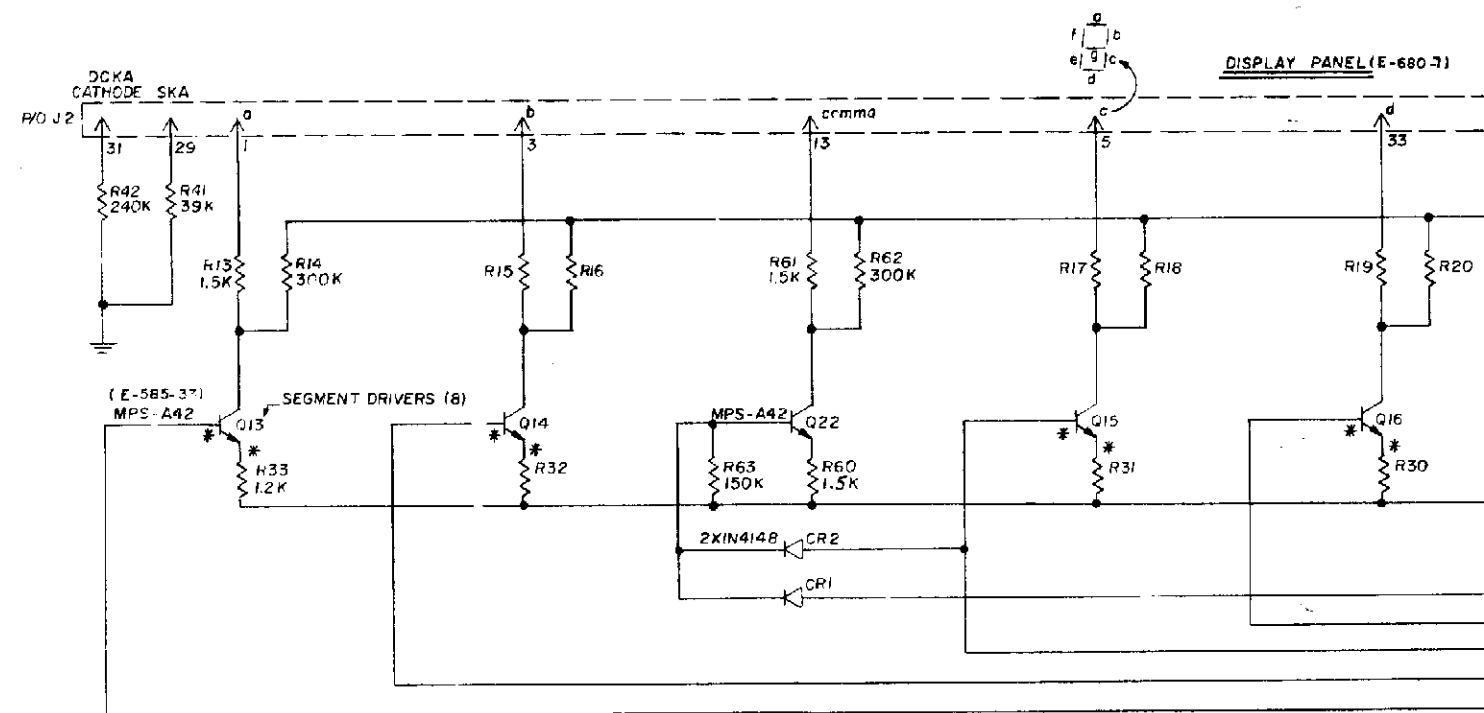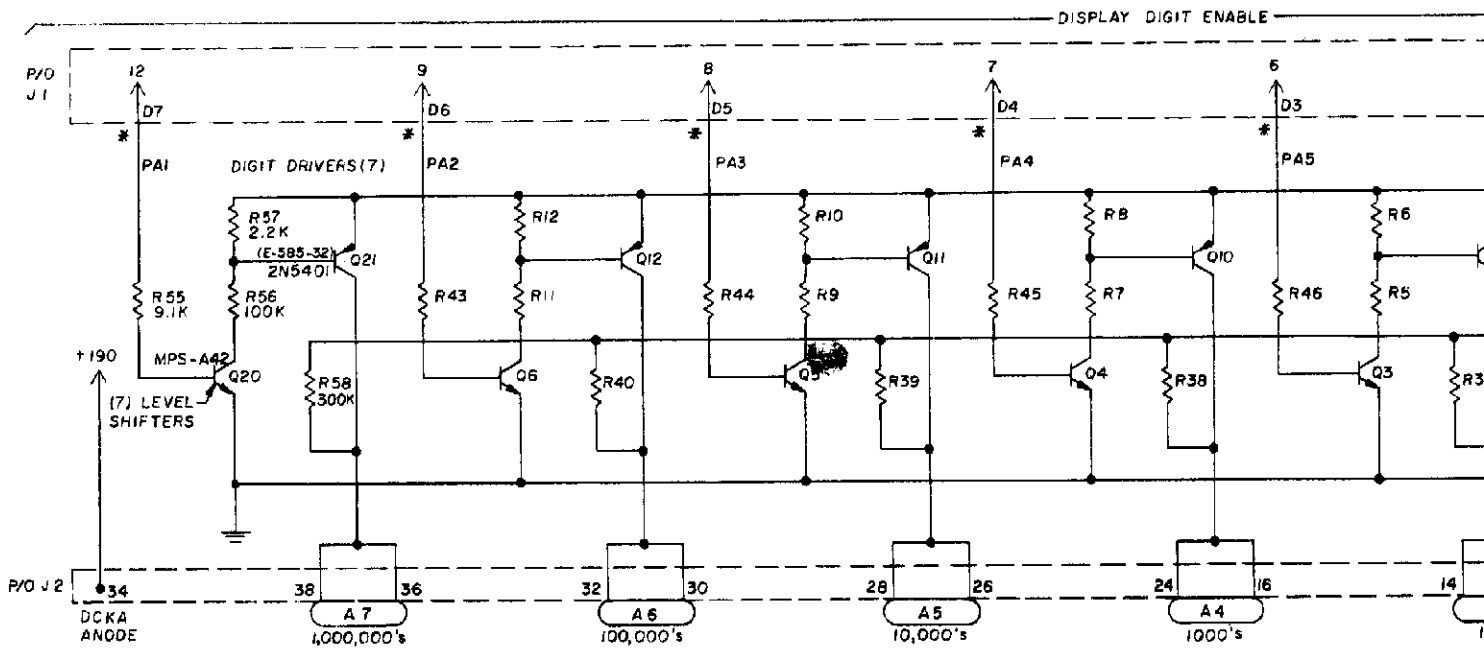

* INDICATES "AID" TEST POINT.

- NOTES:
1. UNLESS OTHERWISE SPECIFIED ALL RESISTORS ARE $\pm 5\%$, $1/4$ W.
 2. PREFIX ALL REFERENCE DESIG. WITH ASSEMBLY REFERENCE DESIG. "A 1".

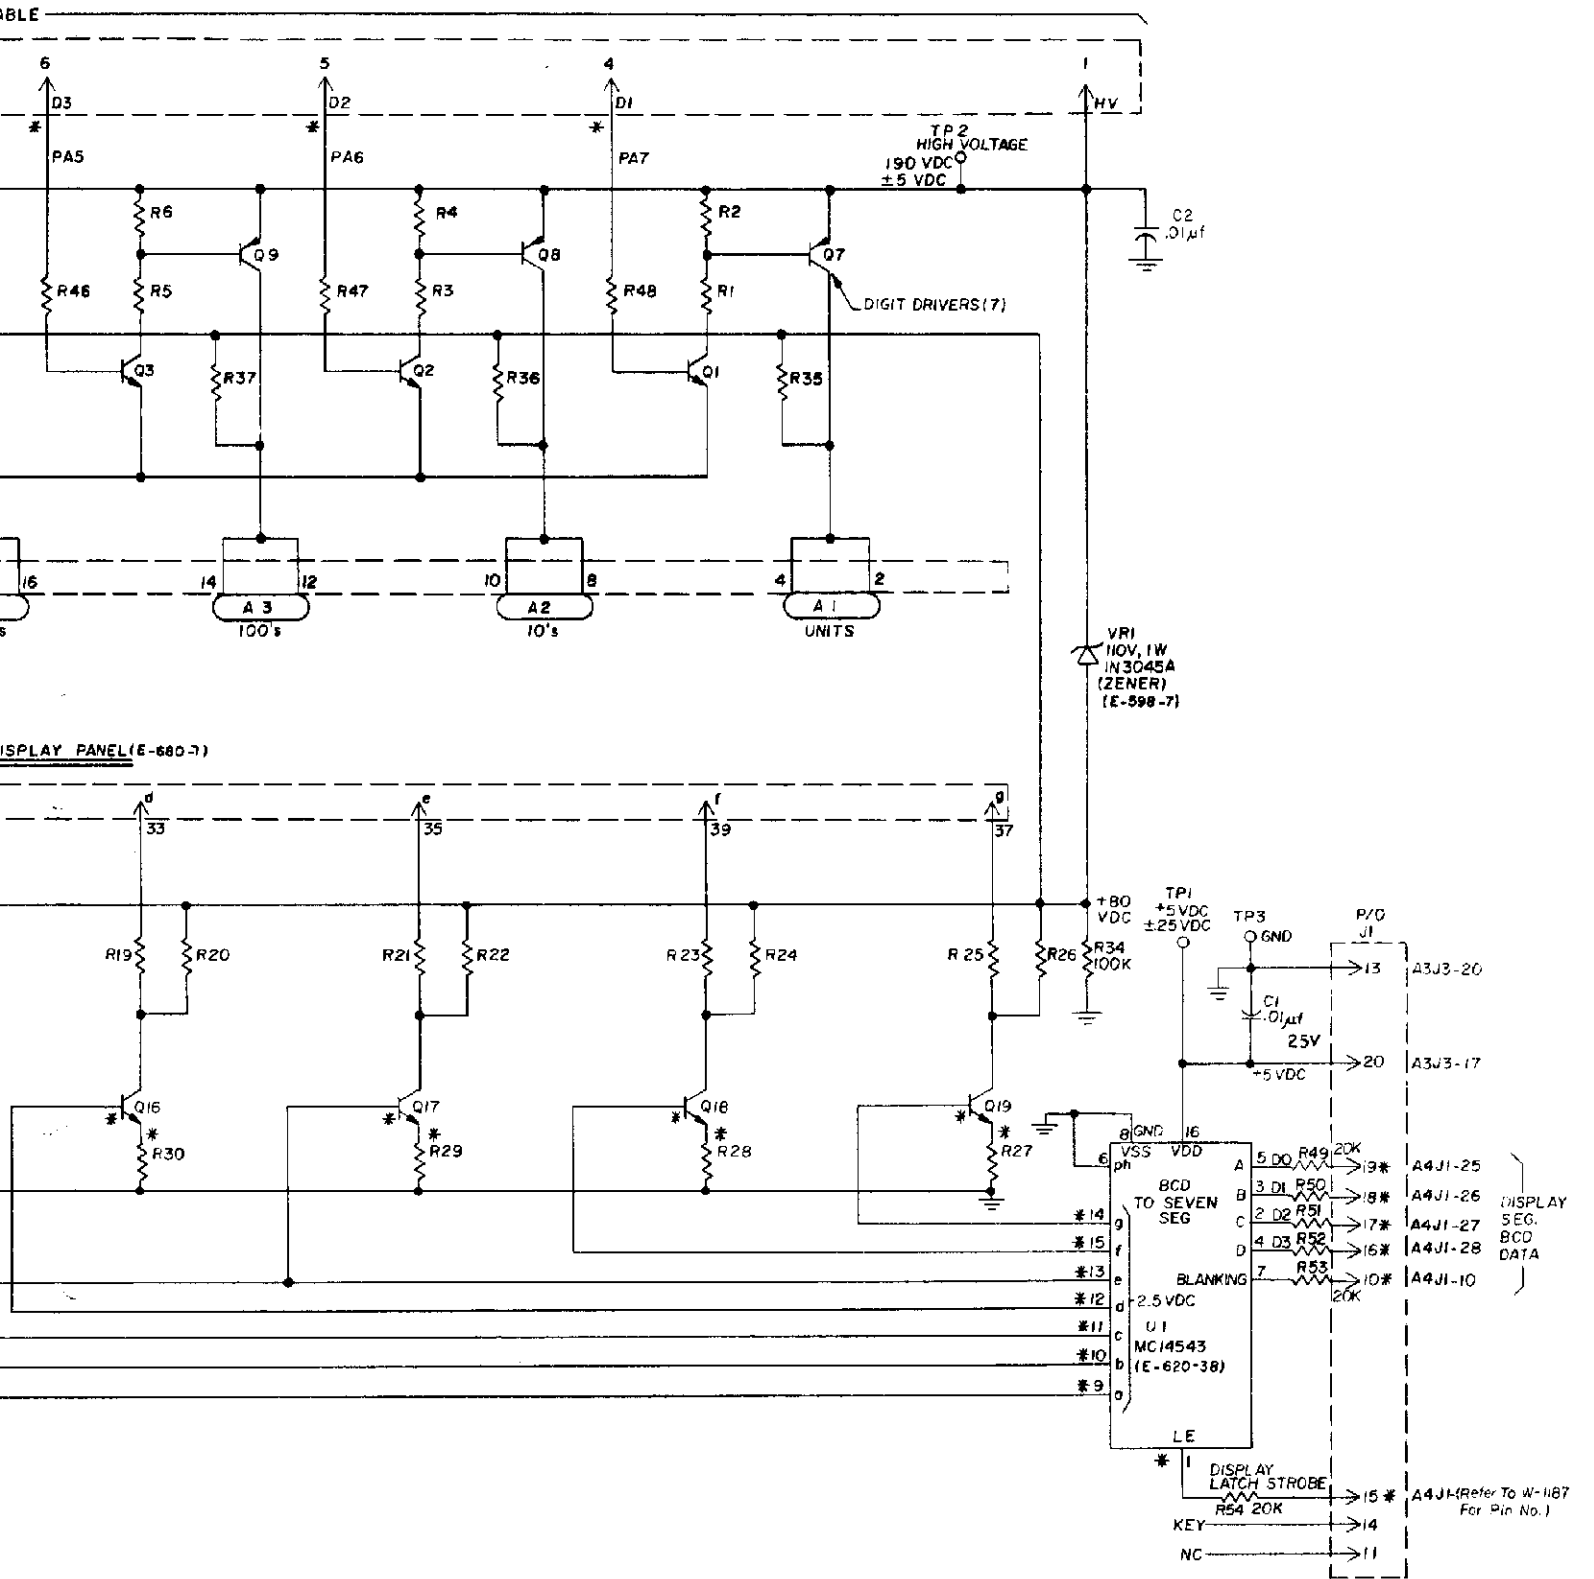

ALL DESIGN, OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MFG CORP CHICAGO, ILL. THIS INFORMATION IS DISCLOSED IN CONFIDENCE AND IS NOT TO BE COPIED, REPRODUCED, RENTED TO OR APPROPRIATED BY OTHERS IN ANY MANNER WITHOUT THE EXPRESS CONSENT OF THE COMPANY. THE PRINT IS LOANED AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THE INTEREST OF THE OWNERS, AND MUST BE RETURNED ON DEMAND.


REMOVE ALL BUBBS		DR. BY FFC	DATE 6-18-0	 2840 BELMONT AVENUE CHICAGO, ILLINOIS #1210	
TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED		CK. BY CPC	DATE 6-18-0		
FRACTIONS = 008		APP'D BY	DATE	PRINT CONTNOX	DIE SIZE
DECIMALS = .003		AD'D BY	DATE	NAME	C.C.
EXCEPT HOLE DIA'S		FINISH:		7 DIGIT DISPLAY BOARD	FT. PER M.
ANGLES = 1/2"		HARDENING:		SCHEMATIC "A1"	LBS. PER M.
DO NOT SCALE DRAWING				MATERIAL	ASSEM. NO. USED
NO.	LET.	CHANGE	DATE	CODE	AS-2518-58
					PART NO.
					W-1184-20

PLAYFIELD MYLAR PROTECTORS

FO-589

ENCLOSED ARE TWO MYLAR PROTECTORS WHICH MAY BE ATTACHED TO THE PLAYFIELD IN FRONT OF THE SLINGSHOT KICKERS AS SHOWN IN SKETCH. THESE WILL HELP TO PRESERVE PAINT FINISH IN FRONT OF SLINGSHOTS.

TO APPLY, SIMPLY REMOVE PAPER BACKING AND PLACE MYLAR WITH FLAT EDGE TOUCHING THE TWO SLINGSHOT POSTS.

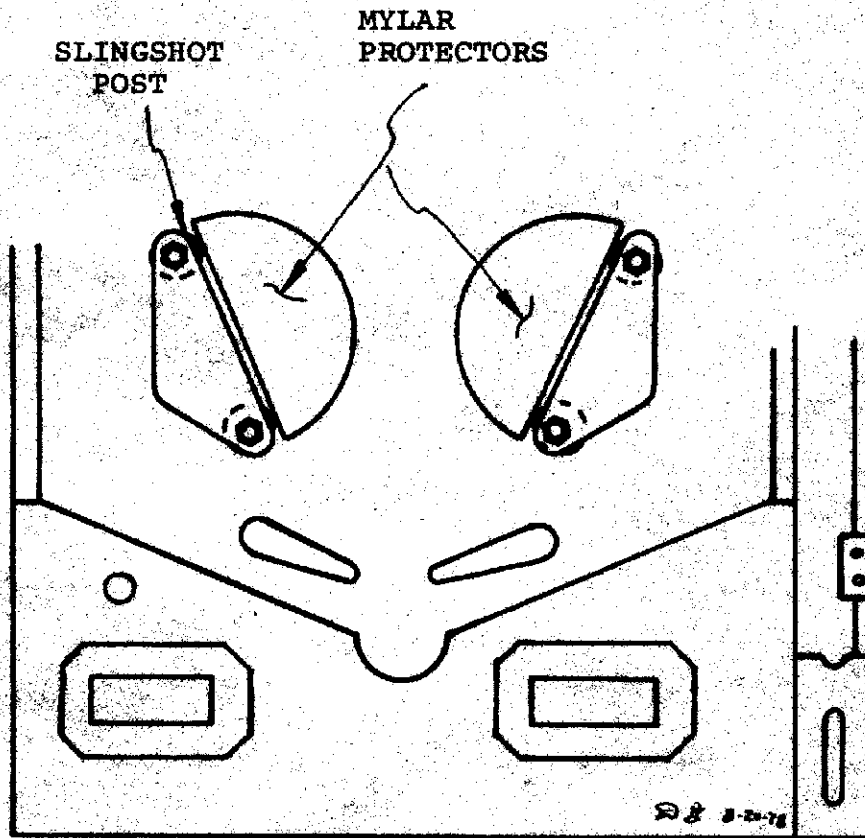

For service in the continental United States,
call toll free: (800)-323-3555;
in Illinois call: 312-860-6400.

GAME 1283
FO 737



Bally[®]

PINBALL DIVISION

90 O'Leary Drive, Bensenville, Illinois 60106, U.S.A.
Telephone: (312) 860-6400

© BALLY MFG. CORP. 1982
ALL RIGHTS RESERVED




Installation and General Game Operation Instructions

INDEX

	PAGE
I. INSTALLATION	1
II. GENERAL GAME OPERATION	2
III. BOOKKEEPING FUNCTIONS	3
IV. FEATURE OPERATION AND SCORING	4
V. GAME ADJUSTMENTS	5
A. PLAYFIELD ADJUSTMENTS	5
B. BACKBOX ADJUSTMENTS	5
CREDITS/COIN	5
MAXIMUM CREDITS	6
BALLS/GAME	6
MATCH FEATURE OPTION	6
CREDIT DISPLAY	6
HIGH SCORE FEATURE OPTION	6
HIGH SCORE TO DATE	6
GAME FEATURE OPTIONS	7
SOUND OPTION	7
C. FRONT DOOR GAME ADJUSTMENTS	
HIGH SCORE FEATURE	8
HIGH SCORE TO DATE FEATURE	8
VI. RECOMMENDED SCORE CARDS	11
VII. RECOMMENDED SETTINGS	12
VIII. ROUTINE MAINTENANCE ON LOCATION	13
IX. TROUBLE SHOOTING ON LOCATION	13
X. SERVICE/PARTS	19
XI. PARTS LIST	20-35

BLOCK DIAGRAM—ELECTRONIC PINBALL GAME

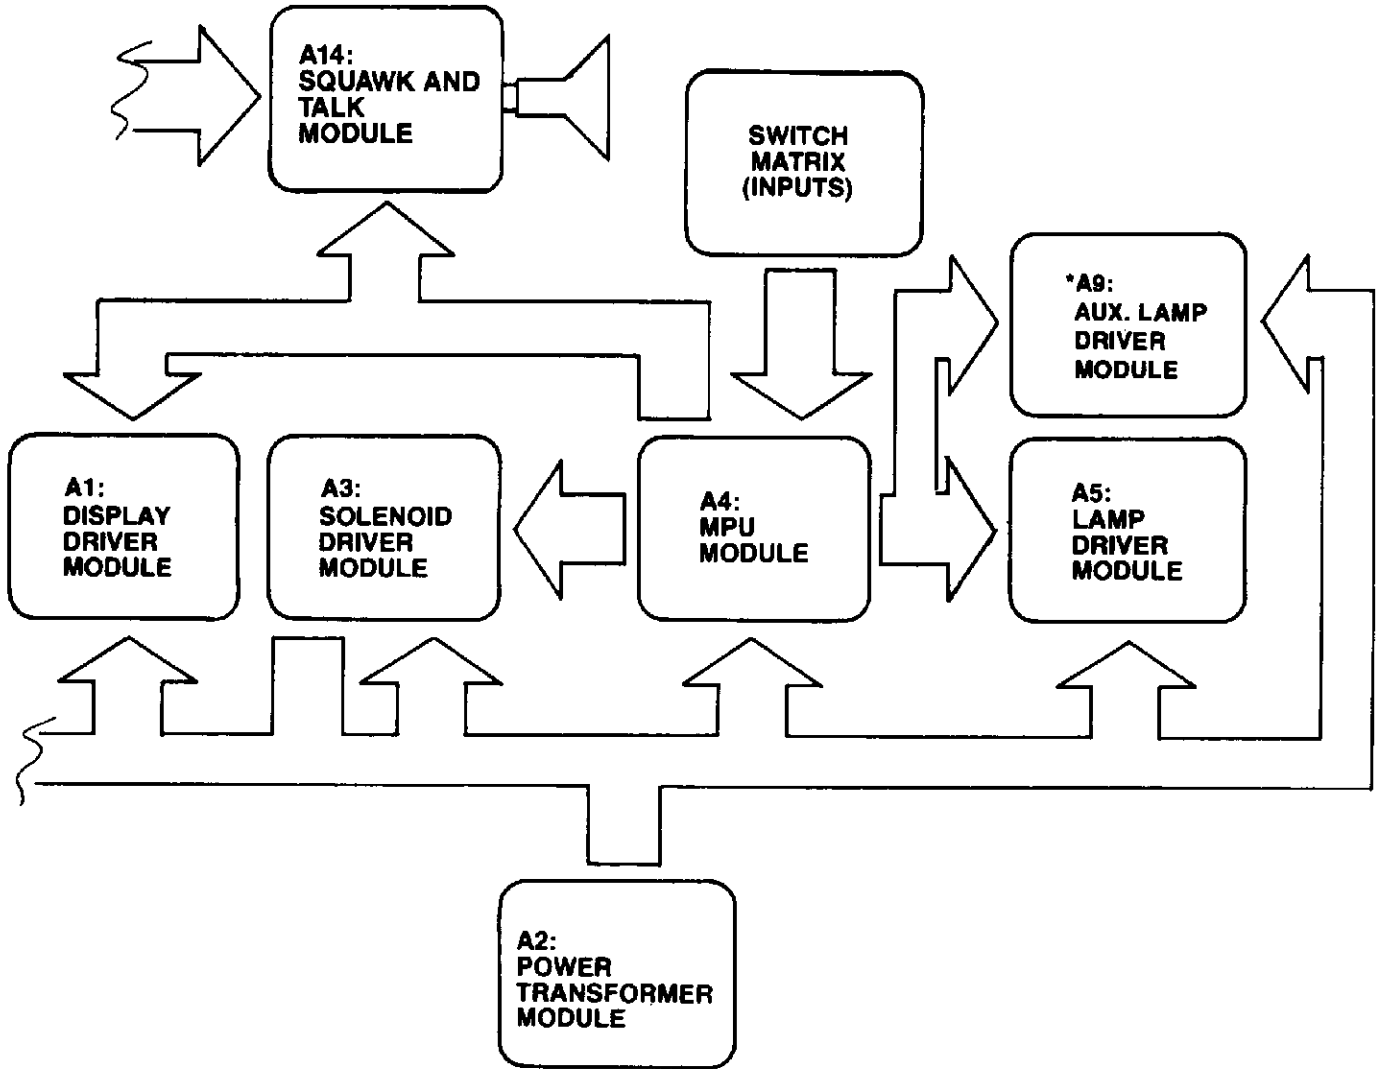

I. INSTALLATION

Assemble the game as follows:

Bolt legs to cabinet. Bolt back box to cabinet. Use flat washers under bolt heads. Gently feed cable connectors and ground braid through cable port in back box. Screw ground braid to braid in back box. Carefully and fully insert connectors on printed circuit assemblies.

On all games there are certain items that should be checked after shipment. These are visual inspections which may avoid time consuming service work later. Minor troubles caused by abusive handling in shipment are unavoidable. Cable connectors may be loosened, switches (especially tilt switches) may go out of adjustment. Plumb bob tilt switch should always be adjusted after game is set on location and leg levelers are adjusted.

Visual inspections before plugging in line cord:

1. Check that all cable connectors are completely seated on printed circuit assemblies.
2. Check that cables are clear of all moving parts.
3. Check for any wires that may have become disconnected.
4. Check switches for loose solder or other foreign material that may have come loose in shipment and could cause shorting of contacts.
5. Check wires on coils for proper soldering. Cold solder connections may not show up in factory inspection, but vibration in shipment may break contact.
6. Check that fuses are firmly seated and making good contact.
7. Check the transformer for any foreign material shorting across wiring lugs.
8. Check wiring of transformer to correspond to location voltage. See figure 1.

Check adjustment of the three (normally open) tilt switches:

1. Panel tilt on bottom of playfield panel.
2. Plumb bob tilt on left side of cabinet near front door.
3. Ball tilt above plumb bob tilt. Insert the smaller ball (15/16" dia.) into the ball tilt assembly, and adjust the bracket so the ball will roll free to contact the switch blade, if front of cabinet is raised.

TRANSFORMER CONNECTION INSTRUCTIONS

**REFER TO POWER SUPPLY SCHEMATIC
IN GAME MANUAL FOR TABLE "A"**

115 VAC, 2-8, 3-6, 7-10
120 VAC, 2-8, 4-6, 7-11
220 VAC, 4-8, 7-9
240 VAC, 4-8, 7-11

PART OF POWER—TRANSFORMER MODULE A2, LOCATED IN LOWER CABINET

II. GENERAL GAME OPERATION

Place ball into playfield by outhole.

Coin game. Coin should be rejected. Plug in line cord. Move power ON-OFF master switch at bottom right front corner of cabinet to 'ON' position. The game will play a power-up tune to announce game-readiness. Drop targets are reset, scores are set to zero, alternating with the 'High Score to Date,' and the game is ready for play. Coin game. The game should accept the coin and post credits* for coins accepted (adjustable). Pressing the credit button on the door will cause the outhole kicker to serve the ball to the shooter alley. The 1st player-up lite is lit. A game-up tune* is played to announce play-readiness.

One player is posted each additional time the credit button is pressed (one to four can play). The credits are reduced by one each time the credit button is pressed until the credits are reduced to zero.

Shooting the ball initiates play.

The game awards all points earned by the player. If spinner is turning and scoring when the ball hits a target, the spinner and the target scores are awarded.

When the ball enters the outhole, the bonus score is added to the total score. The player-up and/or ball in play on the back box is advanced one position. The outhole kicker serves the ball to the shooter alley and play is resumed. This continues until each player has played the allowable number of balls per game (adjustable). At this time the 'Game Over' light is lit. A random Match* number appears and the 'Match' light is lit. If the number is the same as the last two digits in a player's score, a free game is awarded.

Extra balls won during the course of the game are played immediately after the player's regular ball enters the outhole. The player-up and/or ball in play on the back box are not advanced for extra ball play. Bonus score is added to the player's score before the game serves the extra ball for play.

Scoring over 10,000,000 gives "High Score to Date" award.

At the end of the game, a 'High Score to Date' is alternately flashed with all 4 player scores. If the 'High Score to Date' is beat, this feature* awards free games.

Tilting the game results in loss of a ball. The flippers, thumper-bumpers, etc., go 'dead'. Bonus points are not scored. The purpose of the tilt penalty is to discourage the player from jostling the machine in an attempt to prolong play. Game action becomes normal after the ball kicker assembly serves the ball to the shooter alley.

Slamming the machine results in loss of the game. All feature lights go out, the game goes 'dead,' and a time delay occurs. The purpose of the time delay is to discourage unnecessary abuse of the machine. After the delay, the 'Game Over' light lites and the power-up tune is played. The time delay occurs anytime one of the slam switches is made to contact. There are two factory installed slam switches, on the front door, and one on left side of cabinet. (Any number of slam switches could be installed by the operator, to meet his individual requirement.) The switch should be adjusted to have approximately 1/16" gap between the contacts. The weighted blade should be adjusted to attain the desired sensitivity. Decreasing the gap between contacts will make the switch more sensitive. Opening the gap will reduce sensitivity.

*Some tunes and features can be disabled by operator if so desired. See Back Box Adjustments.

NOTE: Scoring and feature units will differ from game to game.

III. BOOKKEEPING FUNCTIONS

The game is designed to help the operator perform certain accounting functions. The game can display the number of total plays and replays (free games). It can display the number of coins dropped down each coin chute. The bookkeeping functions are displayed on all player score displays simultaneously. An identification number, 05 to 15, appears on the Match/Ball in Play window as follows:

- 05— 00 to— 40 = Current Credits
- *06— 10000 to—99999 = Total Plays (Payed & Free Games)
- *07— 10000 to—99999 = Total Replays (Free Games)
- 08— 00 to—99999 = Game Percentage
- 09— 00 to—99999 = Total times 'High Score to Date' is beat
- *10— 10000 to—99999 = Coins Dropped thru Coin Chute #1
- *11— 10000 to—99999 = Coins Dropped thru Coin Chute #2**
- *12— 10000 to—99999 = Coins Dropped thru Coin Chute #3**
- *13— 00 to—99999 = Number of Specials awarded from Panel Specials Only
- *14— 00 to—99999 = Number of minutes of Game Play
- *15— 00 to—99999 = Number of Service Credits

The game displays the first bookkeeping entry if the Self-Test button (See Fig. III) on the inside of the front door is pressed ten times. Alternately push and release the Self-Test button at one second intervals. The number 05 appears in the 'Match/Ball in Play' window. Current credits appear on the player score displays. Each additional press of the button causes the next entry to be displayed.

After the data in each bookkeeping register is recorded, it can be set to zero simply by pressing switch button S33, located on A4, the MPU module in the back box (See Fig. III), or by pressing the Coin Chute #3 switch. Any or all registers can be cleared by alternating between the Self-Test button and the switch button S33 on the MPU module or Coin Chute #3 switch. The operator is given this option as a possible convenience and can elect to use or not use it as his needs direct.

Pressing the button 5 more times causes the game to play the power-up tune and light the Game Over light.

Service credits are designed to allow the serviceman to test the game under actual play conditions without disturbing the bookkeeping records that reside at identification numbers 06, 07, 10, 11 and 12.

To obtain Service Credits, push and release the Self-Test switch until identification number 05 appears in the 'Match/Ball in Play' window. Hold in the Credit button until the desired number of Service Credits (up to five) appears on the player score displays.

NOTE: If, upon accessing identification number 05, a number of credits greater than five is displayed, pressing the credit button has no effect.

Identification number 15 is reserved as a record of the number of Service Credits used.

*The 10,000 level is pre-set at the factory; can be set to zero, initially, if desired.

**If Coin Chute is not used in game, number displayed (if other than 00) on Player Score displays has no significance.

NOTE: If "Total Play" register is reset to zeroes then "Total Replays" register should also be reset to zeroes to maintain the game percentage value.

#1283 "PAC-MAN FEATURE & OPERATION"

Top right saucer adds 10 moves and Pac-Man aggressive when arrow flashing.

Top left 3 drop targets add 3 moves on Pac-Man, opens left gate, and lites Pac-Man aggressive when aggressive pot is lit.

Knocking down any bank of 4 drop targets adds 5 moves on Pac-Man. When all 8 drop targets light. Pac-Man lites award an extra Pac-Man. When all 5 Pac-Mans are lit, Pac-Man lites will award a special. Each lit Pac-Man target adds (1) move on Pac-Man.

Playfield 6 digit display feature:

A—2 Left digits indicate time to complete maze for one replay before it runs out. Countdown starts only when playing maze.

B—2 Center digits indicate number of times maze completed, which on last ball (at the outhole player will be awarded 250,000 points, for each number registered.

C—2 Right digits indicate number of moves Pac-Man can make when qualify to play maze. However, a minimum of 6 moves will be required for the player to be able to play the maze, providing he would land the ball in either top saucers.

Maze feature:

Playfield goes black except the maze, monster, readouts and Pac-Man direction lites. Flippers are disabled. Left flipper button will control Pac-Man directions. (Clockwise). Right flipper button will control Pac-Man move and spot. Pac-Man can go out of maze from one end and to come out from the other. However, for every move that Pac-Man makes it will take off one number on move display.

Monster always will start at any 4 corners (on random) and will not have any access to the center (safety zone).

Pac-Man always start at center.

Player will have a few seconds initially to move Pac-Man. If he has not moved by then, Pac-Man will move a step automatically, consequently the monster. However, on 1st maze monster moves only when Pac-Man moves. On 2nd plateau when Pac-Man makes his first move, monster will move automatically and will not wait for Pac-Man to move.

Pac-Man Agressive Feature:

When Pac-Man is aggressive player has 2 options.

A— Not to worry about monster go ahead with completing maze.

B— To chase monster and wipe him out. However, 50,000 points will be awarded to player automatically, when wiping monster left and right lane arrow lites feature.

When ball lands in either saucers, the lit arrow value will be scored and both lane arrows will step up for higher value. When values on both sides are up to 50 or 100,000 points (depending on SW setting) the extra ball lite comes on and player will be awarded any extra ball next time he lands in either saucers.

SPECIAL REPLAY/X-BALL/NOVELTY MODES

Self test positions 16 and 17 give the operator flexibility to award a replay ball or score (Novelty) when a special is scored. A combination of X-Ball, Novelty can be obtained through the following chart.

Self test position 16	Set to "03"	Set to "02"	Set to "01"
Playfield X-Balls and Specials	AWARD	AWARD	AWARD
Pac-Man Special	REPLAY	X-BALL*	50,000
Pac-Maze Special	REPLAY	X-BALL*	50,000
Left and Right lane X-Ball	X-BALL	X-BALL**	25,000
Self test Position 17	Set to "03"	Set to "02"	Set to "01"
	AWARD	AWARD	AWARD
Scoring Thresholds	REPLAY	X-BALL**	NO AWARD

(*) 50,000 if same player shoot again is lit.

(**) 25,000 if same player shoot again is lit.

V. GAME ADJUSTMENTS

A. Playfield Panel Post Adjustments:

Posts that control left and right outlane opening on panel can be removed to make access to outlanes easier or harder for ball to enter. See Figure II.

Easier entry will decrease playing time and scoring (conservative).
Harder entry will increase playing time and scoring (liberal).

B. Back Box Game Adjustments:

Each game has thirty-two switches located on A4, the MPU module, located in the back box, that allow play to be customized to the location. See Figure III. Credits per coin, maximum credits, credit display, balls per game, match feature, high game feature, special award and melody are selectable by means of the switches. The switches are contained in four-sixteen lead packages numbered S1-8, S9-16, S17-24, and S25-32 for easy identification. The "ON" toggle position is marked on the assembly. **Turn off power before making adjustments.**

Credits/Coin Adjustments:

The credits per coin are selectable by means of S17-S20 for coin chute #2 (Center). The switch settings and resultant credits/coin are as follows:

S20	S19	S18	S17	Credits/Coin	S20	S19	S18	S17	Credits/Coin
OFF	OFF	OFF	OFF	Same as Coin Chute #1 Settings	ON	OFF	OFF	OFF	8/1 Coin
OFF	OFF	OFF	ON	1/1 Coin	ON	OFF	OFF	ON	9/1 Coin
OFF	OFF	ON	OFF	2/1 Coin	ON	OFF	ON	OFF	10/1 Coin
OFF	OFF	ON	ON	3/1 Coin	ON	OFF	ON	ON	11/1 Coin
OFF	ON	OFF	OFF	4/1 Coin	ON	ON	OFF	OFF	12/1 Coin
OFF	ON	OFF	ON	5/1 Coin	ON	ON	OFF	ON	13/1 Coin
OFF	ON	ON	OFF	6/1 Coin	ON	ON	ON	OFF	14/1 Coin
OFF	ON	ON	ON	7/1 Coin	ON	ON	ON	ON	15/1 Coin

The credits given are selectable by means of switches 1-5 incl., for coin chute #1 and switches 9-13 incl., for coin chute #3. Thirty-one different credit ratios are available for each coin chute. The switch settings and resultant credits/coin are listed below.

CREDITS/COIN ADJUSTMENTS

COIN CHUTE #1 (HINGE SIDE) OR #3 (RIGHT SIDE)	SWITCHES					CREDITS	CREDITS	CREDITS	CREDITS	CREDITS	TOTAL CREDITS/COINS
	5	4	3	2	1						
	13	12	11	10	9						
	OFF	OFF	OFF	OFF	OFF	1/1 Coin					
	OFF	OFF	OFF	OFF	ON	2/1 Coin					
	OFF	OFF	OFF	ON	OFF	3/1 Coin					
	OFF	OFF	OFF	ON	ON	4/1 Coin					
	OFF	OFF	ON	OFF	OFF	5/1 Coin					
	OFF	OFF	ON	OFF	ON	6/1 Coin					
	OFF	OFF	ON	ON	OFF	7/1 Coin					
	OFF	OFF	ON	ON	ON	8/1 Coin					
	OFF	ON	OFF	OFF	OFF	9/1 Coin					
	OFF	ON	OFF	OFF	ON	12/1 Coin					
	OFF	ON	OFF	ON	OFF	14/1 Coin					
	OFF	ON	OFF	ON	ON	1/2 Coins*					
	OFF	ON	ON	OFF	OFF	2/2 Coins*					
	OFF	ON	ON	OFF	ON	3/2 Coins*					
	OFF	ON	ON	ON	OFF	4/2 Coins*					
	OFF	ON	ON	ON	ON	5/2 Coins*					
	ON	OFF	OFF	OFF	OFF	6/2 Coins*					
	ON	OFF	OFF	OFF	ON	7/2 Coins*					
	ON	OFF	OFF	ON	OFF	8/2 Coins*					
	ON	OFF	OFF	ON	ON	9/2 Coins*					
	ON	OFF	ON	OFF	OFF	12/2 Coins*					
	ON	OFF	ON	OFF	ON	14/2 Coins*					
	ON	OFF	ON	ON	OFF	1/1st Coin	2/2nd Coin				3/2
	ON	OFF	ON	ON	ON	0/1st Coin*	1/2nd Coin	1/3rd Coin	1/4th Coin		3/4
	ON	ON	OFF	OFF	OFF	0/1st Coin*	1/2nd Coin	0/3rd Coin**	2/4th Coin		3/4
	ON	ON	OFF	OFF	ON	1/1st Coin	1/2nd Coin	1/3rd Coin	2/4th Coin		5/4
	ON	ON	OFF	ON	OFF	1/1st Coin	2/2nd Coin	1/3rd Coin	3/4th Coin		7/4
	ON	ON	OFF	ON	ON	1/1st Coin	2/2nd Coin	2/3rd Coin	2/4th Coin		7/4
	ON	ON	ON	OFF	OFF	0/1st Coin***	0/2nd Coin***	1/3rd Coin			1/3
	ON	ON	ON	OFF	ON	0/1st Coin***	0/2nd Coin**	0/3rd Coin**	1/4th Coin		1/4
	ON	ON	ON	ON	OFF	0/1st Coin****	0/2nd Coin****	0/3rd Coin****	0/4th Coin****	1/5th Coin	1/5
	ON	ON	ON	ON	ON	0/1st Coin****	0/2nd Coin****	1/3rd Coin	0/4th Coin****	1/5th Coin	2/5

*No Credits until 2nd coin is dropped.

**No Credits until 4th coin is dropped.

***No Credits until 3rd coin is dropped.

****No Credits until 5th coin is dropped.

MAXIMUM CREDITS:

The maximum credits accepted by the machine limits the number of games that can be accumulated by coining, by winning replays or both. The maximum number of credits is selectable by means of switches 25 and 26. Four credit limits are available. Switch settings are listed below.

MAXIMUM CREDITS	SWITCHES	
	26	25
10	OFF	OFF
15	OFF	ON
25	ON	OFF
40	ON	ON

BALLS PER GAME:	# BALLS /GAME	SWITCHES	
	5	32	31
	4	OFF	ON
	3	ON	OFF
	2	OFF	OFF
		ON	ON

MATCH FEATURE:

When the Match Feature is ON, a random number appears on the Match/Ball in Play window and the word Match is illuminated. If the number matches the tens digit in a player's score, a free game is awarded. The Match Feature creates an incentive to play.

MATCH	SWITCH 28
ON	ON
OFF	OFF

CREDIT DISPLAY:	CREDITS DISPLAYED	SWITCH 27
	YES	ON
	NO	OFF

HIGH SCORE FEATURE:

The game is designed to award an Extra Ball or Free Game at each of the two or three score levels. See Front Door Game Adjustments.

AWARD	SELF TEST POSITION 16	SELF TEST POSITION 17
REPLAY	SET TO "03"	SET TO "03"
EXTRA BALL	SET TO "02"	SET TO "02"
NOVELTY	SET TO "01"	SET TO "01"
NO AWARD	SET TO "00"	SET TO "00"

For combinations of replay/X-ball/Novelty Modes see page 4A "K. Special Replay/X-ball/Novelty Modes"

HIGH SCORE TO DATE OR OVER 10,000,000 SCORE FEATURE:

The game is designed to award free games as an option if high score to date is beat or player exceeds 10,000,000 points. Each time this happens, the winning score becomes the new high score to beat. This score is displayed on all 4 player score displays at the end of each game as an incentive to play. Recommended setting is underlined.

HIGH SCORE TO DATE FEATURE	SELF TEST POSITION 19
No Award	SET TO "00"
One Credit	SET TO "01"
Two Credits	SET TO "02"
<u>Three Credits</u>	SET TO "03"

State and local laws may regulate the use of the above features, and they have been designed to allow for appropriate adjustment in order to conform to such requirements.

#1283 "PAC-MAN

SOUND OPTION

The game is designed to make several tones and noises to announce power-up, game-up etc. The tones are intended to attract attention to the game and increase game usage.

The tones are controlled by pressing self test button until the #18 shows on the match/ball in play display. Now pulse replay button to desired sound setting.

Setting "00", "01"

Most switches associated chimes without feature background.

Setting "02"

Most scoring will have noise effect without background.

Setting "03"

Most all scoring will have a noise effect with background.

NOTE: To correct clarities of speech and sound, adjust controls as follows:

- Turn remote volume control on front door all the way up.
- Turn the speech volume control on the printed circuit board full clockwise, then counterclockwise until speech is clear and understandable.
- Turn the sound volume control full clockwise, then turn counterclockwise until sound is not garbled.
- Then adjust remote volume control to desired volume level.

GAME FEATURE OPTIONS

Ball in saucers kickout adjustment:

Liberal	SW. 6 ON	If Pac-Man or monster dies in maze ball does not kick till all moves are used.
Conservative	SW. 6 OFF	If Pac-Man or monster dies in maze ball kicks out before all moves are used.

3 Yellow drop target 20,000 yellow arrow adjustment:

Liberal	SW. 7 ON	20,000 Yellow arrow will be on at start of game.
Conservative	SW. 7 OFF	20,000 Yellow arrow will not be on at start of game.

Under Pac maze 5 Pac-Man lites adjustment:

Liberal	SW. 14 ON	4 Pac-Man lites will be on at start of game.
Conservative	SW. 14 OFF	3 Pac-Man lites will be on at start of game.

Pac maze, Pac-Man aggressive lite adjustment:

Liberal	SW. 15 ON or OFF, 16 ON	Pac-Man aggressive lite stays on entire ball.
Medium	SW. 15 ON, 16 OFF	Pac-Man aggressive lite goes out when monster dies.
Conservative	SW. 15 OFF, 16 OFF	Pac-Man aggressive lite goes out after all moves are used.

Time to beat adjustment:

SW. 21	22	23	
OFF	OFF	OFF	10
ON	OFF	OFF	15
OFF	ON	OFF	20
ON	ON	OFF	25
OFF	OFF	ON	30
ON	OFF	ON	35
OFF	ON	ON	40
ON	ON	ON	45

Saucers extra ball lite adjustment:

Liberal	SW. 24 ON	Going into saucer 5 times lites extra ball.
Conservative	SW. 24 OFF	Going into saucer 10 times lites extra ball.

Number of games replays per game adjustment:

Liberal	SW. 29 ON	All replays earned will be collected.
Conservative	SW. 29 OFF	Only 1 replay per player per game.

Game over attract adjustment:

SW. 30 ON	Voice says WAKKA, WAKKA WHEN MONSTER CHASES HIM TO THE CENTER, THEN IT WILL SAY PAC-MAN EVERY 5 MINUTES.
SW. 30 OFF	NO VOICE.

C. FRONT DOOR GAME ADJUSTMENTS

High Score Feature Adjustments:

The game is designed to award an extra ball (option) or a free game at each of three score levels. The recommended levels are on the score card in the game.

Any level from 10,000 to 9,990,000 can be set, as desired. It is also possible to reset or turn off (00) any or all of the levels, if desired.

1. Push and release Self-Test button (See Figure III) at one second intervals approximately six times or until identification number 01 appears on the 'Match/Ball in Play' display.
2. The number on the Player Score Displays is the score level.* It can be increased, if desired, by holding the credit button in. To decrease the score level, hold the credit button in and depress and release the Self-Test button. Release the credit button when the desired number appears. Note that the level changes 10,000 points at a time. If the number '00' is left on the displays, the high score feature is eliminated for that level.
3. Repeat steps 1 and 2 for the second and third score levels. The identification numbers '02' and '03' on the Match/Ball in Play display are for the second and third levels, respectively.

High Score to Date and 10,000,000 Feature:

The game is designed to award free games when 'High Score to Date' is beat, or if the player exceeds 10,000,000 points.

It is recommended that the level, which will build with play, be periodically reset to the factory recommended level to encourage game play. The adjustment procedure is the same as for the High Score Feature Adjustment, Steps 1 and 2. Continue pushing the Self-Test button until the identification number '04' appears on the 'Match/Ball in Play' display and then do Step 2.

Any level from '00' to 9,990,000 can be set as described. It is to be noted that '00' does NOT turn off the feature, as it does on High Score feature. The feature is turned off by self test position 19 as discussed under 'Back Box Game Adjustments.'

SELF TEST SETUP FOR 16-22:


To set up positions 16-22 push and release self test button till 16 shows on match/ball in play. Now pulse replay button for recommended setup from "00" thru "03." Repeat for positions 17, 18, 19 or 22. Positions 20, 21 setups go from "00" thru "15."

SOUND

In addition to individual volume controls for speech and other game sounds on the Squawk and Talk Board. There is also a Master Volume Control located on the front door. (refer to page 10)

Please note that these module volume controls should be adjusted prior to setting the control on the front door.

*Can be quickly set to '00' by pressing S33 on the MPU assembly in the back box or Coin Chute switch #3. (See Figure III).

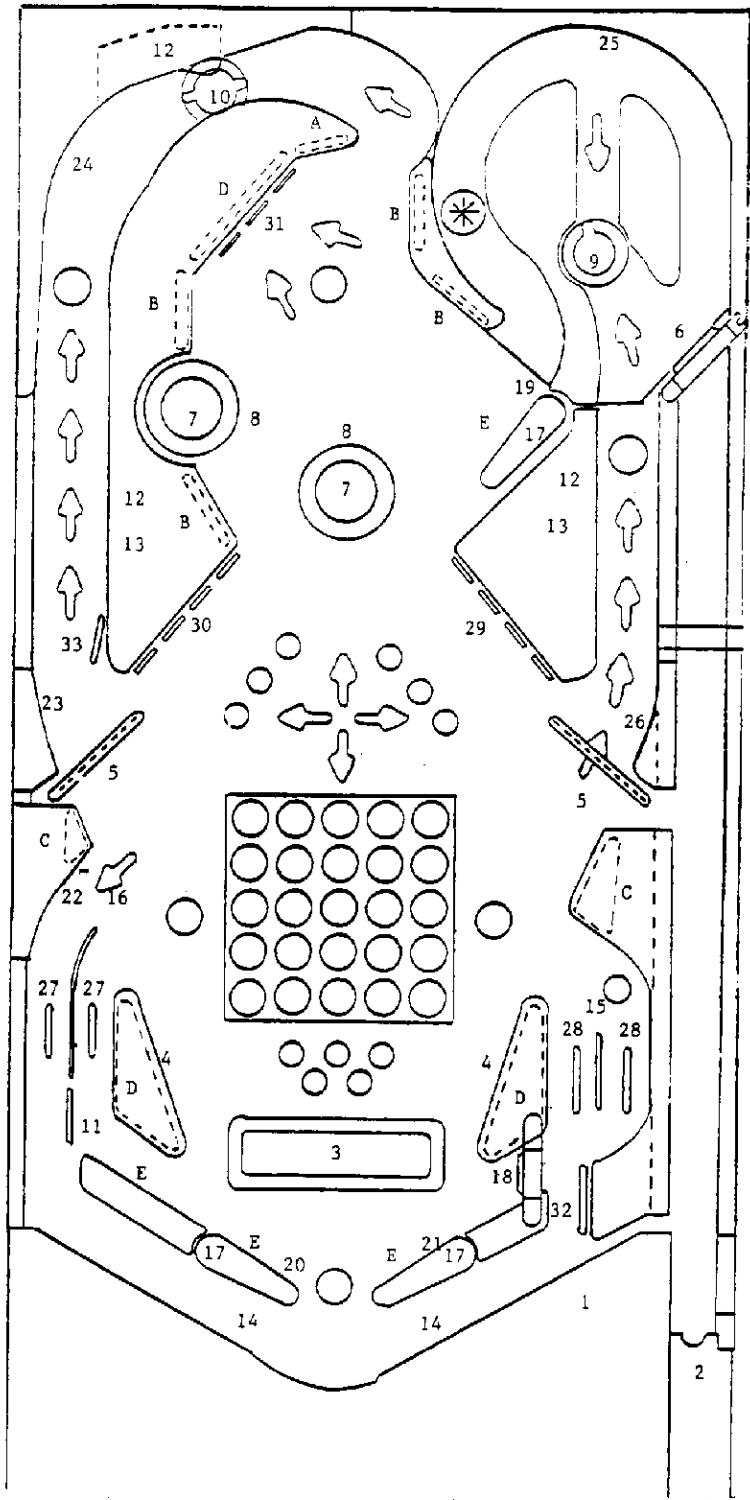

#1283 MR. & MRS. PAC-MAN

RUBBER PARTS

A.	R-521	3/4"	(1)
B.	R-521-1	1"	(4)
C.	R-521-2	1 1/2"	(2)
D.	R-521-3	2"	(3)
E.	R-533-1	FLIPPER	(3)
F.	243	5/16"	(3)
G.	414	POST	(4)

PANEL TOP PARTS

1.	Bottom Arch	P-5871-95
2.	Shooter Gauge	P-6359-57
3.	Read-Out Cover	M-1949-3
4.	Slingshot Assy.	ASE-2593-12 (2)
5.	Ball Gate & Wire Assy.	ASE-2250-111 (2)
6.	Ball Gate & Wire Assy.	ASE-2250-112
7.	Bumper Cap	A-4009-8
8.	Bumper Collar	C-1018-9
9.	Eject Hole Assy.	ASE-428-41
10.	Two-Way Eject Hole	ASE-3054
11.	Relay Gate Assy.	ASE-2308-26
12.	Clear Plastics & Bushings	A-2890-166
13.	Screened Plastics	M-1330-203
14.	Buffer Wire	M-121-53
15.	Guide Wire	M-121-56
16.	Guide Wire	M-121-126
17.	Molded Flipper	A-3994-5 (3)
18.	Ball Gate & Wire Assy.	ASE-2250-90
19.	Flipper Assembly (R)	ASE-1587-130
20.	Flipper Assembly (L)	ASE-1587-131
21.	Flipper Assembly (R)	ASE-1587-135
22.	Ball Guide	A-3032-111
23.	Ball Guide	A-3032-113
24.	Ball Guide	A-3032-114
25.	Ball Guide	A-3032-115
26.	Ball Guide	A-3032-112
27.	Wire Actuator	ASE-2806-9 (2)
28.	Wire Actuator	ASE-2806-10 (2)
29.	D/T & Memory Assy.	ASE-3038-8
30.	D/T & Memory Assy.	ASE-3038-9
31.	Drop Target Assy.	ASE-2795-98
32.	Guide Wire	M-121-90
33.	Guide Wire	M-121-32

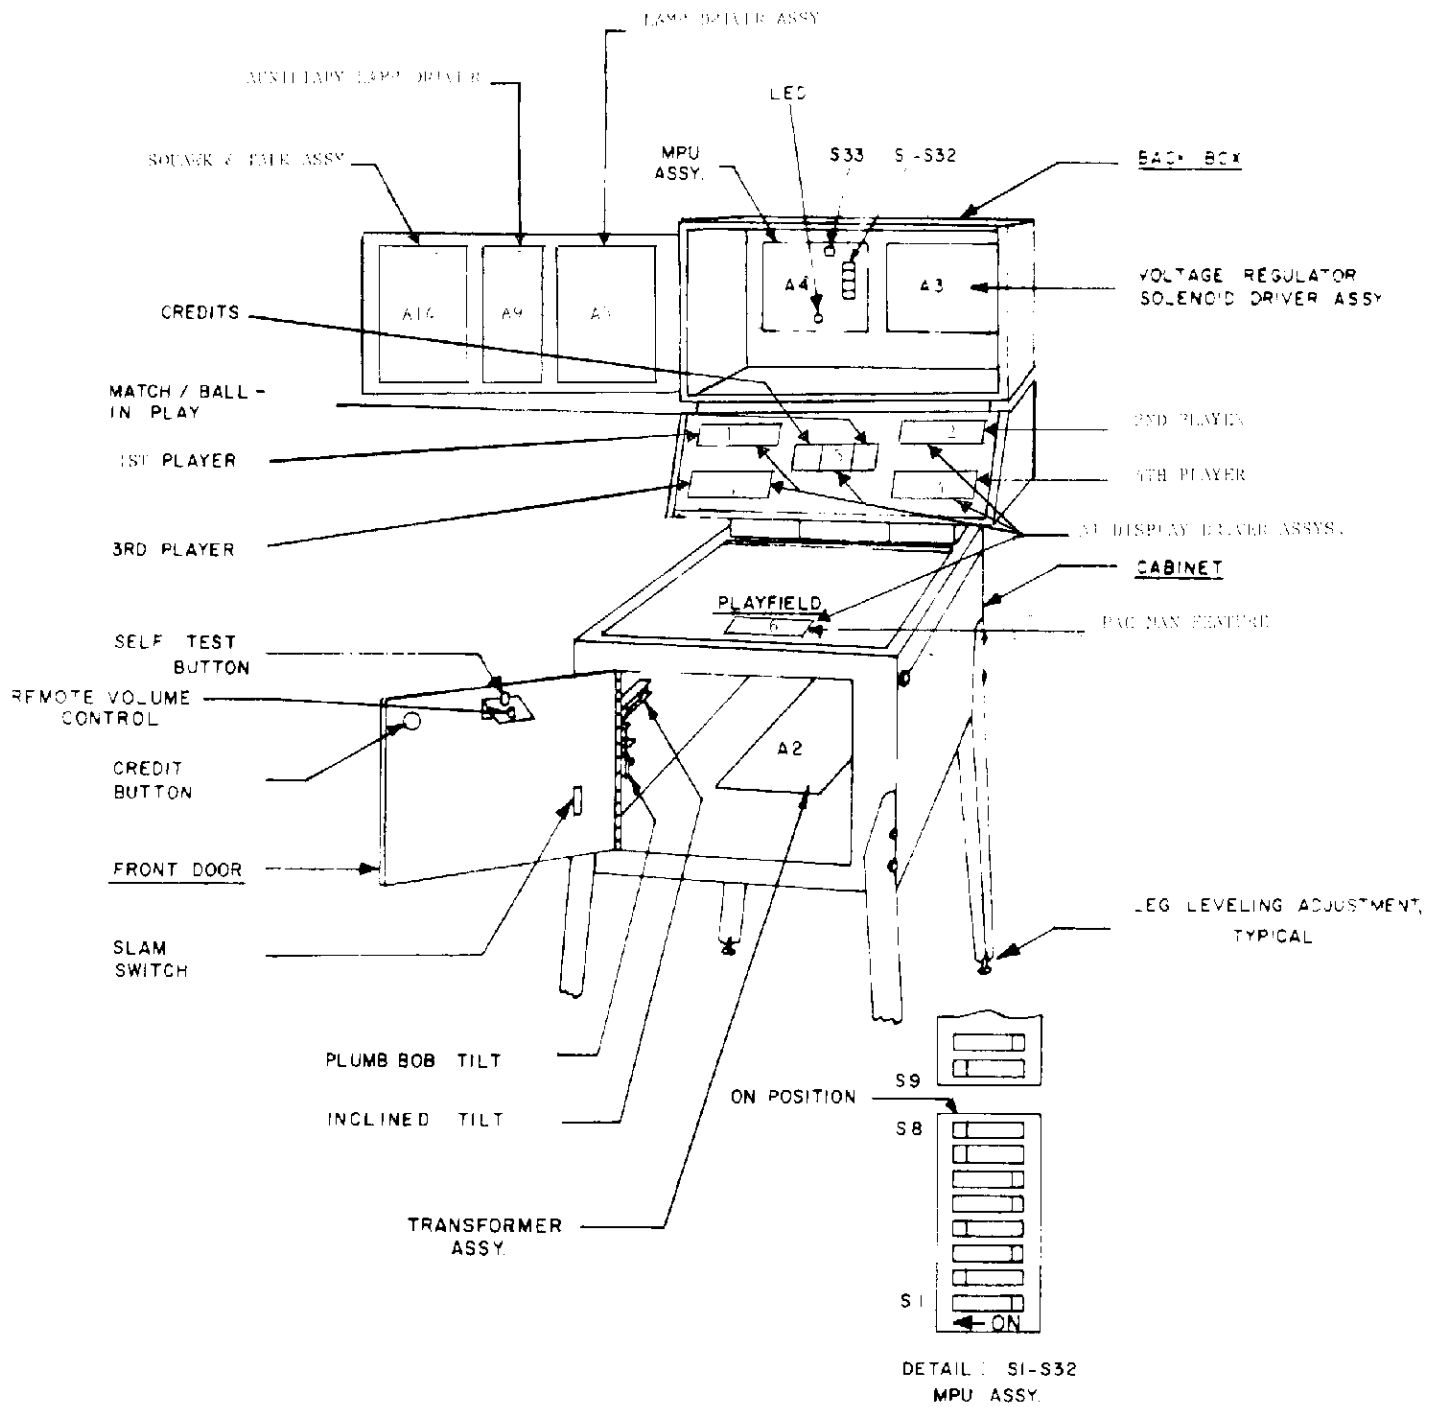


FIGURE III. ELECTRONIC PIN BALL MACHINE

RECOMMENDED

Instructions, Score Cards and High Score Feature Settings
to be used on PAC-MAN #1283

3-BALL

REPLAYS

Instruction Card M-1508-108-E
Score Card M-1508-108-B
1 Replay at 900,000
1 Replay at 1,400,000

5-BALL

REPLAYS

Instruction Card M-1508-108-E
Score Card M-1508-108-A
1 Replay at 1,200,000
1 Replay at 2,000,000

EXTRA BALL

Instruction Card M-1508-108-F
Score Card M-1508-108-A W/OO-1
1 Extra Ball at 1,000,000
1 Extra Ball at 2,000,000

ADDITIONAL CARDS

REPLAYS

M-1508-H-1	400,000	900,000
M-1508-I-1	450,000	1,000,000
M-1508-J-1	500,000	1,000,000
M-1508-K-1	500,000	1,100,000
M-1508-L-1	550,000	1,100,000
M-1508-M-1	600,000	1,100,000
M-1508-N-1	650,000	1,200,000
M-1508-O-1	700,000	1,200,000
M-1508-P-1	700,000	1,400,000
M-1508-Q-1	800,000	1,400,000
M-1508-R-1	900,000	1,400,000
M-1508-S-1	900,000	1,500,000
M-1508-T-1	1,000,000	1,500,000
M-1508-U-1	1,000,000	1,600,000
M-1508-V-1	1,000,000	1,800,000
M-1508-W-1	1,000,000	2,000,000
M-1508-X-1	1,100,000	1,800,000
M-1508-Y-1	1,100,000	2,000,000
M-1508-FF-1	1,200,000	2,000,000
M-1508-GG-1	1,300,000	2,000,000
M-1508-HH-1	1,400,000	2,100,000
M-1508-II-1	1,400,000	2,200,000

EXTRA BALL

M-1508-NN-1	1,000,000	1,600,000
M-1508-OO-1	1,000,000	2,000,000
M-1508-PP-1	1,200,000	2,200,000
M-1508-QQ-1	1,400,000	2,400,000

Instruction Card, Novelty
M-1508-108-G

BLANKS (3)

High game to date recommended levels;
(reset periodically)
3 BALL 1,600,000
5 BALL 2,200,000

#1283 PAC-MAN

RECOMMENDED SETTINGS

RECOMMENDED REPLAY GAME SETTING FOR:

BALL IN SAUCERS KICKOUT	SW.6
3 DROP TARGET 20,000 YELLOW ARROW	SW.7
UNDER PAC MAZE 5 PAC-MAN LITES	SW.14
PAC MAZE, PAC-MAN AGGRESSIVE LITE	SW.15
PAC MAZE, PAC-MAN AGGRESSIVE LITE	SW.16
TIME TO BEAT	SW.21
TIME TO BEAT	SW.22
TIME TO BEAT	SW.23
SAUCERS EXTRA BALL LITE	SW.24
NUMBER OF GAMES REPLAYS PER GAME	SW.29
GAME OVER ATTRACT	SW.30
BALLS PER GAME	SW.31
BALLS PER GAME	SW.32

3-BALL

ON
ON
ON
ON
ON
ON
OFF
ON
ON
ON
ON
OFF
ON
ON
OFF

5-BALL

ON
OFF
OFF
OFF
OFF
OFF
OFF
ON
ON
ON
ON
OFF
ON
ON
OFF

REPLAYS

Instruction Card
Score Cards
Major Mode

Match
High Score to Date

3-BALL

M-1508-108-E
M-1508-108-B
Self Test Position 16, 17
Set to "03"
SW.28 ON
Self Test Position 19
Set to "03"

5-BALL

M-1508-108-E
M-1508-108-A
Self Test Position 16, 17
Set to "03"
SW.28 ON
Self Test Position 19
Set to "03"

X-BALL

Instruction Card
Score Card
Major Mode

Match
High Score to Date

M-1508-108-E
M-1508-108-A W/OO-1
Self Test Position 16, 17
Set to "02"
SW.28 OFF
Self Test Position 19
Set to "00"

NOVELTY

Instruction Card
Major Mode

Match
High Score to Date

M-1508-108-G
Self Test Position 16, 17
Set to "01"
SW.28 OFF
Self Test Position 19
Set to "00"

M-1508-108-G
Self Test Position 16, 17
Set to "01"
SW.28 OFF
Self Test Position 19
Set to "00"

VIII. ROUTINE MAINTENANCE ON LOCATION:

Self-Test routines are written into the game design. They are particularly useful for routine maintenance. The tests are described below. The first test is automatic and occurs on power-up. This test causes the MPU module A4 to examine itself for failures. Seven flashes of an LED indicates proper operation. The second series of self-diagnostic tests causes the MPU to 'exercise' each of the other modules in such a way as to make their faults, if any, obvious. See Figure III and Page ii.

It is recommended that these tests be used several times a week to check out the games before play. If faults are discovered, they may be corrected on location if the operator has a stock of replacement modules. See "Trouble Shooting on Location."

MPU Module Self-Test:

At power on, the LED on the MPU module flashes once. (Flicker-Flash). After a pause, it flashes six more times and goes out. A power-up tune is played to announce game readiness. This indicates proper MPU operating condition and successful completion of the power-up test.

Game Self-Diagnostic Tests:

1. Pressing the Self-Test button inside the door initiates the Self-Test routine. See Figures III and IV. All switched lamps flash off and on continuously.
2. Pressing the Self-Test button again causes each digit on each display to cycle from 0 thru 9, and repeat continuously.
3. Pressing the Self-Test button again causes each solenoid to be energized, one at a time, in a continuous sequence. Hold both flipper buttons 'in' during this test. The number appearing on the Player Score displays is the same as the number assigned to the solenoid. The sound of a solenoid pulling-in as a number appears indicates proper operation. The absence of sound is improper. If sound is absent, see Page 17 for help in Solenoid identification.
4. Pressing Self-Test button again causes the sound module to play the "Game Over" tune repeatedly.
5. Pressing the Self-Test button again causes the MPU to search each switch assembly for stuck contacts. If any are found, the number of the first set encountered is flashed on the Player Score displays. The number remains until the fault is cleared. See Page 17 for help in Stuck Switch identification. Other numbers may follow if more stuck contacts are present. If there are no stuck switches, the Match/Ball in Play display flashes '0'.
6. Pressing the Self-Test button 22 more times causes the MPU to step thru the threshold and bookkeeping functions described previously and finally to repeat the power-up test. For more rapid exit to power-up, turn the game off, then on. The game is now ready to play.


After successful completion of the Self Diagnostic Test procedure, set the game up for play. Exercise each rollover, thumper-bumper, slingshot, etc., by hand until each switch assembly on the playfield has been checked for proper operation. If actuating a switch assembly results in intermittent or no response, clean contacts by gently closing them on a clean business card or piece of paper and wiping until they wipe clean. Regap, if necessary, to 1/16". **Do not burnish or file Gold Plated Switch Contacts.**

IX. TROUBLESHOOTING ON LOCATION

The game is designed to make troubleshooting easy. Several simple procedures are given herein that cover the greatest percentage of game failures. They are written for an operator on location and require module replacement. (See Figure III) Symptoms and the action to be taken are given for each type of problem.

If the problem is more complicated and is not solved by following this procedure, more detailed procedures are available from Bally. See the Parts List for ordering information.

FIGURE IV SELF DIAGNOSTIC TEST

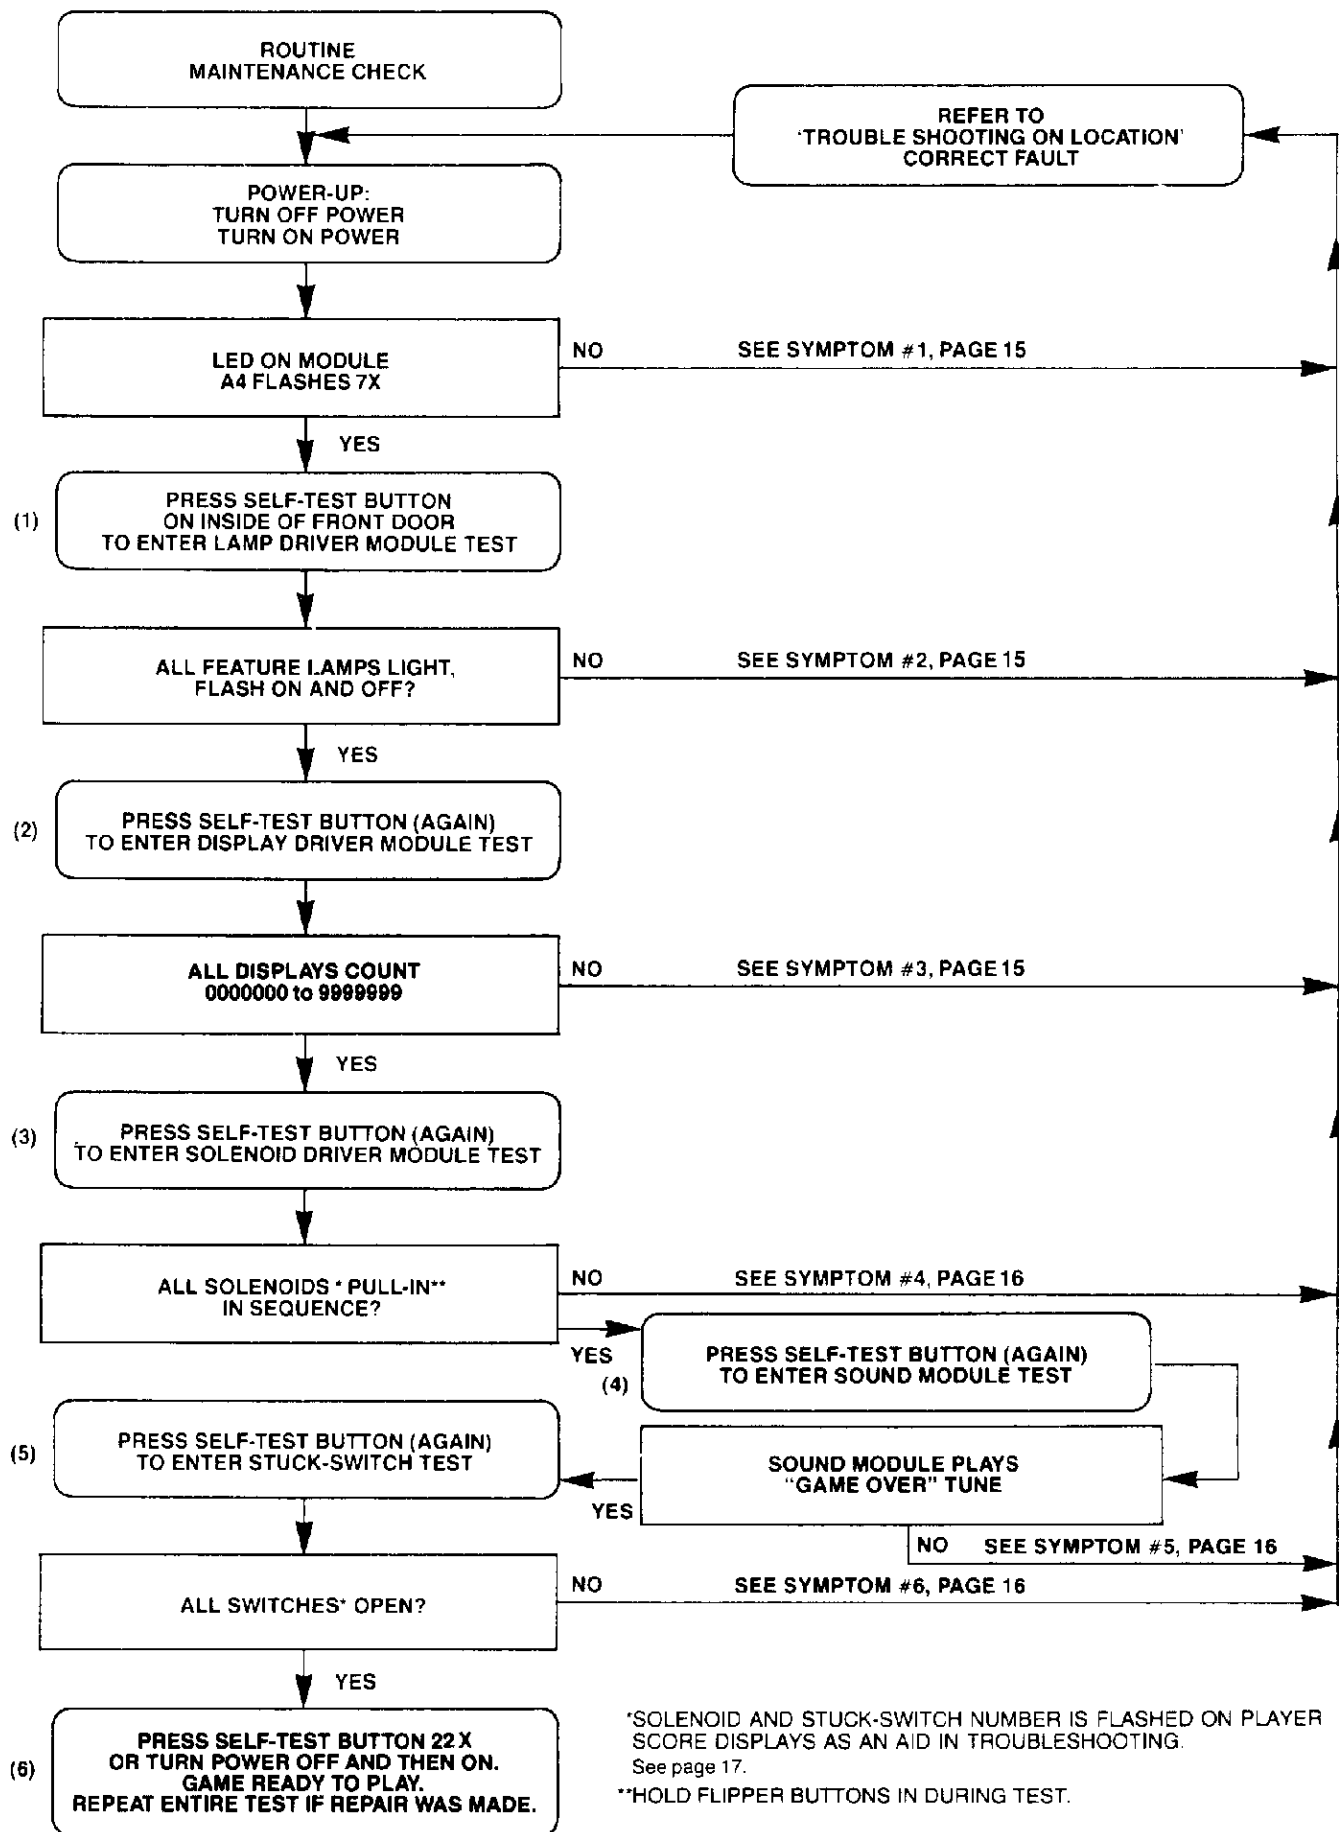

- 1A) SYMPTOM:** Game does not play power-up tune when power is turned on. General Illumination is present.
- ACTION:**
- A)** Turn power OFF. Open back box. Locate light emitting diode (LED) on MPU module A4.
 - B)** Turn Power ON. LED must flash 7X to indicate that module A4 is good. Correct flash sequence is flicker/flash-pause-and then six more flashes and LED goes out.
 - C.** If LED does not come on, or does not flash, or flashes, but less than 7X, turn off power. Replace MPU module A4.
- CAUTION:** **Replacement MPU Module must have same Part Number or incorrect operation will result! See Parts List for MPU Module Part Number.**
- Turn power ON.
- D)** If game is correct, it is now ready for play. If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 2A) SYMPTOM:** Not all feature lamps light during game play.
- ACTION:**
- A)** With power ON, open front door. Press button (Self-Test switch) once. If the game is correct, **all** feature lamps flash ON and OFF.
 - B)** Carefully raise playfield or open back box to gain access to lamps.
 - C)** Replace bulbs that do not flash.
 - D)** If game is correct, it is now ready for play.
 - E)** If game is not correct, turn power OFF. Replace Lamp Driver Module A5. Turn power ON and repeat A.
 - F)** If game is correct, it is now ready for play.*
 - G)** If game is not correct, turn power OFF. Replace MPU module A4. See CAUTION, 1C. Turn power ON and repeat A.
 - H)** If game is correct, it is now ready for play.* If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 2B) SYMPTOM:** One or some switched lamps always ON.
- ACTION:** Repeat 2AA, AB, AE, and AF and, if necessary AG & AH.
- 3A) SYMPTOM:** Display digits improper on **one** or **several**, but less than all Display Driver module(s), A1. Improper: One or several segments always OFF, digits mottled or several segments or digit(s) always ON.
- ACTION:**
- A)** With power ON, open front door. Press button (Self-Test switch) twice. If the game is correct, each digit on each Display Driver Module A1 (5 used/game) displays the count 1-9 and 0 continuously in all 6 digit positions. Note defective Display Driver modules.
 - B)** Turn power OFF.
- CAUTION: High Voltage is supplied to the Display Driver Modules, A1, from the Solenoid Driver/Voltage Regulator Module A3. Wait 30 seconds for High Voltage to Bleed Off.**
- C)** Replace Display Driver module(s) A1. Turn power ON. Repeat A.
 - D)** If game is correct, it is now ready to play.* If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 3B) SYMPTOM:** **All** displays improper (all five display Driver modules). Improper: Digit(s) always on or off/segment(s) always on or off, all displays.
- ACTION:**
- A)** Repeat 3AA, and AB.
 - B)** Replace MPU module A4. See CAUTION NOTE, 1C. Turn power ON. Repeat A.

- C) If game is correct, it is now ready to play.* If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 3C) **SYMPTOM:** One or several displays always off.
ACTION: A) Do 3AA, AB, AC, and AD.
 B) Repeat 3BB and BC, if necessary.
- 4A) **SYMPTOM:** Solenoid(s) do(es) not pull-in during course of game.
ACTION: A) With power ON, open front door. Press button (Self-Test switch) three times.
 B) If game was correct, each solenoid would be energized. A number is flashed on the Player Score displays as each solenoid is pulsed. Note any numbers that do not have the sound of a solenoid associated. See Solenoid Identification Table, Page 17 and Figure V.
 C) Carefully lift the playfield (or open the back box) to gain access to the solenoid. Turn power OFF. Inspect the solenoid.
 D) If a lead is broken off, repair. Repeat A & B. If game is correct, it is now ready for play.* If solenoid wiring was correct, turn power OFF.
 E) Replace Solenoid Driver/Voltage Regulator module A3. See CAUTION NOTE 3AB.
 F) Repeat AA & AB. If game is correct, it is now ready to play.* If game is not correct, turn power OFF.
 G) Replace Sound Module A8.
 H) Repeat AA and AB if game is correct. It is now ready to play. If game is not correct, turn power OFF.*
 I) Replace MPU module A4. See CAUTION NOTE, 1C.
 J) Repeat A & B. If game is correct, it is now ready to play.* If game is not correct, refer to Module Replacement Procedure. (See Parts List.)
- 4B) **SYMPTOM:** Solenoid(s) always energized—Note: if impulse solenoids (ball ejects, slingshots, thumper-bumpers, etc.) are energized continuously, they are subject to damage. Limit troubleshooting to one minute with power ON, followed by **five minutes with power OFF**. Repeat as necessary. Replace damaged solenoids.
ACTION: Do 4AA, AB, AE, AF, AG, AH and if necessary, AI and AJ.
- 5) **SYMPTOM:** No Sound.
ACTION: A) With Power ON, open front door, press Self-Test switch four times.
 B) Turn volume control clockwise to Max.
 C) If correct, sound will be heard. If incorrect, try seating speaker lead connector (J2) and input connector (J1).
 D) If correct, sound will be heard. If incorrect, refer to Module Replacement procedure.*
- 6) **SYMPTOM:** Feature (Drop Targets, etc.) does not score.
ACTION: A) With power ON, open front door. Press button (Self-Test switch) five times.
 B) If the game is correct, Match/Ball in Play display would flash '0'. If a number appears on the Player Score displays, see Switch Assembly Identification Table, Page 17 and Figure V.
 C) Carefully lift the playfield. Locate the switch assembly identified from the number. Visually inspect the switch assembly. If the contacts are 'stuck,' regap them to 1/16". See section under ADJUSTMENTS. Repeat A & B. If the game is correct, it is now ready to play.* If game is not correct, turn the power OFF.
 D) Replace MPU module A4. See CAUTION NOTE 1, C.
 E) Repeat A & B. If the game is correct, it is now ready to play.* If the game is not correct, refer to Module Replacement Procedure. (See Parts List).
- 7) **SYMPTOM:** Game blows fuse(s) repeatedly.
ACTION: See Module Replacement Procedure. F.O. 560

*Turn power On-Off switch OFF and then ON.

GAME #1283 PAC-MAN SOLENOID IDENTIFICATION TABLE


Self Test #	SOLENOID IDENTIFICATION
01	TOP LEFT SAUCER (KICK TO LEFT)
02	TOP LEFT SAUCER (KICK TO RIGHT)
03	RIGHT SAUCER
04	KNOCKER
05	OUTHOLE
06	LEFT THUMPER BUMPER
07	CENTER THUMPER BUMPER
08	LEFT SLINGSHOT
09	RIGHT SLINGSHOT
10	LEFT 4 DROP TARGET RESET
11	RIGHT 4 DROP TARGET RESET

Self TEST #	SOLENOID IDENTIFICATION
12	TOP 3 DROP TARGET RESET
13	LEFT 4 DROP TARGET #1 (BOTTOM)
14	LEFT 4 DROP TARGET #2
15	LEFT 4 DROP TARGET #3
16	LEFT 4 DROP TARGET #4 (TOP)
17	RIGHT 4 DROP TARGET #1 (TOP)
18	RIGHT 4 DROP TARGET #2
19	RIGHT 4 DROP TARGET #3
20	RIGHT 4 DROP TARGET #4 (BOTTOM)
21	GATE
22	COIN LOCKOUT DOOR
23	K1 RELAY (FLIPPER ENABLE)

SWITCH ASSEMBLY SELF-TEST DISPLAY NUMBERS

Switch Self Test #	DESCRIPTION
01	LEFT 4 DROP TARGET 1 (BOTTOM)
02	LEFT 4 DROP TARGET 2
03	LEFT 4 DROP TARGET 3
04	LEFT 4 DROP TARGET 4 (TOP)
05	OUTHOLE KICKER
06	CREDIT BUTTON
07	TOP LEFT SAUCER
08	RIGHT SAUCER
09	COIN III (RIGHT)
10	COIN I (LEFT)
11	COIN II (MIDDLE)
12	LEFT RETURN & RIGHT OUTLANE
13	RIGHT RETURN LANE
14	LEFT OUTLANE
15	TILT (3)
16	SLAM (2)
17	LEFT THUMPER BUMPER
18	CENTER THUMPER BUMPER
19	LEFT SLINGSHOT
20	RIGHT SLINGSHOT

Switch Self Test #	DESCRIPTION
21	RIGHT SAUCER ROLLOVER BUTTON
22	TOP 3 DROP TARGET 1 (BOTTOM)
23	TOP 3 DROP TARGET 2
24	TOP 3 DROP TARGET 3 (TOP)
25	RIGHT 4 DROP TARGET 1 (TOP)
26	RIGHT 4 DROP TARGET 2
27	RIGHT 4 DROP TARGET 3
28	RIGHT 4 DROP TARGET 4 (BOTTOM)
29	30 POINT REBOUND (2)
30	LEFT & RIGHT WIRE SPINNER
31	
32	
33	LEFT FLIPPER CABINET BUTTON
34	"M" BACK TARGET
35	"A" BACK TARGET
36	"N" BACK TARGET
37	RIGHT FLIPPER CABINET BUTTON
38	"P" BACK TARGET
39	"A" BACK TARGET
40	"C" BACK TARGET

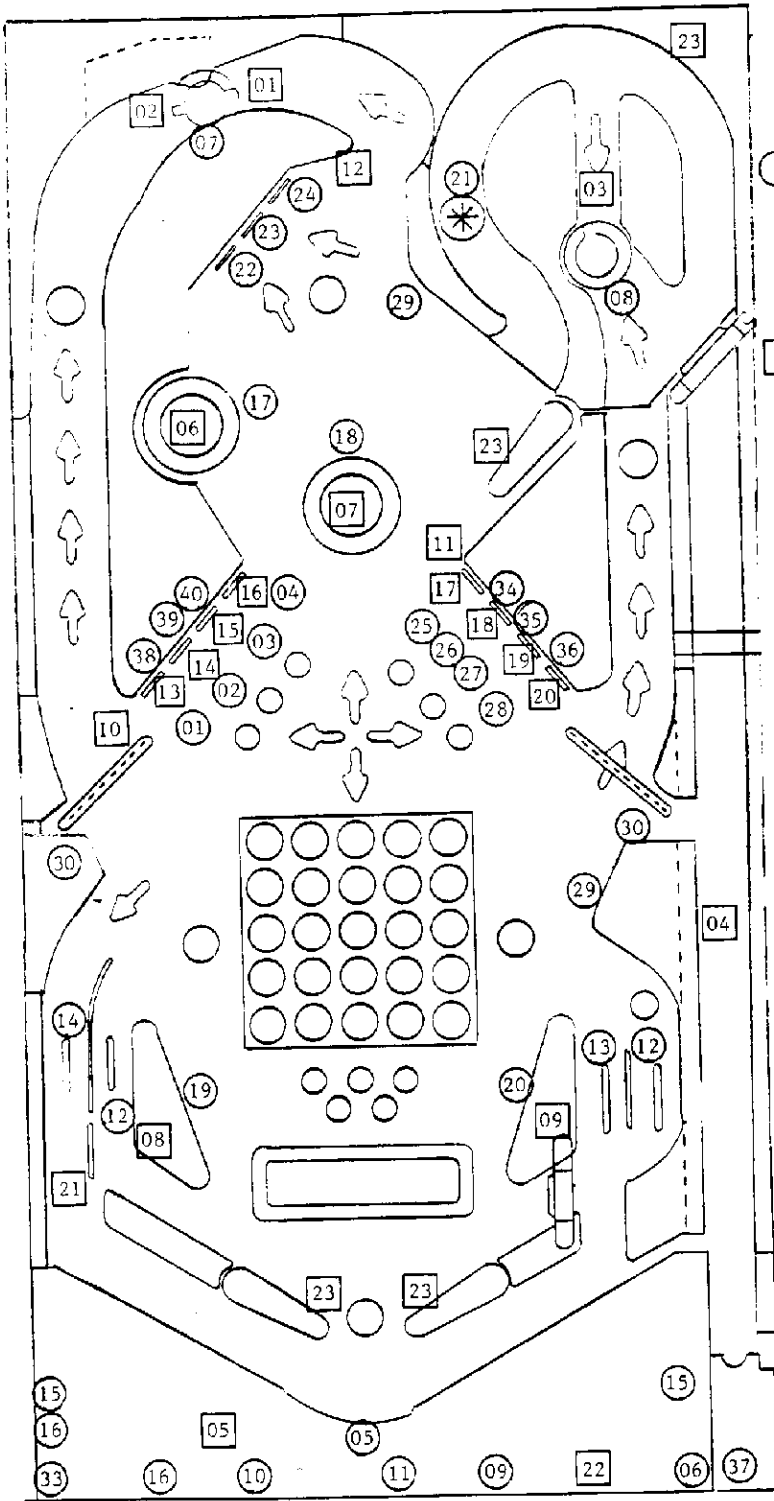

#1283 PAC-MAN

○ INDICATES SWITCH ASSEMBLY IDENTIFICATION NUMBERS
 NOTE: CABINET: 15,16,33,37
 DOOR: 06,09
 10,11,16

□ INDICATES SOLENOID IDENTIFICATION NUMBERS
 NOTE: DOOR: 22
 BACKBOX: 23
 CABINET: 05

FIGURE 5

18

ASSEMBLY ADJUSTMENTS:

GENERAL:

All switch assemblies consist of leaf springs, contacts, separators, plastic tubing and screws to hold them to the mounting surface. Before attempting to adjust a switch assembly, make sure that these screws are tight. If not, tighten screw closest to the contact end of the leaf spring first. This will prevent the assembly from being secured in such a manner that the leaf springs tend to fan out. In general, all leaf springs are adjusted for a 1/16" gap in the open position and .010" overtravel or wipe in the closed position. All contacts should be in good condition. Unless otherwise instructed, they should be dry or non-lubricated. All contacts should be free of dust and dirt. Contacts, with the exception of the flipper button switch assemblies, are plated to resist corrosion. Filing or burnishing breaks the finish and encourages corrosion. Clean by closing the contacts over a clean piece of paper (e.g. a business card) and wiping gently until the contacts are clean. For the flipper button switch assemblies **ONLY:** Tarnish can be removed with a contact file followed by a burnishing tool. Severely pitted contacts must be replaced as an assembly. In general, contacts need be cleaned or replaced and adjusted only when they are found to be a source of game malfunction.

X. SERVICE PARTS:

A parts catalogue is available upon request. The catalogue is illustrated and lists all replacement parts for each game manufactured by Bally. Requests should be addressed to:

BALLY MANUFACTURING CORPORATION
2640 WEST BELMONT AVENUE
CHICAGO, ILLINOIS 60618
ATTN: PARTS DEPARTMENT

SERVICE HINTS:

The Bally playfield has an improved tuff-coat finish with excellent wearing properties. Its life expectancy, as well as play appeal, can be extended by periodic cleaning of the playfield.

DO: Bally recommends you clean your playfield with Wildcat #125 (Wildcat Chemical Co., 1333 W. Seminary Drive, Ft. Worth, Texas 76115). Wildcat #125 is a combination cleaner and polish. Bally has tried and tested this product and found it to be very effective. If Wildcat #125 is not available, Bally suggests you ask your Distributor to order it. Inspect and hand polish the ball in a clean cloth. A chipped ball must be replaced. It can ruin the finish on the playfield in a short period of time.

DON'T: Use water in large quantities, highly caustic cleaners, abrasive cleaners or cleaning pads on the playfield. Do not allow a wax or polish build up. Waxes yellow with age and spoil play appeal.

XI. PARTS LIST

#1283 PAC-MAN

MISCELLANEOUS	PART NUMBER
Transformer (Domestic or Export)	E-122-161
Bulbs, #555	E-125-73
Fuse, 1 Amp. 3 AG Slow Blow (Playfield Solenoid Protection)	E-133-44

ASSEMBLY COILS

Coin Lockout	FO-36-7000
Flipper (3)	AQ-25-500/ 34-4500
Top Left Saucer (Kick to Right)	AO-30-3000
Top Left Saucer (Kick to Left)	AO-29-2100
Right Saucer	AO-27-1300
Knocker	AR-26-1200
Outhole Kicker	AN-26-1200
Sling-Shot (2)	AT-26-1200
Drop Target Reset (3)	NB-26-1900
Individual Drop Target (7)	CV-31-2000
Individual Drop Target (1)	CJ-31-2000
Thumper Bumper (2)	AT-26-1200
Gate	GA-34-4000

PLAYFIELD PARTS

See Figure II

MODULES

Lamp Driver A5	AS-2518-23
Display Driver A1 (2 used)	AS-2518-21
Display Driver A1 (4 used)	AS-2518-58
Solenoid Drive/Voltage Regulator A3	AS-2518-22
MPU A4	AS-2962-35
Transformer & Rectifier A2	AS-2877-9
Rectifier Board (Part of A2)	AS-2518-54
Squawk & Talk	AS-3107-12
Auxiliary Lamp Driver A9	AS-2518-52
Solenoid Expander	AS-2518-66
Aux. Driver (G.I. Flasher)	AS-2518-68
Pac Lite Matrix	AS-2518-98

REPAIRS PROCEDURES/AIDS

Module & Component Replacement	F.O. 560-1
AID (Assistance in Diagnostics)	
Kit, used with F.O. 560-1	KIT #485-1

MODULE COMPONENTS


SEE MODULE PARTS LIST

MODULE COMPONENT STARTER KITS

(Each kit contains an assortment of the most needed electronic parts for use in Module repair.)

- KIT #558—For Rectifier Board (Part of A2)
- KIT #503—For MPU Board A4 (less Memory U1-U6)
- KIT #492—For Solenoid Drive/Voltage Regulator A3
- KIT #493—For Display Drive A1
- KIT #494—For Lamp Drive A5

AS-2518-35 MPU MODULE

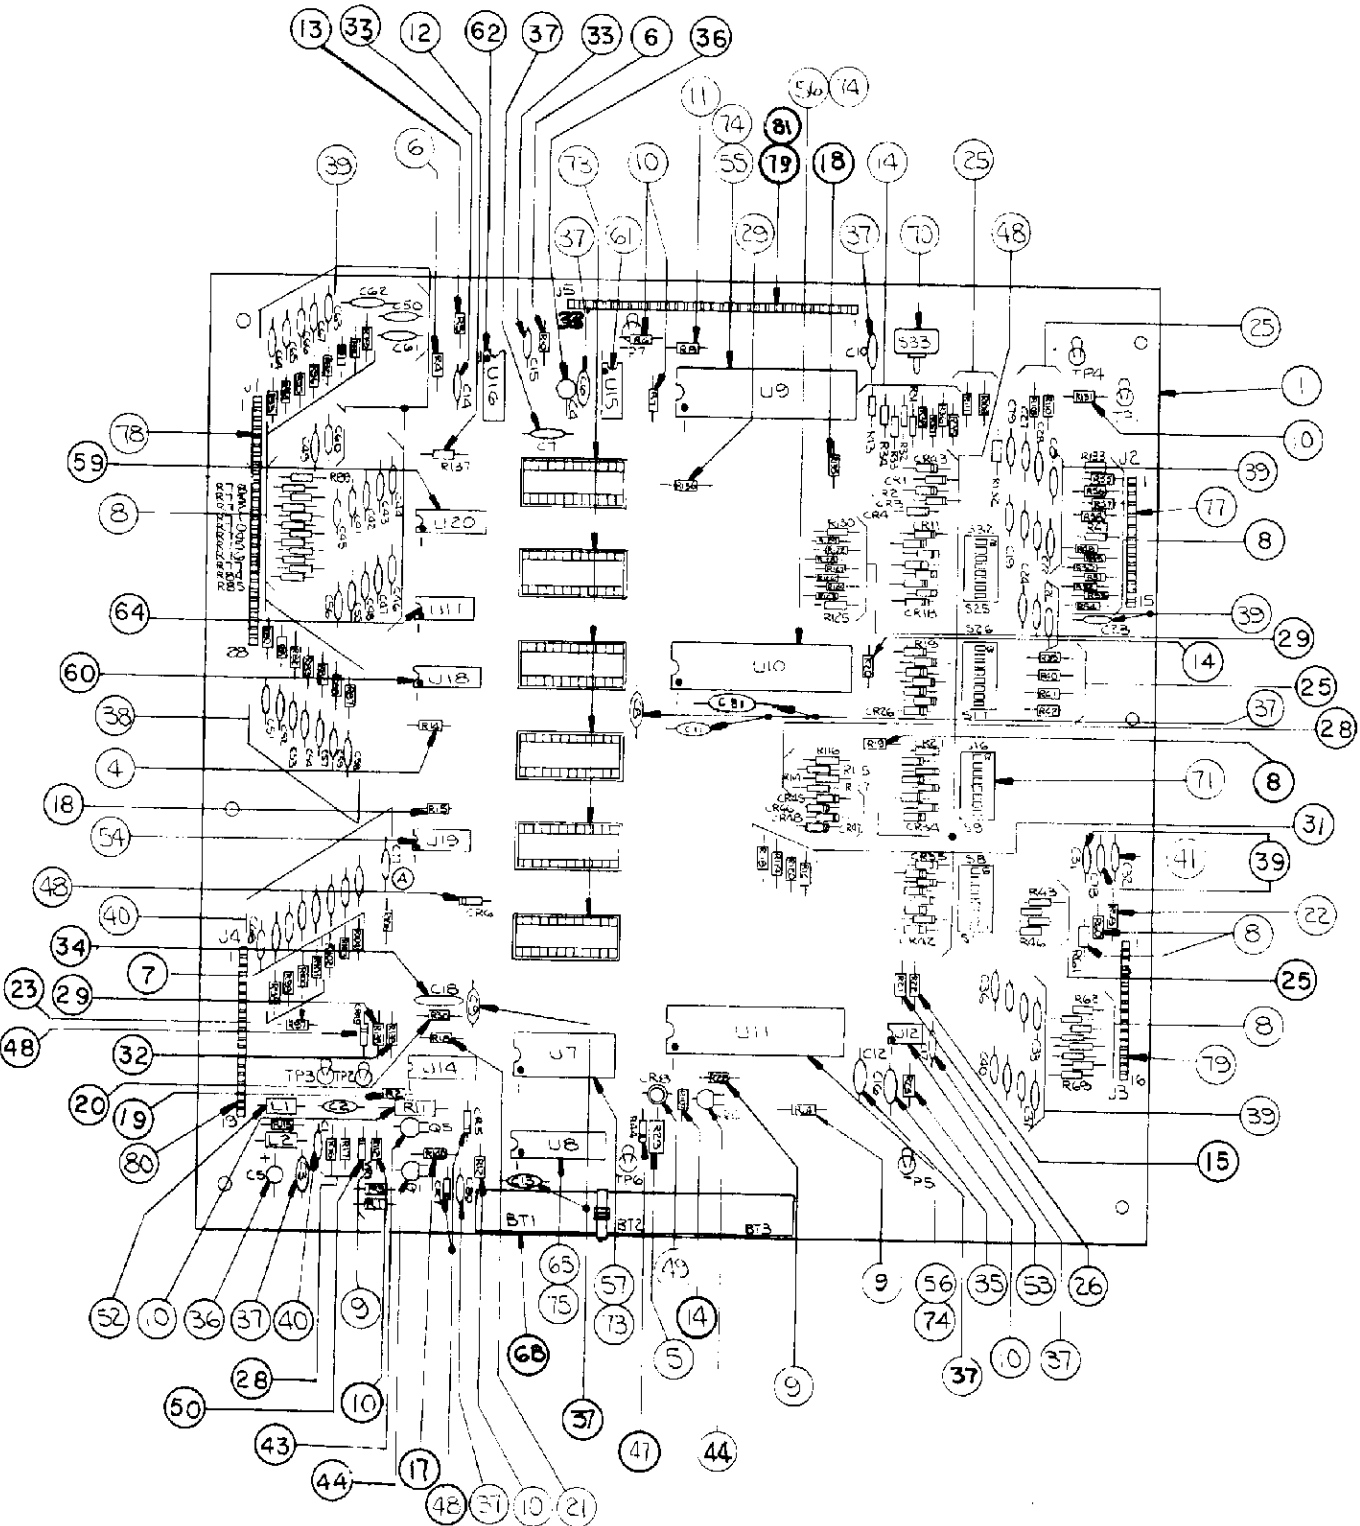

A4: MPU MODULE COMPONENT PARTS LIST


ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	A4 (see note 1)	AS-2962-35	MPU Module Complete.
2	A4 (see note 2)	AS-2518-35	MPU Module less Program Memory, U1-6 incl.
3-32	See Schematic		Resistors, See schematic for value
33	C14, C15	E-00586-0067	Capacitor, 470 PFD, 1kv
34	C18	E-00586-0088	Capacitor, .05 MFD, 16V
35	C16	E-00586-0081	Capacitor, .1 MFD, 100V
36	C4, C5	E-00586-0073	Capacitor, 4.5 MFD, 25V
37	C3, C6-C13, C17, C81	E-00586-0085	Capacitor, .01 MFD, 25V
38	C79, C41-C67	E-00586-0083	Capacitor, 470 PFD, 50V
39	C19-C31, C78, C33-C40	E-00586-0082	Capacitor, 390 PFD, 50V
40	C1, C2, C68-C77	E-00586-0084	Capacitor, 820 PFD, 50V
41	C32	E-00586-0077	Capacitor, 3000 PF, 1 kv
43	Q5	E-00585-0023	Transistor PNP (MPS-3702)
44	Q1, Q2	E-00585-0031	Transistor (2N3904)
47	CR44	E-00587-0006	Diode (IN4004)
48	CR1-CR7, CR11-CR43, CR45-CR49	E-00587-0014	Diode (IN4148)
49	CR8	E-00679	LED (Green)
50	VR1	E-00598-0008	Diode Zener (8.2V, IN9598)
52	L1, L2	E-00604-0003	Inductor, 22 Micro Hy.
53	U12	E-00620-0004	Timer (555)
54	U19	E-00620-0005	Quad 2 Input (4011)
55	U9	E-00620-0028	MPU I.C. (6800)
56	U10, U11	E-00620-0029	PIA I.C. (6820)
57	U7	E-00620-0030	RAM I.C. (6810)
59	U20	E-00620-0032	HEX Buffer I.C. (14502B)
60	U14, U18	E-00620-0033	HEX Inverter (4049B)
61	U15	E-00620-0034	Quad Memory Drive (MC3459L)
62	U16	E-00620-0035	Dual Monostable (9602)
64	U17	E-00620-0041	Quad 2 Inputs (74L00N)
65	U8	E-00620-0042	RAM (C MOS, P5101L-3)
68	BT1, BT2, BT3	E-00628-0003	Battery
70	S33	E-00658-0001	Push Button Switch
71	S1-S8, S9-S16, S17-S24, S25-S32	E-00677	DIP Switch
73		E-00712	24 Pin Socket
74		E-00712-0001	40 Pin Socket
75		E-00712-0003	22 Pin Socket
77	J2	E-00715	15 Pin Wafer Connector
78	J1	E-00715-0004	28 Pin Wafer Connector
79	J3, J5	E-00715-0017	16 Pin Wafer Connector
80	J4	E-00715-0018	19 Pin Wafer Connector
81	J5	E-00715-0024	17 Pin Wafer Connector

NOTE 1:

When ordering, fill in dash number. For example, AS-2962-0: LOST WORLD, AS-2962-2: SIX MILLION DOLLAR MAN, AS-2962-3: PLAYBOY, AS-2962-4: VOLTAN, AS-2962-5: SUPERSONIC, AS-2962-6: STAR TREK, AS-2962-7: KISS, AS-2962-8: PARAGON, AS-2962-9: GROUND SHAKER, AS-2962-10: HARLEM GLOBETERS, AS-2962-12: DOLLY PARTON, AS-2962-13: SILVERBALL MANIA, AS-2962-18: MYSTIC, AS-2962-20: HOTDOGGIN, AS-2962-22: SKATEBALL, AS-2962-23: FRONTIER, AS-2962-21: XENON, AS-2962-24: FLASH GORDON, AS-2962-26: EIGHT BALL DELUXE, AS-2962-25: FIREBALL II, AS-2962-28: FATHOM, AS-2962-29: MEDUSA, AS-2962-30: CENTAUR, AS-2962-31: ELEKTRA, AS-2962-32 VECTOR, AS-2962-35 PAC-MAN.

NOTE 2: Order replacement memory chips U1-U6, specifying game, socket and part number stamped on chip.


AS-2518-23 LAMP DRIVER MODULE

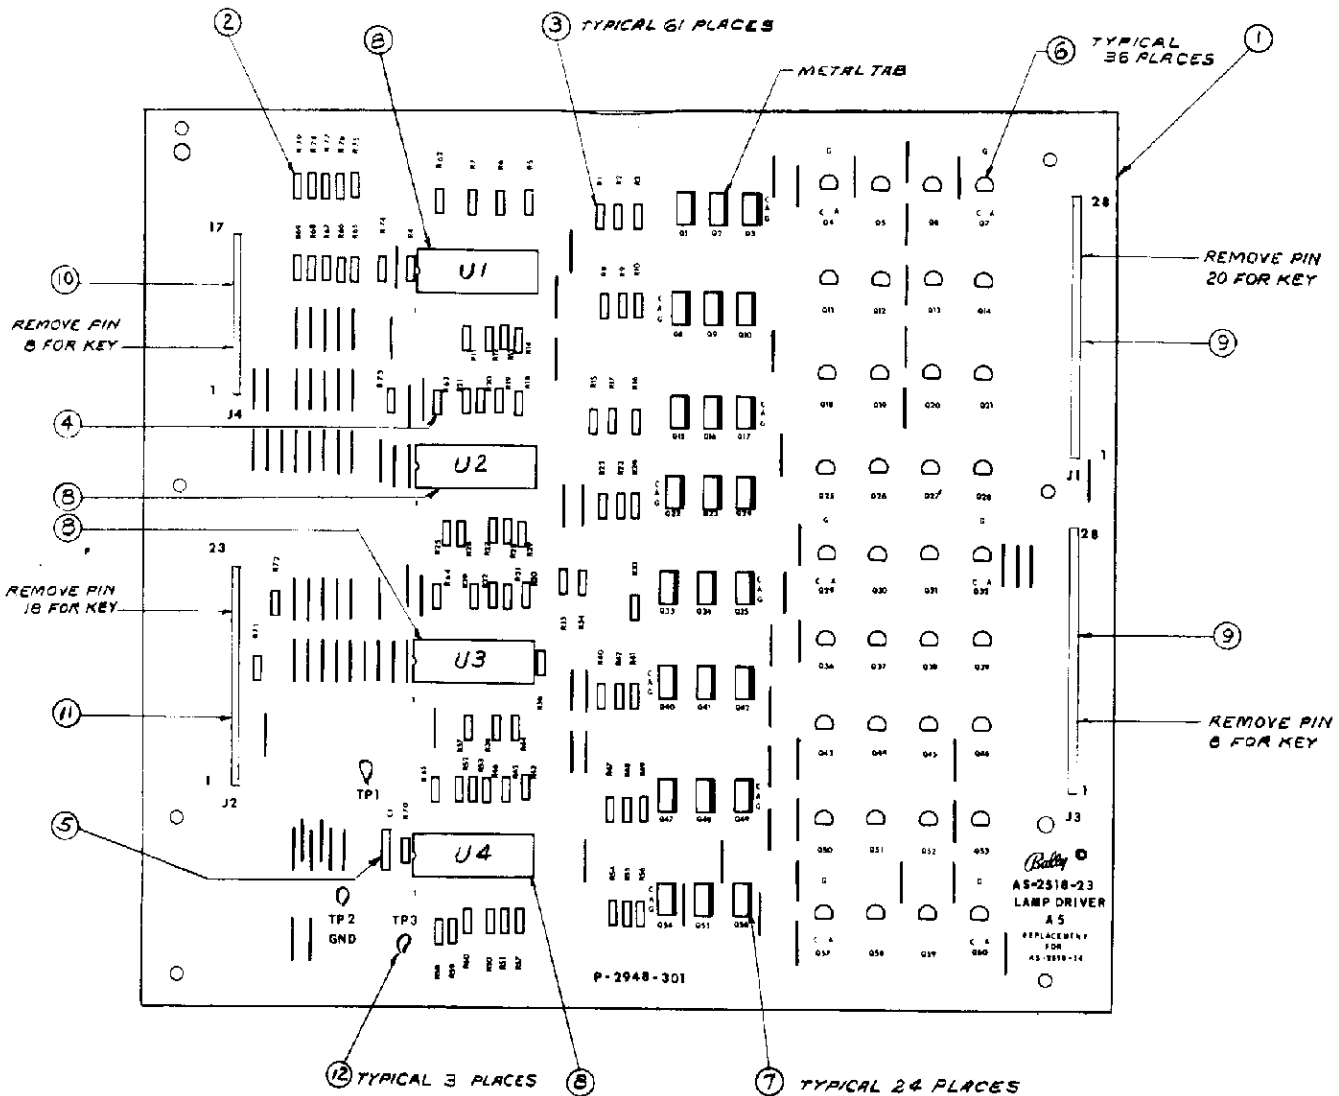

A5: LAMP DRIVER MODULE COMPONENT PARTS LIST

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	A5	AS-2518-23	Lamp Driver Module, Complete
2	R71-R79	E-00105-242	Resistor, 20k Ω , 5%, 1/4 W
3	R1-R60, R70	E-00105-0237	Resistor, 2k Ω , 5%, 1/4 W
4	R61-R69	E-00105-0256	Resistor, 2.2M Ω , 1/4 W
5	C1	E-00586-0065	Capacitor, .01 MFD, 500V
6	Q4-Q7, Q11-Q14, Q18-Q21, Q25-Q32, Q36-Q39, Q43-Q46, Q50-Q53, Q57-Q60	E-00585-0014	SCR, 2N5060
7	Q1-Q3, Q8-Q10, Q15-Q17, Q22-Q24, Q33-Q35, Q40-Q42, Q47-Q49, Q54-Q56	E-00585-0029	SCR, MCR106-1
8	U1-U4	E-00620-0037	I.C., Decoder, 14514B
9	J1, J3	E-00715-0004	28 Pin Wafer Connector
10	J4	E-00715-0024	17 Pin Wafer Connector
11	J2	E-00715-0014	23 Pin Wafer Connector
12	TP1, TP2, TP3	P-05399	Test Clip

AS-2518-21 CREDIT DISPLAY DRIVER MODULE

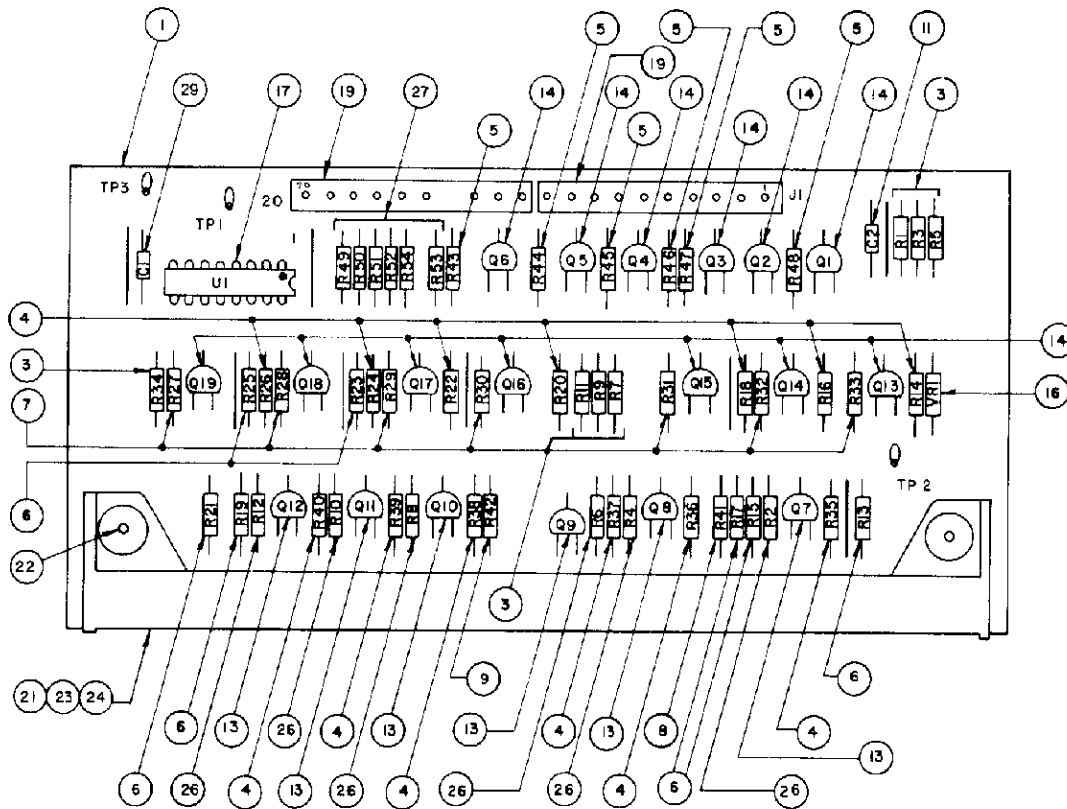


A1: 6 DIGIT DISPLAY DRIVER MODULE COMPONENT PARTS LIST

ITEM	QTY.	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	1	A1	AS-2518-21	6 Digit Display Driver, Complete
3	7	R1, R3, R5, R7, R9, R11, R34	E-105-331	Resistor, 100K Ω
4	13	R14, R16, R18, R20, R22, R24, R26, R35, R36, R37, R38, R39, R40	E-105-227	Resistor, 300K Ω
5	6	R43, R44, R45, R46, R47, R48	E-105-228	Resistor, 9.1K Ω
6	7	R13, R15, R17, R19, R21, R23, R25	E-105-229	Resistor, 1.5K Ω
7	7	R27, R28, R29, R30, R31, R32, R33	E-105-222	Resistor, 1.2K Ω
8	1	R41	E-105-231	Resistor, 39K Ω
9	1	R42	E-105-271	Resistor, 240K Ω
10				
11	1	C2	E-586-65	Capacitor, .01 MFD, 500V
13	6	Q7, Q8, Q9, Q10, Q11, Q12	E-585-32	Transistor (2N5401)
14	13	Q1, Q2, Q3, Q4, Q5, Q6, Q13, Q14, Q15, Q16, Q17, Q18, Q19	E-585-33	Transistor (MPS-A42)
16	1	VR1	E-598-7	Zener Diode, 110V
17	1	U1	E-620-38	I.C. Decoder
18				
19	2	J1	E-715-34	10 Pin Wafer Pin Connector
21	1	DS1	E-680	Digital Display Panel
22	2		M-1836	Hi-Lo Screw, W/H
23	1		P-2399	Display Mounting (Top)
24	1		P-2399-1	Display Mounting (Bottom)
26	6	R2, R4, R6, R8, R10, R12	E-105-287	Resistor, 2.2K Ω
27	6	R49, R50, R51, R52, R53, R54	E-105-242	Resistor, 20K Ω
28	As Req'd			Wire Jumper
29	1	C1	E-586-85	Capacitor, .01 MFD, 25V

NOTE: INTERCHANGEABLE WITH AS-2518-15

AS-2518-22 SOLENOID DRIVER/VOLTAGE REGULATOR MODULE

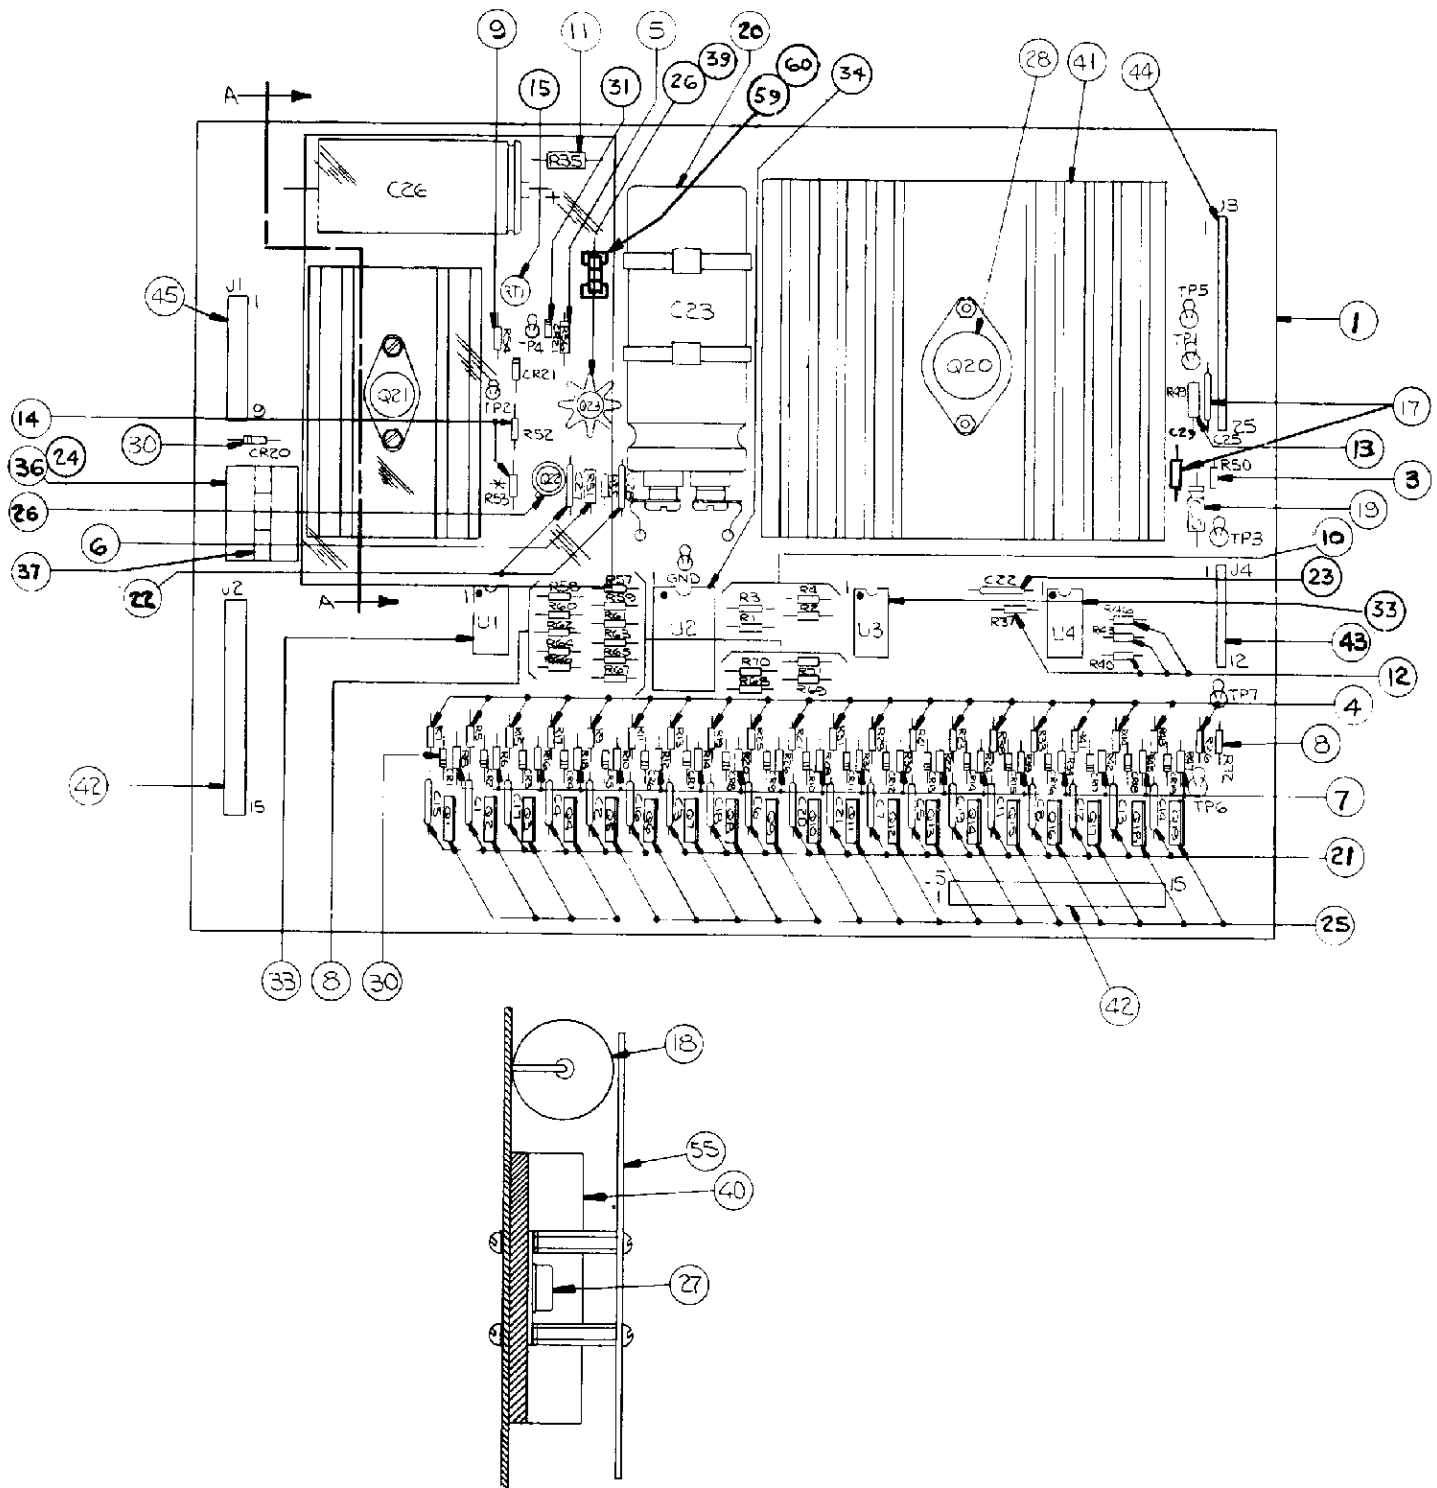

NOTE: INTERCHANGEABLE WITH AS-2518-16


A3: SOLENOID DRIVER/VOLTAGE REGULATOR MODULE

COMPONENT PARTS LIST

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	A3	AS-2518-22	Solenoid Driver/Voltage Regulator Module, Complete
3-14	Resistors		Resistor, See Schematic for value.
15	RT1	E-00599-0014	Pot. (Linear) 25K
17	C25, 29	E-00586-0014	Capacitor, .1 MFD, 20V
18	C26	E-00586-0059	Capacitor, 160 MFD, 350V
19	C24	E-00586-0063	Capacitor, 2 MFD @ 25V
20	C23	E-00586-0062	Capacitor, 11700 MFD, 20V
21	C1-C8, C11-C21	E-00586-0064	Capacitor, .002 MFD, 1kv
22	C27, C28	E-00586-0065	Capacitor, .01 MFD, 500V
24	K1	E-00146-0795	Relay, Printed Circuit
25	Q1-Q19	E-00585-0034	Transistor, SE9302
26	Q22, Q23	E-00585-0041	Transistor, 2N3440
27	Q21	E-00585-0042	Transistor, 2N3584
28	Q20	E-00710	+5V Regulator, LAS1405 or 78H05KC or LM323K
30	CR1-CR21	E-00587-0015	Diode (IN4004)
31	VR1	E-00598-0010	Diode, Zener 140V, IN5275A
33	U1, U3, U4	E-00681	I.C. Transistor Array, CA3081
34	U2	E-00620-0039	I.C. Binary to 1/16 Decoder, 74L154
36		E-00592-0002*	Relay Socket
37		M-1839*	Relay Holder
39		E-00682	Heat Sink, TO5
40		E-00682-0001	Heat Sink, TO66
41		E-00682-0002	Heat Sink, TO3 Case
42		E-00715-0039	15 Pin Wafer Connector
43		E-00715-0016	12 Pin Wafer Connector
44		E-00715-0020	25 Pin Wafer Connector
45		E-00715-0033	9 Pin Wafer Connector
55		M-1838	Shield-Plexiglass
59		E-00148-0021	Fuse Clips
60	F1	E-00133-0029	Fuse 8 AG-3/16 Amp.
23	C22	E-00586-0085	Capacitor, .01 MFD, 25V

*USED WITH ITEM 24, E-00146-0791, PLUG IN RELAY ONLY


A2: POWER TRANSFORMER MODULE

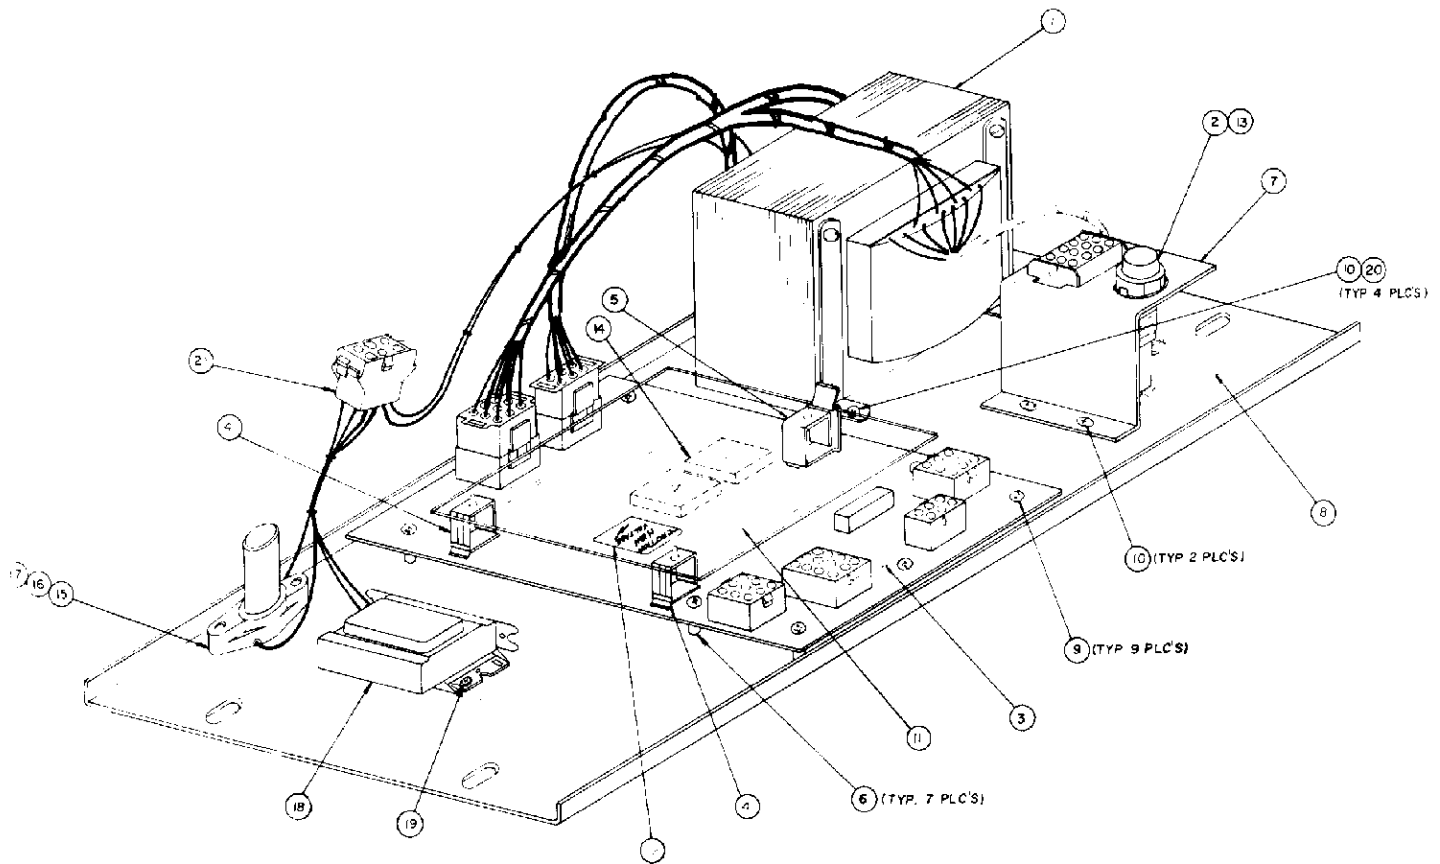

COMPONENT PARTS LIST

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
0	A2	AS-2877-9	Power Transformer Module, Complete
1		AS-3071-7	Transformer
2		E-148-25	Fuse Holder
3	A2	AS-2518-54	Power Module Assy.
4		M-1829-4	Hinged Support
5		M-1829-3	Edge Holder
6		M-1829-5	Spacer
7		P-6442-244b	Fuse & Connect Brkt.
8		P-6442-312	Chassis
9		RLPP-832-1114	Screw
10		RLPP-1032-1806	Screw
11		P-2692-2	Shield
12		M-469-936a	High Voltage Sticker
13		E-133-24	3A S.B. Fuse
14		M-1834	H. S. Compound
15		E-120-120	Socket
16		E-411-7	Starter
17		RLPP-832-1804	Screw
18		E-409-1	Ballast
19		RLPP-632-1804	Screw
20		PW-10-12	Washer
21		E804-6	Connector

AS-2518-54 RECTIFIER BOARD ASSEMBLY

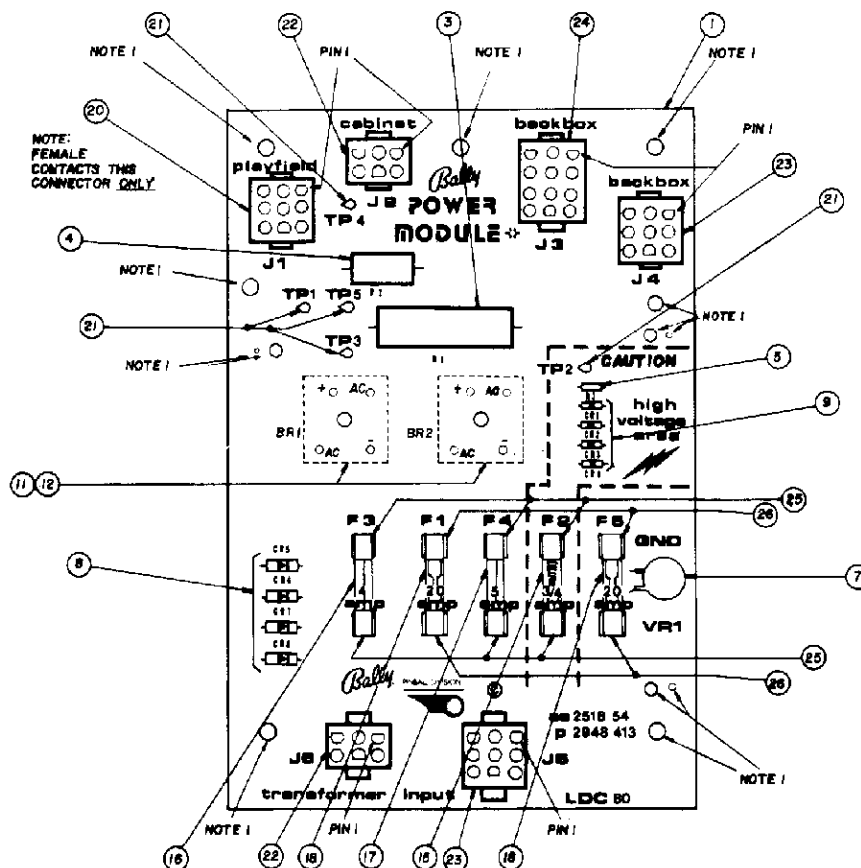


**(Part of) A2: POWER TRANSFORMER MODULE
COMPONENT PARTS LIST**

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
0	A2	AS-2877-9	Power Transformer Module, Complete
1	P/O A2	AS-2518-54	Rectifier Board Assembly, Complete
3	R1	E-00104-0092	Resistor, 10%, 600 Ohm, 10W
4	R2	E-00104-0091	Resistor, 25 Ohm, 5W
5	R3	E-00105-0226	Resistor, 5%, 100K Ohm, 1/4W
7	VR1	E-00623	Varistor
8	CR5, CR6, CR7, CR8	E-00587-0022	3A Diode
9	CR1, CR2, CR3, CR4	E-00587-0015	Diode (IN4004)
10			
11	Used with BR1-2	P-1973-480	Spacer
12	BR1, BR2	E-00602-0007	Bridge Rectifier
15	F2	E-00133-0028	Fuse, 3/4A, 250V, 3AG
16	F3	E-00133-0004	Fuse, 4A, 32V, 3AG
17	F4 NOTE 1	E-00133-0005	Fuse 5A, 32V, 3AG
18	F1, F5	E-00133-0027	Fuse, 20A, 32V, 3AG
19			
20	J1	E-806-9	9 CKT Socket Header
21	TP1, 2, 3, 4, 5	P-05399	Test Clip
22	J2, J6	E-805-6	6 CKT Pin Header
23	J4, J5	E-805-9	9 CKT Pin Header
24	J3	E-805-12	12 CKT Pin Header
25	F2, 3, 4	E-00148-0021	Fuse Clips
26	F1, 5	E-00148-0022	Fuse Clips (Low Resistance)

NOTE 1—All games with 4 or more flippers use 7A

AS 2518-61B SQUAWK & TALK MODULE

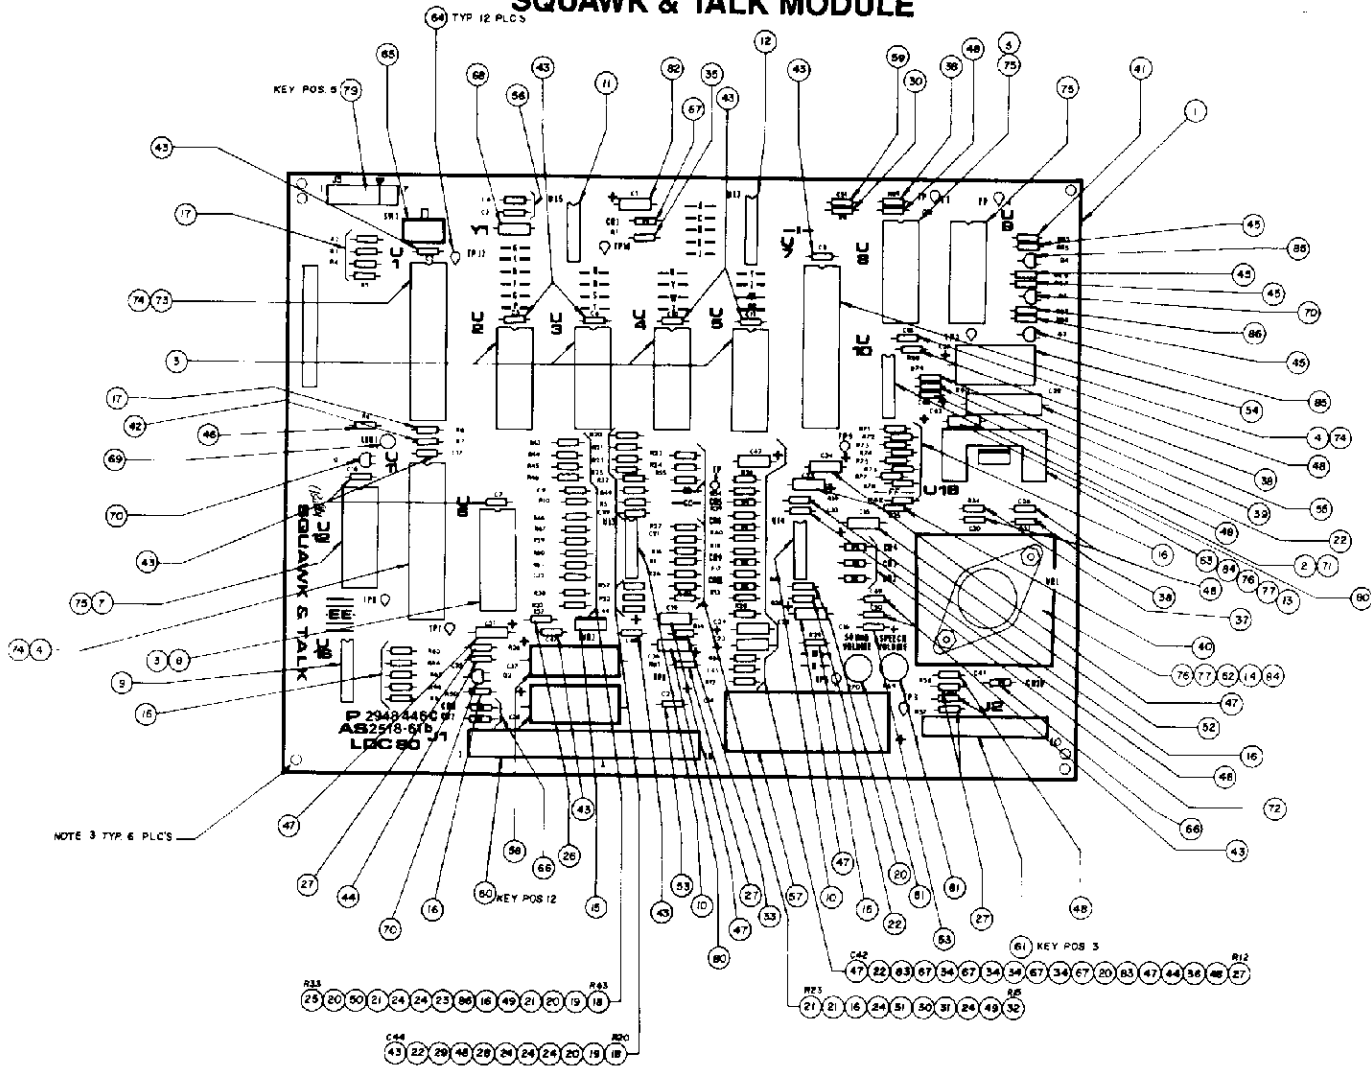


ITEM	QTY.	REFERENCE DESIGNATION	DESCRIPTION	BALLY PART #
1	1	A14	AS-2518-61 B	Squawk & Talk Module, Complete
2	1	U10	AD 558 DAC	E-620-171
3	5	Used with U2 thru U6	24 Pin I.C. Socket	E-712
4	2	U7, U11	6821 P.I.A.	E-620-29
5	1	U8	Tms 5200 Speech	E-620-167
7	1	U12	AY3-8912 Sound	E-620-166
8	1	U6	6810 RAM (SEE NOTE 1)	E-620-30
9	1	U16	4049 Hex Inverter	E-620-33
10	2	U13, U14	LM 3900	E-620-126
11	1	U15	74LS14 Schmidt Inverter	E-620-169
12	1	U17	74LS155	E-620-168
13	1	U18	TDA 2002 Power Amp	E-620-127
14	1	VR1	LM323, 5V Regulator	E-710
15	1	VR2	7905, -5V Regulator	E-620-165
16	19	R10, 19, 29, 42, 50, 63-67, 71-78, 55	Resistor, 1/4W, 10K	E-105-185
17	5	R2-5,8	Resistor, 1/4W, 5%, 3.3K	E-105-238
18	2	R20, 43	Resistor, 1/4W, 5%, 820K	E-105-343
19	2	R21, 44	Resistor, 1/4W, 5%, 390K	E-105-310
20	5	R13, 22, 38, 41, 45	Resistor, 1/4W, 200K	E-105-225
21	4	R23, 24, 46, 61	Resistor, 1/4W, 5% 100K	E-105-226
22	4	R30, 53, 56, 80	Resistor, 1/4W, 5% 2K	E-105-237
23	1	R47	Resistor, 1/4W, 5%, 2.7K	E-105-151
24	7	R25, 26, 27, 32, 49, 59, 60	Resistor, 1/4W, 5% 1m	E-105-285
25	1	R33	Resistor, 1/4W, 5%, 91K	E-105-313

**SQUAWK & TALK MODULE
AS 2518-61B**

COMPONENTS PARTS LIST

ITEM	QTY.	REFERENCE DESIGNATION	DESCRIPTION	BALLY PART #
26	1	R37	Resistor, 1/4W, 5%, 30K	E-105-245
27	5	R12, 36, 57, 58, 81	Resistor, 1/4W, 5%, 1K	E-105-230
28	1	R51	Resistor, 1/4W, 5%, 750K	E-105-344
29	1	R52	Resistor, 1/4W, 5%, 9.1K	E-105-228
30	2	R9, 16	Resistor, 1/4W, 5%, 130K	E-105-203
31	1	R11	Resistor, 1/4W, 5%, 150K	E-105-248
32	1	R15	Resistor, 1/4W, 5%, 220K	E-105-161
33	1	R14	Resistor, 1/4W, 5%, 1.8K	E-105-346
34	4	R17, 18, 39, 40	Resistor, 1/4W, 5%, 910K	E-105-347
35	1	R1	Resistor, 1/4W, 5%, 27K	E-105-243
36	1	R68	Resistor, 1/4W, 5%, 510 Ω	E-105-311
37	1	R34	Resistor, 1/4W, 5%, 2.2 Ω	E-105-211
38	3	R31, 88, 89	Resistor, 1/4W, 5%, 220 Ω	E-105-303
39	1	R79	Resistor, 1/4W, 5%, 7.5K	E-105-345
40	1	R35	Resistor, 1/4W, 5%, 1 Ω	E-105-196
41	1	R83	Resistor, 1/4W, 5%, 11K	E-105-360
42	1	R7	Resistor, 1/4W, 5%, 8.2K	E-105-223
43	14	C2, 5-8, 10, 11, 17, 18, 44, 47-50	Capacitor, Ceramic, .01μF, 25V	E-586-85
44	2	C23, 35	Capacitor, Ceramic, .47μF, 16V	E-586-130
45	4	R84-87	Resistor, 1/4W, 5%, 2.2K	E-105-287
46	1	R6	Resistor, 1/4W, 470Ω	E-105-342
47	7	C19, 24, 25, 28, 31, 34, 42	Capacitor, Electrolytic, 1μF, 25V	E-586-90
48	10	C12, 13, 26, 30, 33, 39, 40, 41, 45, 46	Capacitor, Ceramic, .1μF, 25V	E-586-89
49	2	C9, 20	Capacitor, Ceramic, 470pF, 50V	E-586-83
50	1	C32	Capacitor, Ceramic, 68pF	E-586-120
51	1	C21	Capacitor, Ceramic, 100pF	E-586-68
52	1	C15	Capacitor, Electrolytic, 10μF, 16V	E-586-135
53	2	C16, 22	Capacitor, Tantalum, 4.7μF, 25V	E-586-73
54	1	C27	Capacitor, Electrolytic, 1000μF, 16V	E-586-136
55	1	C29	Capacitor, Electrolytic, 470μF, 6V	E-586-124
56	2	C3, 4	Capacitor, Ceramic, 27pF	E-586-121
57	1	C14	Capacitor, Electrolytic, 4700μF, 25V	E-586-123
58	2	C37, 38	Capacitor, Electrolytic, 330μF, 50V	E-586-147
59	1	C51	Capacitor, Monolithic, 10pF	E-586-150
60	1	J1	18 Pin Wafer Connector (156)	E-736-18
61	1	J2	10 Pin Wafer Connector (156)	E-736-10
62	1	Used with VR1	Heatsink, 6053B	E-682-11
63	1	Used with U18	Heatsink, 6030B	E-682-8
64	12		Test Points	P-5399
65	1	SW. 1	P.C.B. Switch	E-658-1
66	3	CR7, 8, 10	Diode (IN4004)	E-587-15
67	5	CR1, 5, 6, 9, 11	Diode (IN4148)	E-587-14
68	1	Y1	Crystal, 3.579	E-744-5
69	1	LED1	LED	E-679
70	3	Q1-2, 5	Transistor, 2N3904	E-585-31
71	1	Used with U10	Socket I.C. 16 Pin	E-712-16
72	3	CR2-4	Diode, 3A, 50V. min.	E-587-24
73	1	U1	6808 or 6802 (SEE NOTE 1) Microprocessor	E-620-125 or 128
74	3	Used with U1, 7, 11	Socket, I.C. 40 Pin	E-712-1
75	3	Used with U8, 9, 12	Socket, I.C. 28 Pin	E-712-28
76	3	Used with U18, VR1	Screw	LSPR-00632-1106
77	3	Used with U18, VR1	Nut	N-00632-2112
78				
79		J3	Header, 7 Pin	E-766-7
80	2	C36, 43	Capacitor, 2μF, 25V	E-586-63
81	2	R69, 70	Pot. 1K	E-599-16
82	1	C1	Capacitor, Electrolytic, 47μF	E-586-148
83	2	R28, 54	Resistor, 82K	E-105-341
84	AR	Used with U18, VR1	Thermal Compound	M-1834
85	2	Q3, 4	Transistor, 2N4403	E-585-23
86	2	R82, 48	Resistor, 1/4W, 5%, 2.4K	E-105-312
			JUMPERS—SEE NOTES	


AS-2518-52 AUXILIARY LAMP DRIVER

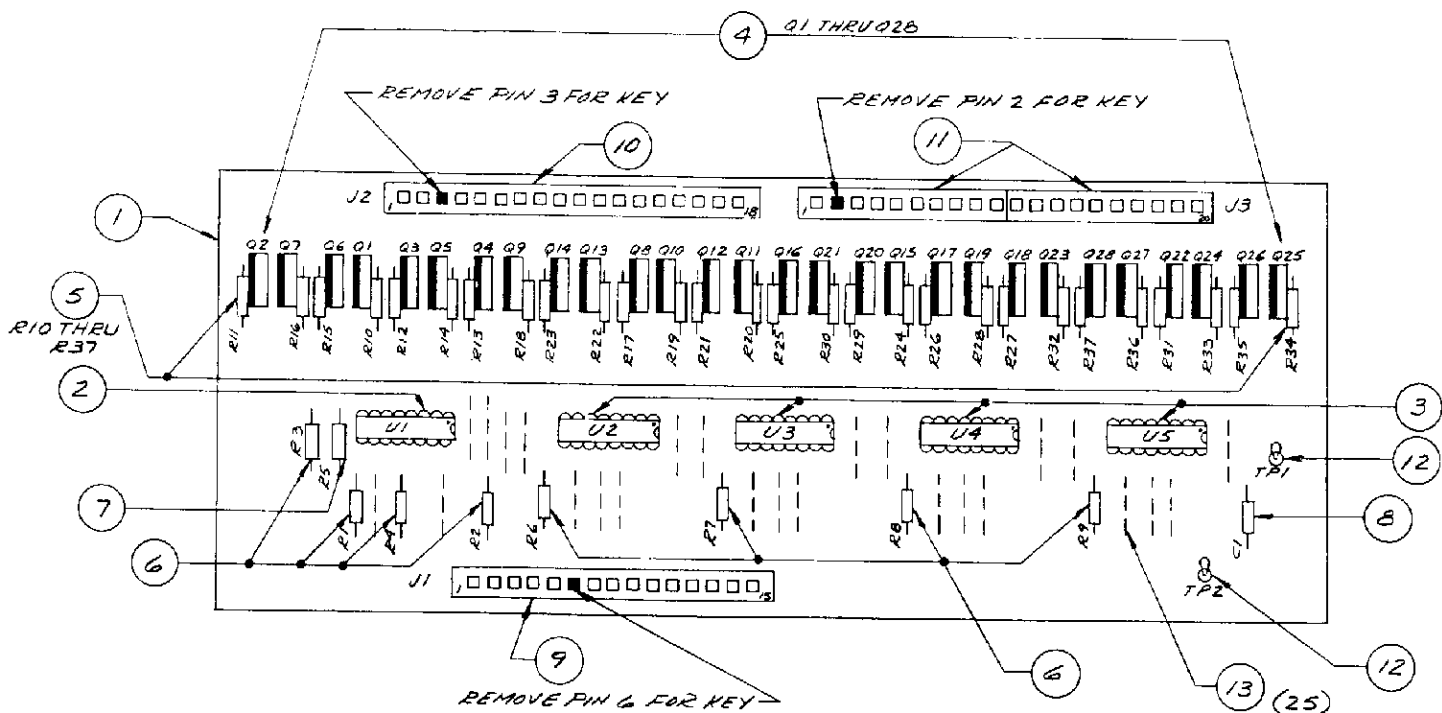

A9: AUXILIARY LAMP DRIVER COMPONENT PARTS LIST


ITEM	QTY.	REFERENCE DESIGNATION	BALLY PART NO.	DESCRIPTION
1	1	A9	AS-2518-52	Auxiliary Lamp Driver, Complete
2	1	U1	E-620-134	Quad Flip Flop
3	4	U2 Thru U5	E-620-108	BCD to Decimal Decoder
4	28	Q1 Thru Q28	E-585-29	S. C. R.
5	28	R10 Thru R37	E-105-237	Resistor, 2K Ω , 1/4 W, 5%
6	8	R1-4, R6-9	E-105-242	Resistor, 20K Ω , 1/4 W, 5%
7	1	R5	E-105-173	Resistor, 2.2M, 1/4 W, 5%
8	1	C1	E-586-85	Capacitor, .01 μ f, 25V, \pm 20 %
9	1	J1	E-736-15	Connector, KK156 5 Pin
10	1	J2	E-736-18	Connector, KK156 18 Pin
11	2	J3	E-736-10	Connector, KK156 10 Pin
12	2	TP1, TP2	P-5399	Test Point
13	25		M-1777-126	Jumper

A15: SOLENOID EXPANDER ASSEMBLY
AS-2518-66

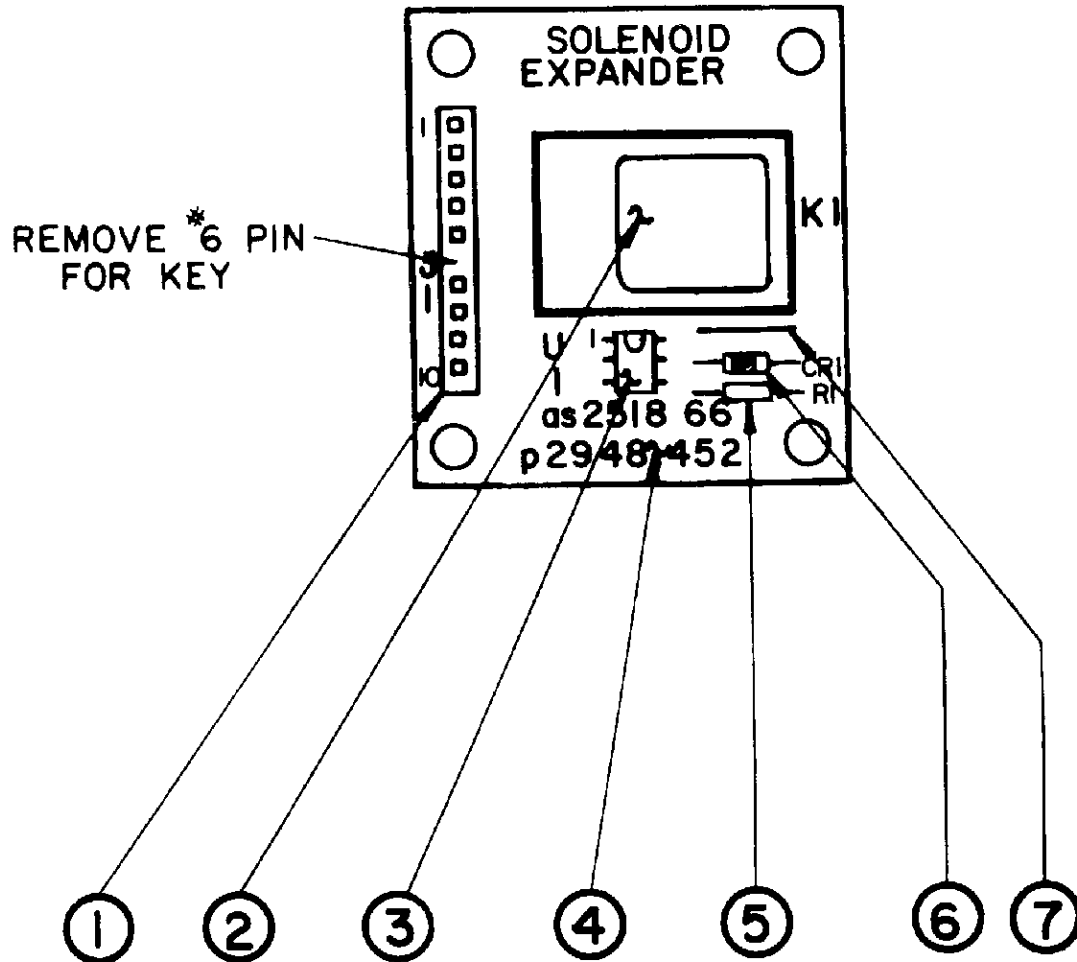

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	J1	E-736-10	10 Pin 'Molex' KK156
2	K1	E-146-795	48 V. Relay
3	U1	E-620-172	MOC 3011
4	P-2948-452	M-645-585	P.C. Board
5	R1	E-105-219	330 Ohm Resistor
6	CR1	E-587-15	IN4004 Diode
7		Jumper	AWG. 22 1½"
Ref.		W-1251	Schematic

AS-2518-58 DISPLAY DRIVER MODULE

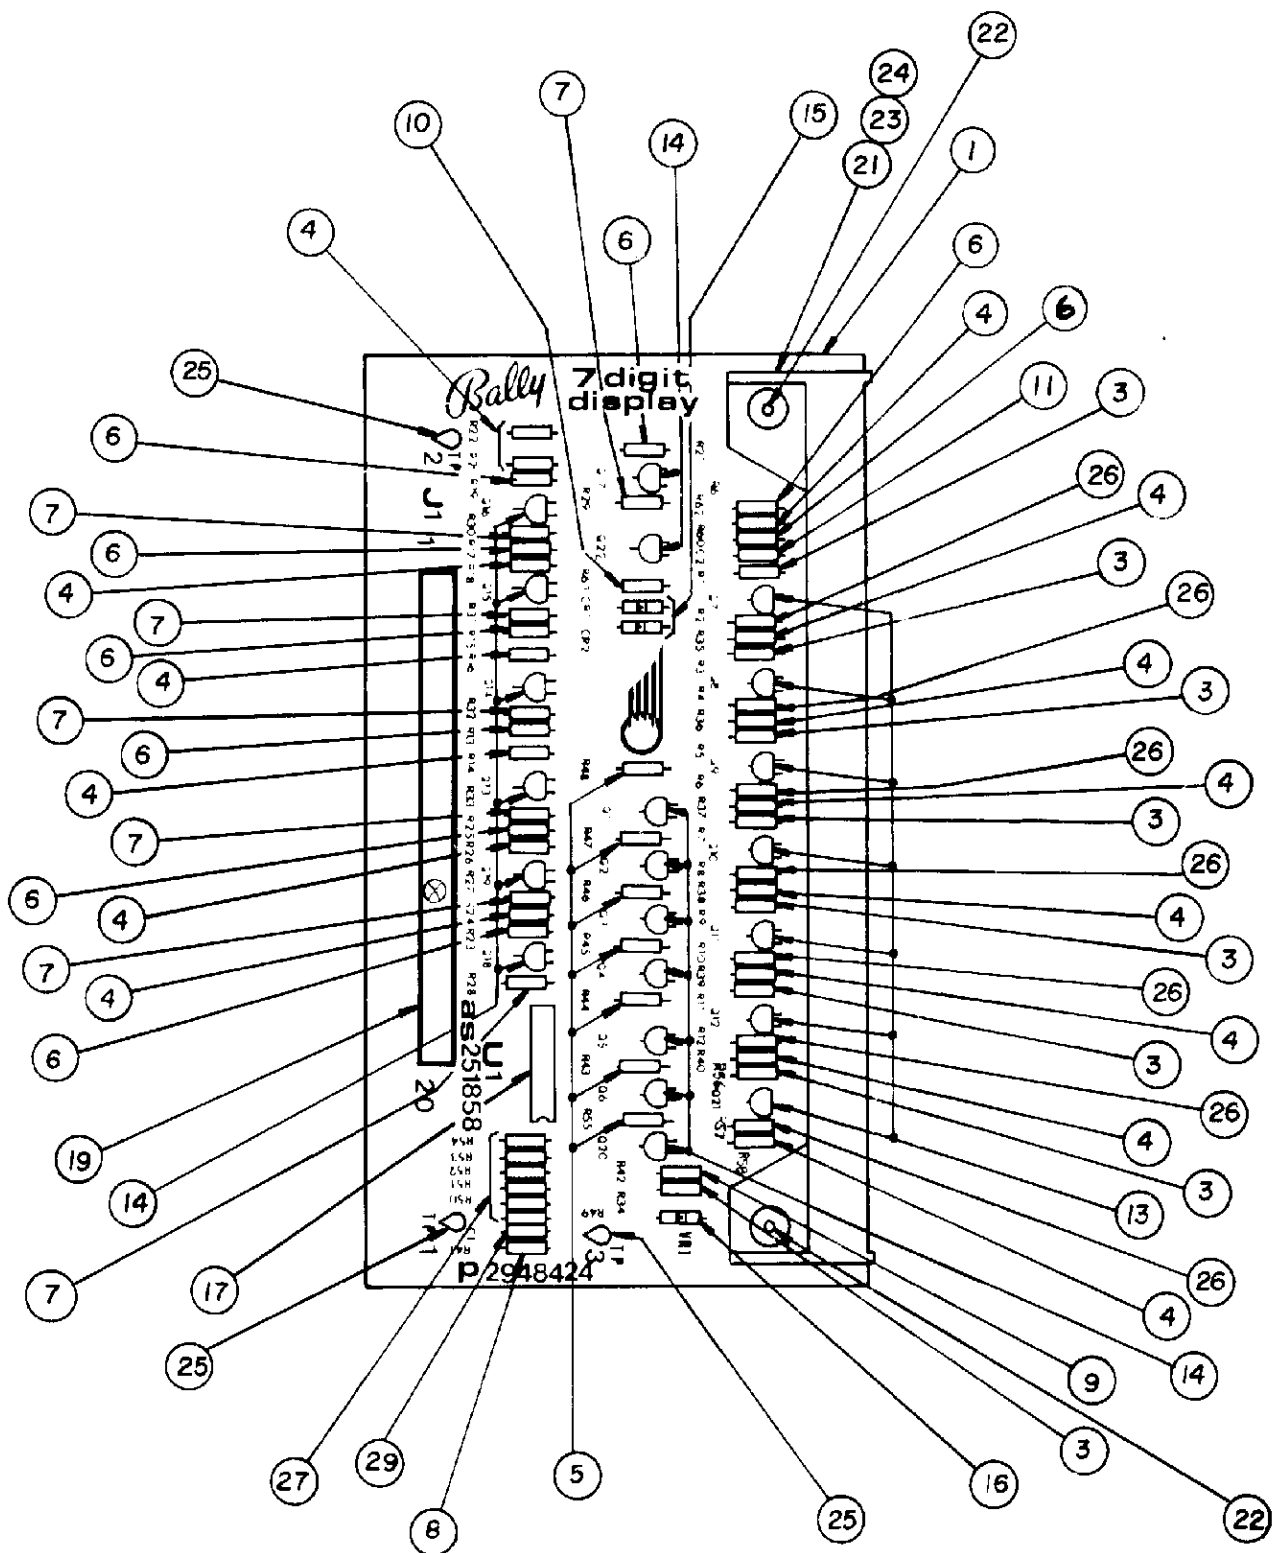


A1: 7 DIGIT DISPLAY DRIVER MODULE

COMPONENTS PARTS LIST

ITEM	QTY.	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	1	A1	AS-2518-58	7 Digit Display Driver, Complete
3	8	R1, R3, R5, R7, R9, R11, R34, R56	E-105-331	Resistor, 100K Ω
4	15	R14, R16, R18, R20, R22, R24, R26, R35, R36, R37, R38, R39, R40, R58, R62	E-105-227	Resistor, 300K Ω
5	7	R43, R44, R45, R46, R47, R48, R55	E-105-228	Resistor, 9.1K Ω
6	9	R13, R15, R17, R19, R21, R23, R25, R61, R60	E-105-229	Resistor, 1.5K Ω
7	7	R27, R28, R29, R30, R31, R32, R33	E-105-222	Resistor, 1.2K Ω
8	1	R41	E-105-231	Resistor, 39K Ω
9	1	R42	E-105-271	Resistor, 240K Ω
10	1	R63	E-105-248	Resistor, 150K Ω
11	1	C2	E-586-65	Capacitor, .01 MFD, 500V
13	7	Q7, Q8, Q9, Q10, Q11, Q12, Q21	E-585-32	Transistor (2N5401)
14	15	Q1, Q2, Q3, Q4, Q5, Q6, Q13, Q14, Q15, Q16, Q17, Q18, Q19, Q20, Q22	E-585-33	Transistor (MPS-A42)
15	2	CR1-2	E-587-14	Diode (IN4148)
16	1	VR1	E-598-7	Zener Diode, 110V (IN3045A)
17	1	U1	E-620-38	I.C. Decoder (MC14543)
18				
19	2	J1	E-736-10	10 Pin Wafer Pin Connector (KK-156)
21	1	DS1	E-680-7	7 Digital Display Panel
22	2		M-1836	Hi-Lo Screw, W/H
23	1		P-2399	Display Mounting (Top)
24	1		P-2399-1	Display Mounting (Bottom)
25	3	TP1-3	P-5399	Test Clip
26	7	R2, R4, R6, R8, R10, R12, R57	E-105-287	Resistor, 2.2K Ω
27	6	R49, R50, R51, R52, R53, R54	E-105-242	Resistor, 20K Ω
28				
29	1	C1	E-586-85	Capacitor, .01 MFD, 25V


**A17 Auxilliary Driver—G.I. Flasher
AS-2518-68**

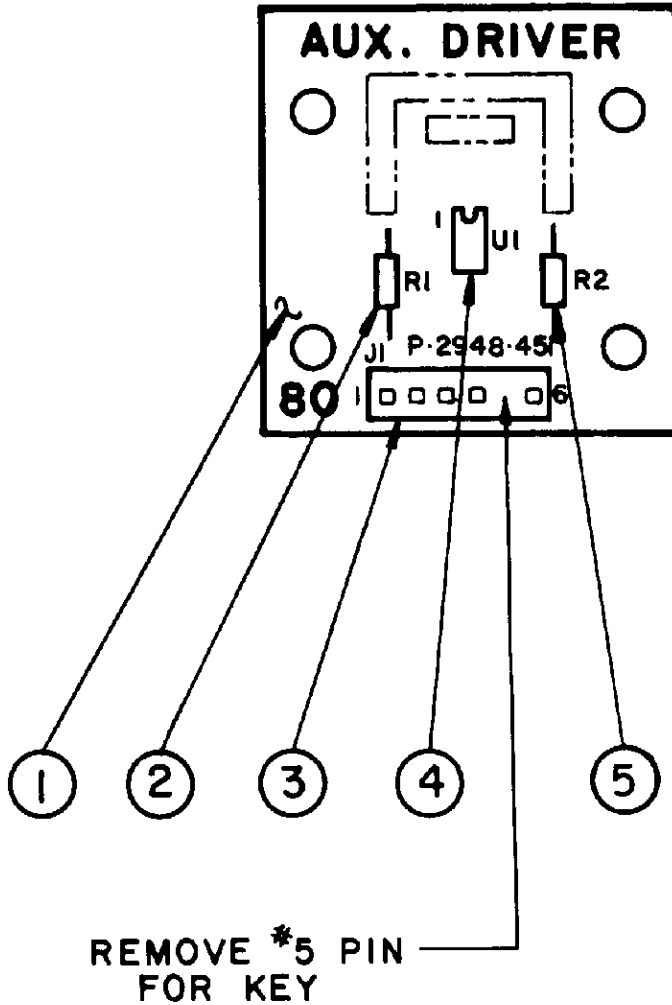

COMPONENTS PARTS LIST

ITEM	QTY.	REFERENCE DESIGNATION	DESCRIPTION	BALLY PART #
1	1	P-2948-451	P.C. Board	M-645-584
2	1	R1	330 Ω , 5% 1/4W.	E-105-219
3	1	J1	6 Pin Wafer—KK156	E-736-6
4	1	U1	OPT./CP, MOC 3011	E-620-172
5	1	R2	10 Ω , 5%, 1/4W.	E-105-306
REF.			Schematic	W-1253 b

PAC LITE MATRIX
AS-2518-98

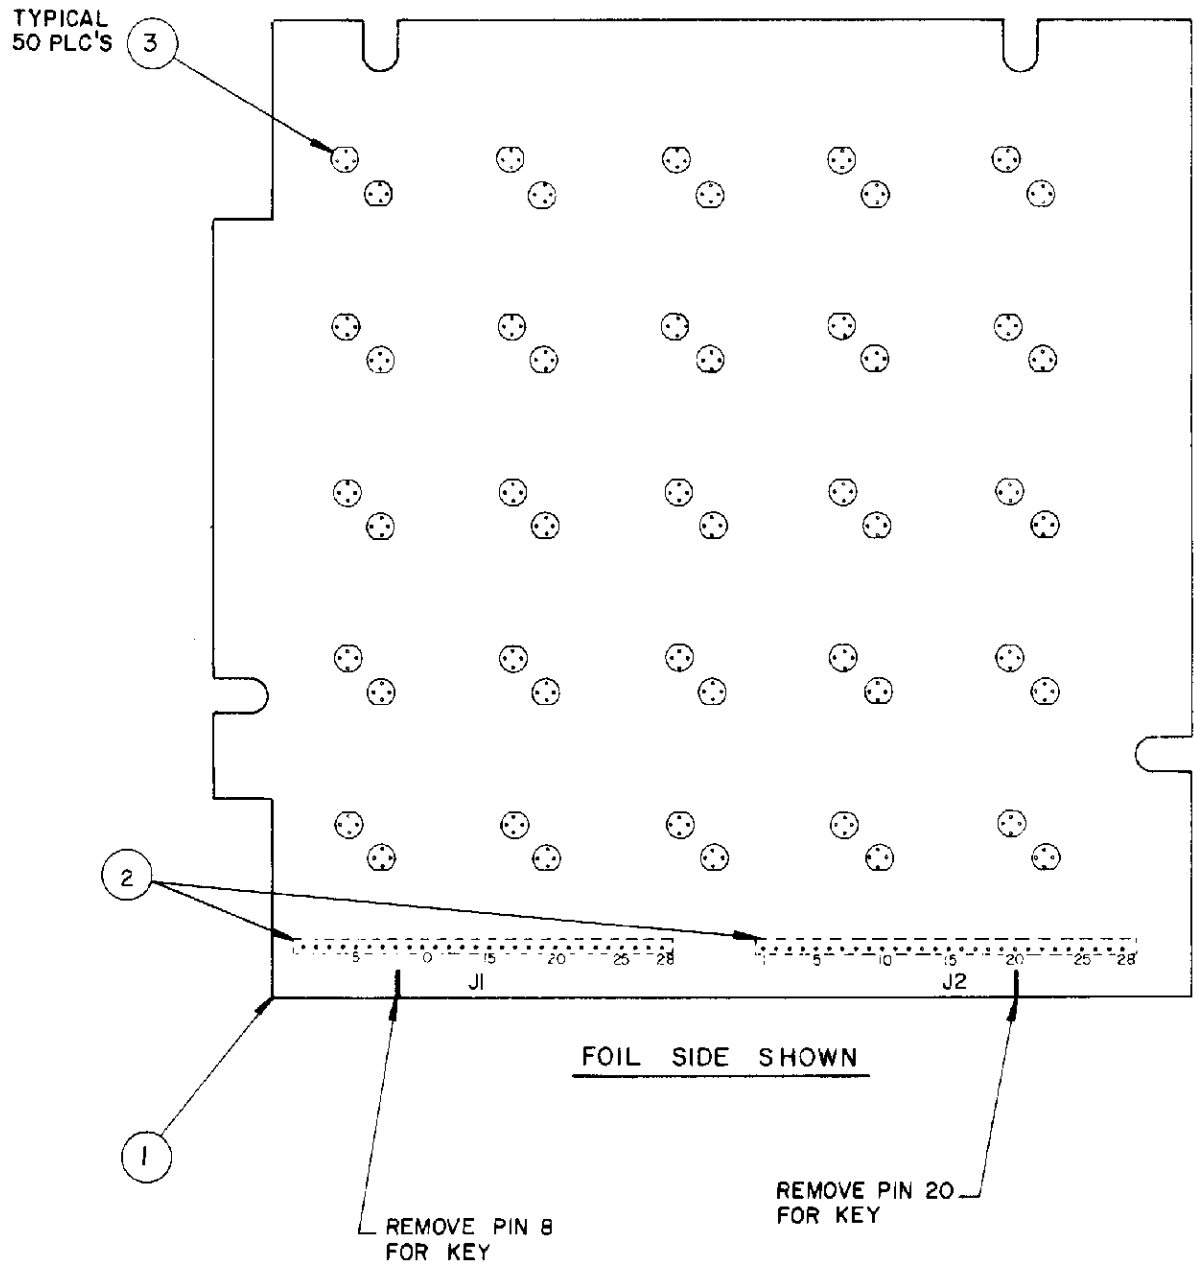

ITEM	DESIGNATION	BALLY PART #	DESCRIPTION
1	M-645-662	P-2948-511	P.C.B. BOARD
2	J1, J2	E-766-28	28 PIN CONNECTOR
3	I-25	E-120-214	PAC BULB SOCKET